



User Manual

Solar-Log™

Solare Datensysteme GmbH
Fuhrmannstr. 9
72351 Geislingen-Binsdorf
Germany

International support
Tel.: +49 7428 9418 -640
Fax: +49 7428 9418 -280

e-mail: support@solar-log.com

Italy
Technical support: +39 0471 631032
e-mail: italy-support@solar-log.com

France
Technical support: +33 97 7909708
e-mail: france-support@solar-log.com

Switzerland
Technical support: +41 565 355346
e-mail: switzerland-fl-support@solar-log.com

Holland
Technical support: +31 85 888 1110
e-mail: benelux-support@solar-log.com

Belgium
Technical support: +32 553 03670
e-mail: benelux-support@solar-log.com

United States
Technical support: +1 203 702 7189
e-mail: usa-support@solar-log.com

Australia & New Zealand
Technical support: +61 1300 79 20 01
e-mail: australia@solar-log.com

Table of Contents

1	General Information.....	7
1.1	The necessary steps for precision monitoring of your PV plant with the Solar-Log™	7
2	Operating via a web browser within your own network.....	8
2.1	Requirements.....	8
2.2	Overview.....	9
2.2.1	General Navigation.....	9
2.3	Accessing the Start page.....	12
2.4	Accessing Yield Data	13
2.4.1	Current values	13
2.5	Production	14
2.5.1	Day view	15
2.5.2	Month view	17
2.5.3	Year view	19
2.5.4	Total view	20
2.6	Consumption.....	21
2.6.1	Day balance.....	26
2.6.2	Month balance.....	27
2.6.3	Year balance.....	28
2.6.4	Total balance.....	29
2.7	Finances.....	30
2.8	Sensor.....	31
2.9	System Information	32
2.10	Accessing Diagnostic values.....	33
2.10.1	Inverter diagnostic.....	33
2.10.2	Accessing Event logs.....	37
2.10.3	Accessing Notifications	38
2.10.4	Accessing Feed-In Management.....	40
2.10.5	Accessing the SCB Monitor (only Solar-Log 2000)	44
2.10.6	Accessing components.....	45
2.10.7	Accessing CSV Export.....	48
2.10.8	Accessing Support.....	49
3	Notifications	50
3.1	Yield E-mail.....	50
3.1.1	Explanation of the individual E-mail Functions:.....	52
3.2	Performance Monitoring.....	56
3.2.1	Performance Monitoring Notification.....	58
3.2.2	Calculation and Explanation of the Notification	59

4	Operating the Solar-Log 1200 and 2000 via Touch Display	60
4.1	Navigating from the touch screen.....	60
4.2	Accessing the Dashboard	62
4.3	Accessing the Energy Balance.....	63
4.4	Accessing Forecast.....	64
4.5	Accessing Yield history	65
4.6	Accessing Environmental performance.....	65
4.7	Accessing the USB menu	67
5	Operating the Solar-Log 500 and 1000 via the Display	69
5.1	Display Solar-Log 500	69
5.2	Display Solar-Log 1000	70
5.3	How to Navigate with the Touchscreen	70
5.4	Accessing Yield data.....	71
5.4.1	How to navigate between different overviews	71
5.4.2	The meaning of the values in the overviews	72
5.4.3	Daily Graph	73
5.4.4	Monthly Graph.....	74
5.4.5	Yearly Graph.....	75
5.4.6	Overall Graph.....	76
5.4.7	Large External Display	77
5.4.8	Power Balance.....	78
5.5	Accessing the Diagnosis.....	79
5.5.1	Accessing Notifications	79
5.5.2	Display the Inverter Events	80
5.5.3	Handling Alarm Notifications	81
5.5.4	Optimizing the consumption of self-produced power	82
5.6	Using Data Transfer with USB	83
5.6.1	Create a Backup	83
5.7	Changing settings in the configuration menu.....	87
6	Pac Correction Factor	88
6.7.1	Calculating the PAC correction factor	88
7	Using Solar-Log WEB	89
7.1	Registering for Solar-Log™ WEB "Classic 2nd Edition"	89
7.2	Accessing Plant data	92
7.3	Accessing Yield data.....	96
7.3.1	How to navigate between different overviews	96
7.3.2	The meaning of the values in the overviews	96
7.3.3	Daily Overview	97
7.3.4	Monthly Overview	98
7.3.5	Annual Overview	99
7.3.6	Total Overview.....	100
7.3.7	Accessing and filtering the Event log	101

8	Using the Solar-Log™ Android App	103
8.1	Installing the App.....	103
8.2	Add plants.....	104
8.3	Plant settings.....	105
8.3.1	SO meter	105
8.3.2	Administration	106
8.4	The Toolbar	107
8.5	Accessing Yield values	108
8.5.1	Daily Overview	109
8.5.2	Monthly Overview	109
8.5.3	Annual Overview	110
8.5.4	Total Overview.....	111
8.6	Viewing CO2 savings	112
8.7	App settings.....	113
8.7.1	Periodical data update.....	114
8.7.2	Reset	114
8.7.3	Slide show	115
8.7.4	Legal Disclaimer	116
8.8	The Yield Data as a Slide Show	116
8.9	Using the Android App with a Smartphone	117
8.9.1	Smartphone vertical format.....	117
8.9.2	Smartphone - horizontal format	118
8.9.3	Solar-Log™ Widget for Smartphones.....	119
9	Using the Solar-Log™ App iPhone V3 for iPhones	120
9.1	Installing the App.....	120
9.2	Add plants.....	121
9.3	Accessing Yield data.....	123
9.3.1	How to navigate between different overviews	123
9.4	The top menu bar.....	125
9.5	The bottom menu bar	126
9.5.1	Daily Overview	126
9.5.2	Monthly Overview	127
9.5.3	Annual Overview	128
9.5.4	Total Overview.....	129
9.6	Viewing CO2 savings	130
9.7	Viewing Plant data.....	131
9.8	The Yield Data as a Slide Show	133
9.8.1	Start the Slide Show	134
10	Cleaning and care.....	135
10.1	Cleaning tips	135
10.2	Care tips.....	135
11	Notifications on the LCD Status Display (Solar-Log 300, 1200 and	

	2000).....	136
11.1	Meaning of the symbols on the LCD display.....	136
12	Faults (Solar-Log 200, 500 and 1000).....	139
12.1	LED status display (Solar-Log 200, 500 and 1000)	139
12.2	Troubleshooting faults oneself.....	140
12.3	Obtaining information from the Internet	141
12.4	Informing a specialist technician.....	142
13	Disposal.....	143
14	Technical Data (Solar-Log 300, 1200 and 2000)	144
15	Technical Data (Solar-Log 200, 500 and 1000).....	150
16	List of figures	153

1 General Information

This user manual is intended to assist you in the operation of the Solar-Log™. The yield data from the Solar-Log™ can be displayed in several ways:

- via a web browser in a local network (LAN) (Chapter 2)
- via the display (touch screen: only Solar-Log 1000, 1200 and 2000) directly on the device (Chapter 4)
- via the Internet (Chapter 5) or
- with the Solar-Log™ App (Chapter 6 and 7)

Our product documentation is being constantly updated and expanded.

The current versions of the documents can be downloaded from our website:

www.solar-log.com.

The descriptions in this manual refer to firmware version 3.1.

Note:



Some of the descriptions contain screenshots with the LCD view in the top-left. The view is from the transfer of data from the LCD display on the Solar-Log™. The LCD on the device, however, is only available with the Solar-Log 300, 1200 and 2000.

1.1 The necessary steps for precision monitoring of your PV plant with the Solar-Log™

- Connecting and detecting inverters, refer to the "[Inverter Connection Manual](#)" and the "Configuring Connected Devices" chapter in the [Installation Manual](#).
- Configuring inverters, generator output, MPP Trackers and module fields, refer to the "Configuring Connected Devices" chapter in the [Installation Manual](#).
- For configuring the notification function and status messages from the inverter, refer to the "Configuring Notifications" chapter in the [Installation Manual](#).
- For activating and configuring performance monitoring, refer to the "Configuring Connected Devices" chapter in the [Installation Manual](#).

Note:



The Solar-Log needs a continuous supply of electricity to avoid data loss and to ensure precision monitoring of the PV plant

2 Operating via a web browser within your own network

2.1 Requirements

Information



For directly access, enter "solar-log" in the address bar of the web browser and create a bookmark.

In a local network (LAN)

To operate the Solar-Log™ via a web browser, you will need to be on a computer that is connected to the same local network (LAN). This computer will also need to have a modern web browser installed on it. The Solar-Log™ unit also has to be connected to this network with the proper network settings.

Via the Internet

In addition to a computer with a web browser, you need an active Internet connection as well as a user account on a server.

To set up a user account, please contact your installer or see our website for more information:

<http://www.solar-log.com/en/products-solutions/solar-log-web.html>

2.2 Overview

2.2.1 General Navigation

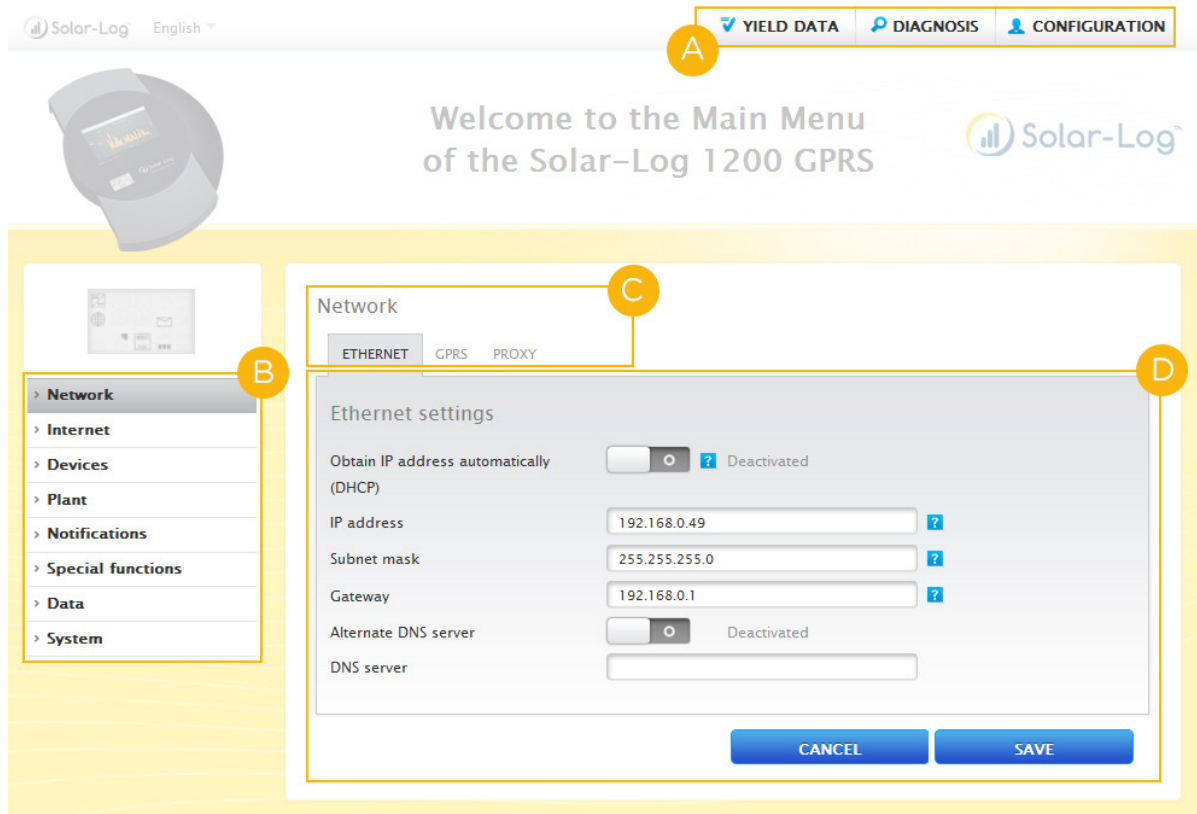


Fig.: Navigation designations

The start page contains the following sections:

- Header bar (A)
- Left navigation (B)
- Tabs (C)
- Configuration page (D)

Header bar

The header contains three major sections:

- **Yield data.** Here you will find your plant's yield overview within certain periods of time such as day, month, year and the total yield to date.
- **Diagnostic.** Here you can view the fault and process messages while filtering them according to specified criteria.
- **Configuration.** Here you can change the device settings as required.

Left-side navigation menu

Depending on the tab selected, you can access additional functions from the navigation menu (left-side).

Tabs

Additional configuration sections appear according to the function selected.

Configuration page

Here you can make necessary configurations for the optimal monitoring and evaluation of your plant. You can also view information on the power output, yields and the device.

Log in button

You can entered a password protected section by clicking on the log in button (at the bottom right corner of the screen) and entering your user and password. (Refer to the Access Control section for more information)

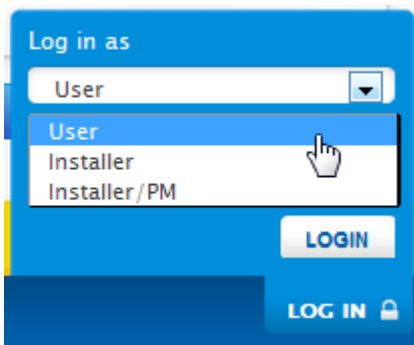


Fig.: Log in button with selection box

Hide arrow

The “Hide Arrow” (on the right of the header bar) allows you to increase the amount of the page displayed in the browser by hiding the Welcome header.



Fig.: Header bar with the “Hide Arrow”

Access control

Access protection for different parts of the Solar-Log™ can be configured in this menu. The following sections can be restricted with a pin code or password

- Access protection for the display
- Access protection for the browser menu
- Displaying advanced configuration

Access protection for the display (only Solar-Log 1000, 1200 and 2000)

A pin code can be activated to restrict access to the Solar-Log™'s display. The pin code may contain a maximum of 8 numerical digits.

Access at the display can be restricted for the entire display or just the settings section.

Procedure:

- Enter the **pin code**
- Enter the **pin code** again
- Select restricted **Sections**by checking them.
- **SAVE** settings

Access protection for the browser menu

In this section, the following parts of the Solar-Log™'s browser menu can be restricted with a password:

- User
General access to the [Browser](#) menu
- Installer
Access to the [Configuration](#) menu
- Feed-in management
Access to the [Configuration | Special Functions | Feed-in Management](#) menu

The default password for access to the Feed-in Management menu is PM. Access for users and installers is not restricted

Note



For directly access, enter "solar-log" in the address bar of the web browser and create a bookmark.

Procedure

- Activate the password restriction for the desired menus
- Enter a secure password for each of the menus
- Enter the password again
- [SAVE](#) settings

2.3 Accessing the Start page

Start your web browser and enter "solar-log" in the address bar of the web browser or select the bookmark in the browser's navigation bar. If there are several Solar-Log™ devices connected to the network, enter `http://solar-log-wxyz` in the address bar. Here "wxyz" stands for the last 4 digits of the serial number of the Solar-Log™.

- The welcome screen is displayed.

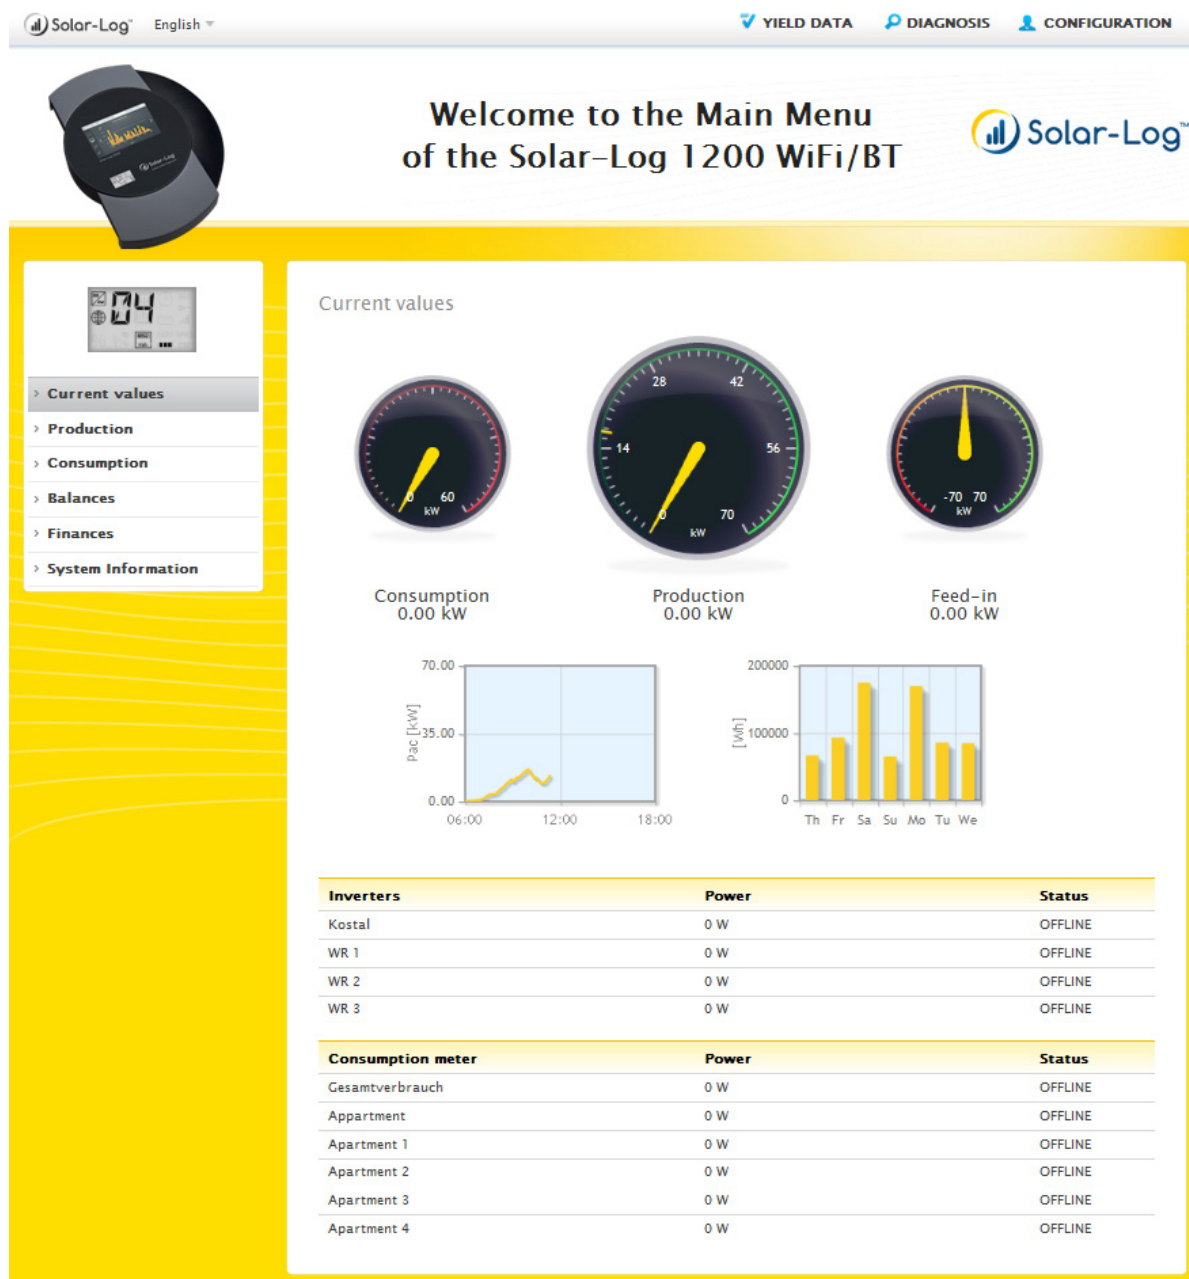


Fig.: Welcome screen

From the start page, the following navigation menu can be selected from the header bar.

- Yield data
- Diagnosis
- Configuration

2.4 Accessing Yield Data

Access the [yield data](#) from the [header bar](#).

The following options can be selected from the left-side navigation menu.

- Current values
- Production
- Consumption (only appears when a consumption meter is connected)
- Balances
- Finances
- Sensor (only appears when a sensor is connected)
- System Information

2.4.1 Current values

Select the [Current values](#) menu to see the plant's new Dashboard view.

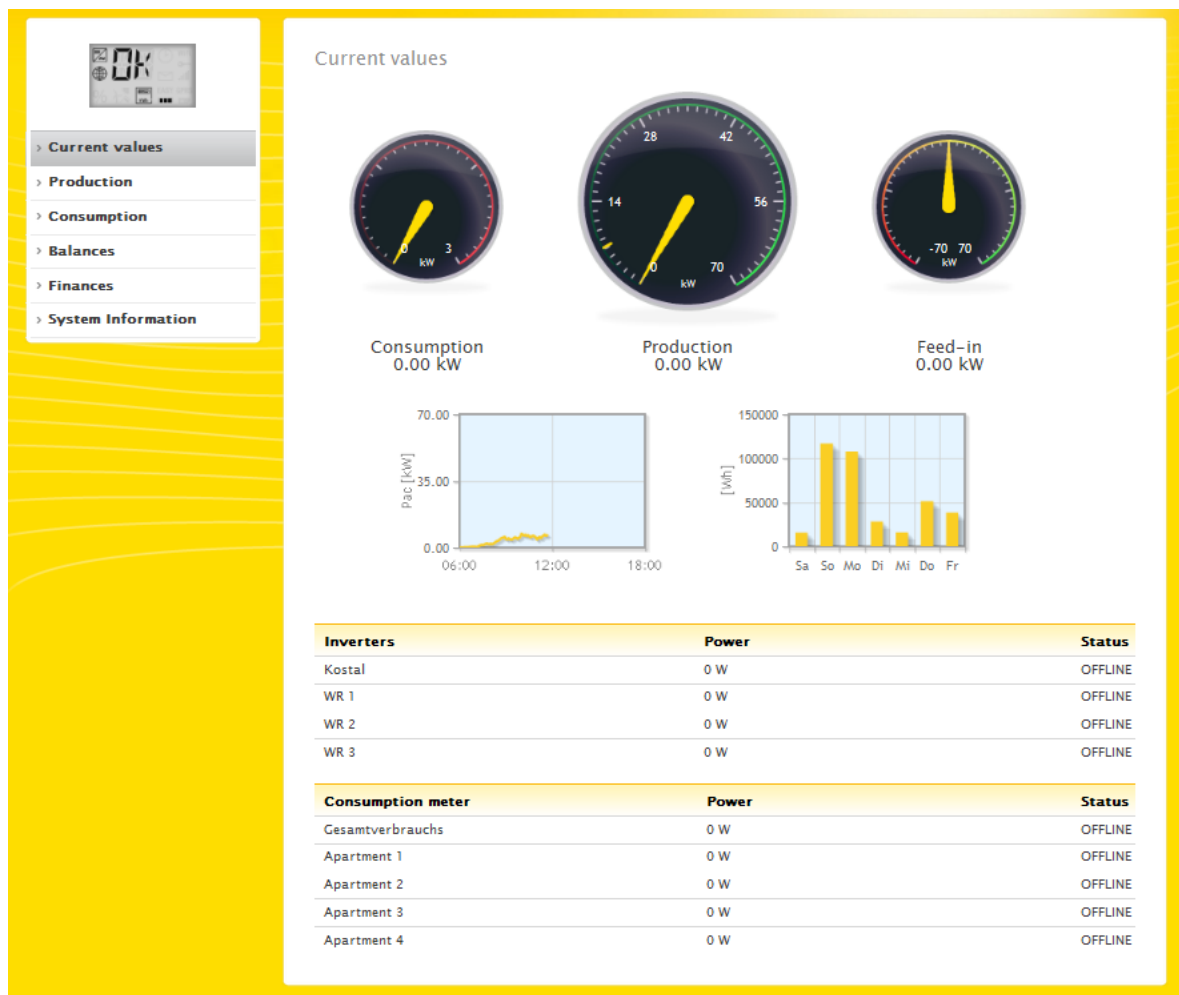


Fig.: The plant's current values

The following values are displayed in a tachometer format:

- Consumption (only when consumption meters are connected). Displays the current consumption.
- Production (Output generated by the plant). Displays the current production.
- Feed-in amount (only when meters are connected). Displays the power output that is currently being fed into the grid.

There are two graphs below the Dashboard display:

- The current day curve (graph on the left). There is also the option to display the previous five days as a curve in this graph. Therefore just click on the day value in the graph on the right.
- The current day value as well as those from the previous 5 days (graph on the right). Move the mouse above one of the bars to display the day value. Click on one of the bars to have it display in the graph on the left as a curve.

Below the graphs, there is a table that displays the measured output from the devices connected:

- The current output from each individual inverter.
- The total current consumption as measured by the consumption meters.
- The current irradiation per m² as measured by the sensor.

2.5 Production

You can select a graphic display of your plant's production from the [Production](#) menu.

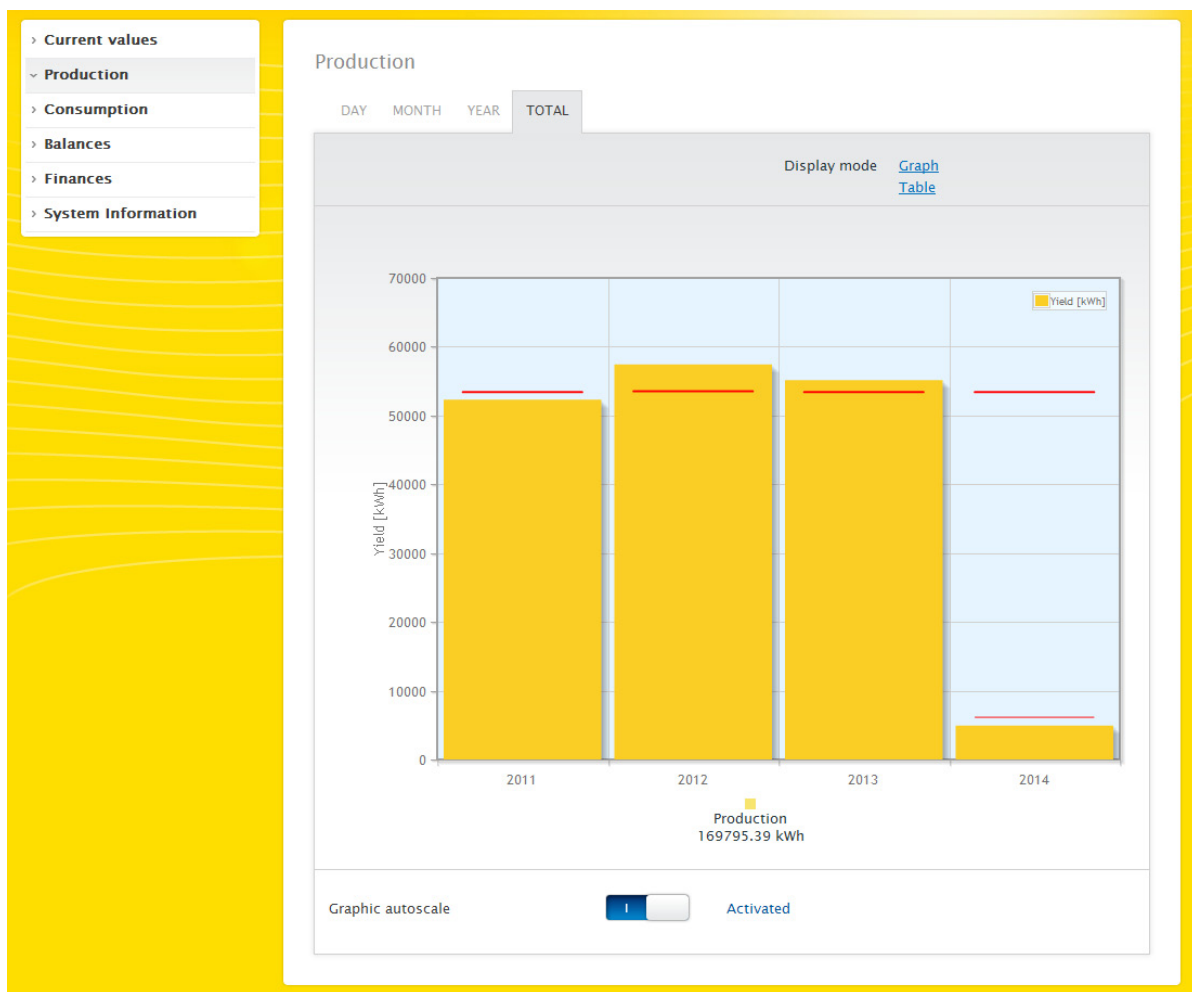


Fig.: Graphic display of the plant's total production

From this display, you can select the following tabs:

- Day
- Month
- Year
- Total

You can select to display the view as a [Graph](#) or [Table](#). The values displayed in the graph or table depend on the view selected.

Note!



The auto scaling option always scales the graphics up as much as possible in the yield data section. The auto scaling can be manually disabled for the respective graphics. Then the scaling is done based on the value defined in the device configuration. (Refer to the chapter "Configuring Inverters" in the Installation Manual)

2.5.1 Day view

The [Day](#) tab displays the current day as a curve graph. The [output](#) (W) and [yield](#) (kWp) values, at the top left of the graph key, can be hidden and unhidden by clicking on them.

The different values throughout the day can be displayed by moving the mouse along the curve.

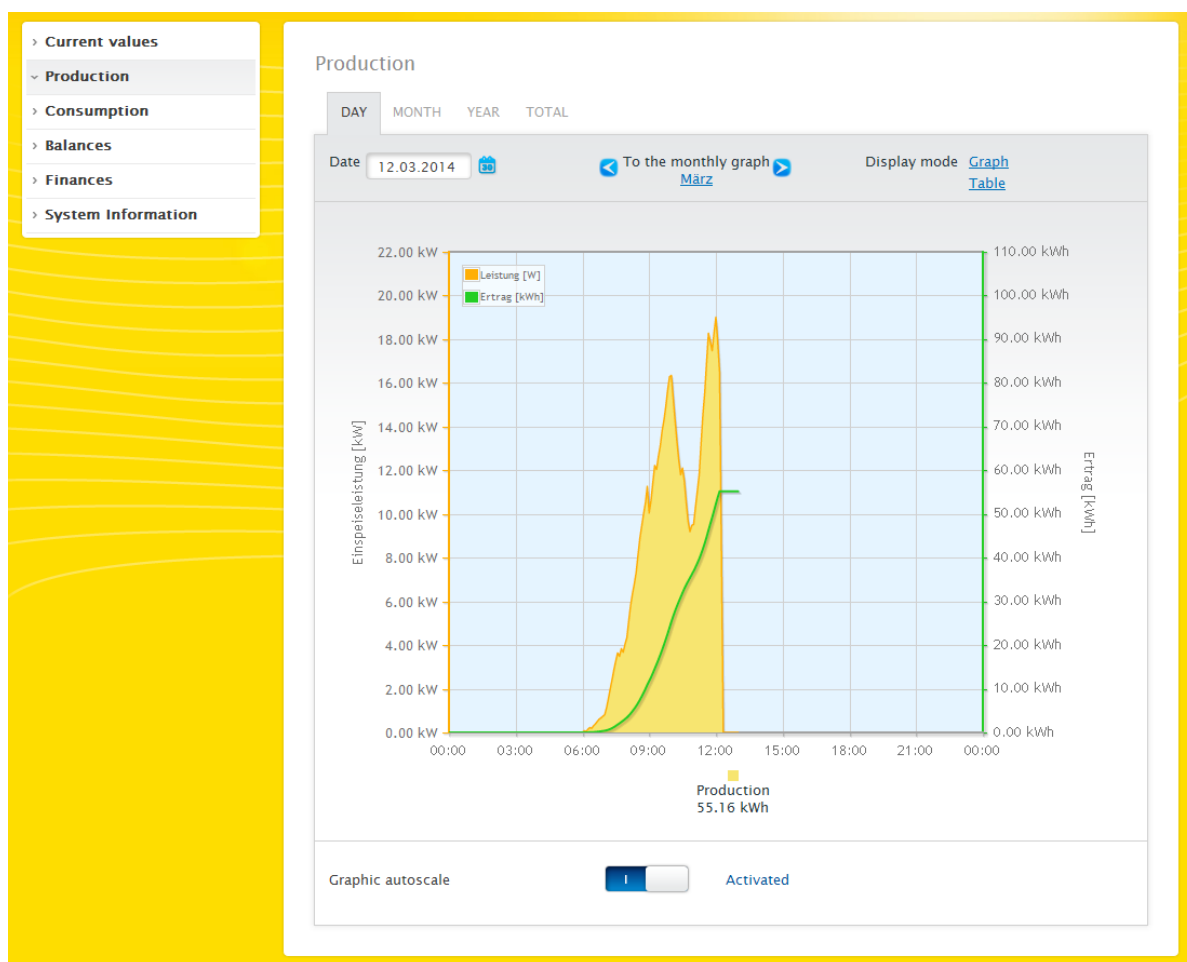


Fig.: Daily View of the Production Graph with the Auto Scaling activated

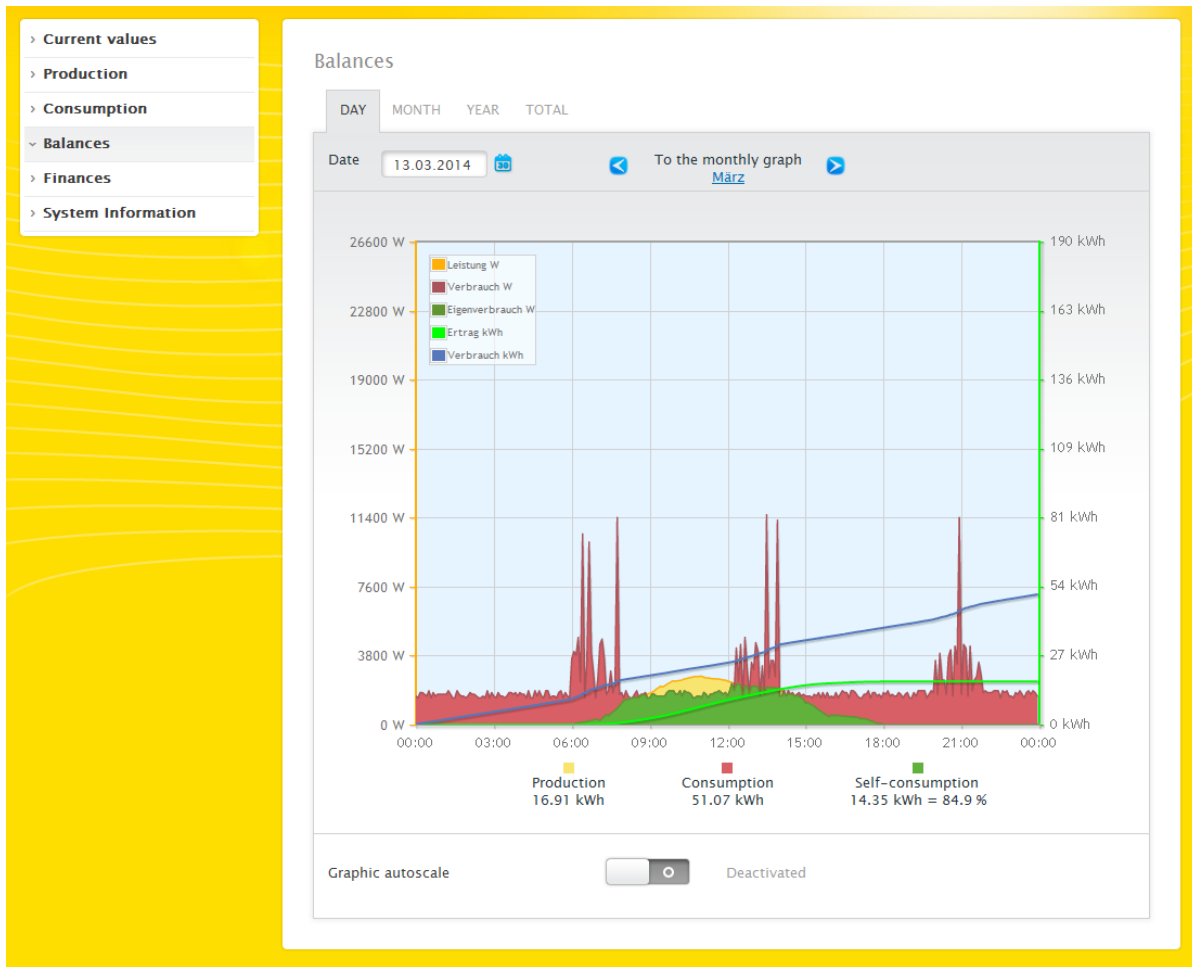


Fig.: Daily View of the Production Graph with the Auto Scaling deactivated

Different values with different units are displayed in the graph. The units used and their colors are defined in the key at the top.

Production

DAY MONTH YEAR TOTAL

Date: 01.10.2013

To the monthly graph [October](#)

Display mode: [Graph](#) [Table](#)

Inverter	Name	Yield [kWh]	Specific Yield [kWh/kWp]
5	WR 6	16.30	1.93
6	WR 7	16.30	1.93
Total		32.60	1.93

Fig.: Day view of the production table

When you click on [Table](#), the values from the current output generated will be allocated to the individual inverters and displayed as a table. In this way, you can check the output of every inverter at any time.

2.5.2 Month view

The **Month** tab displays the daily yields from the month as a total in a bar graph.

- The daily yield can be displayed by moving the mouse above one of the bars.
- Click on a bar to go to the corresponding day view.

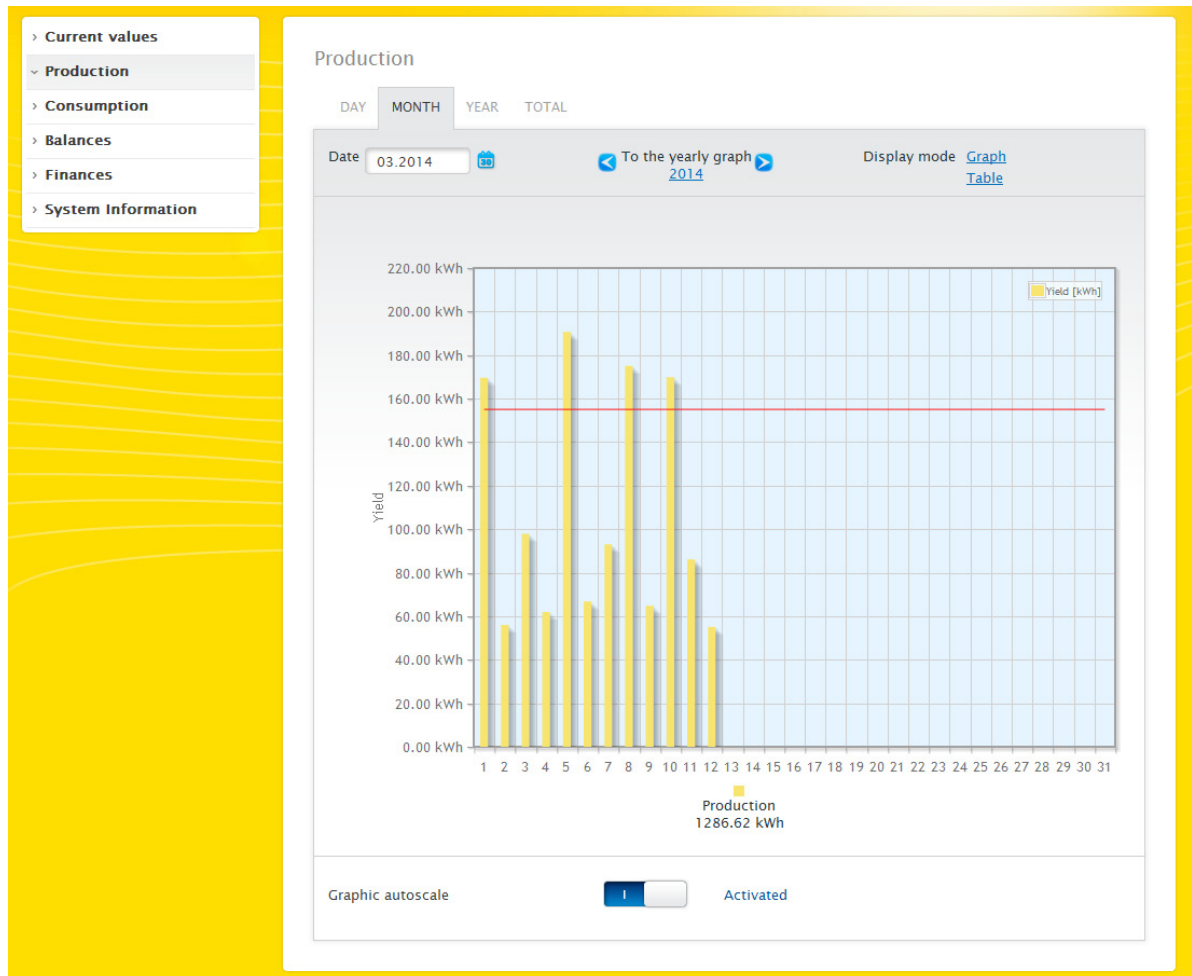


Fig.: Month view production graph

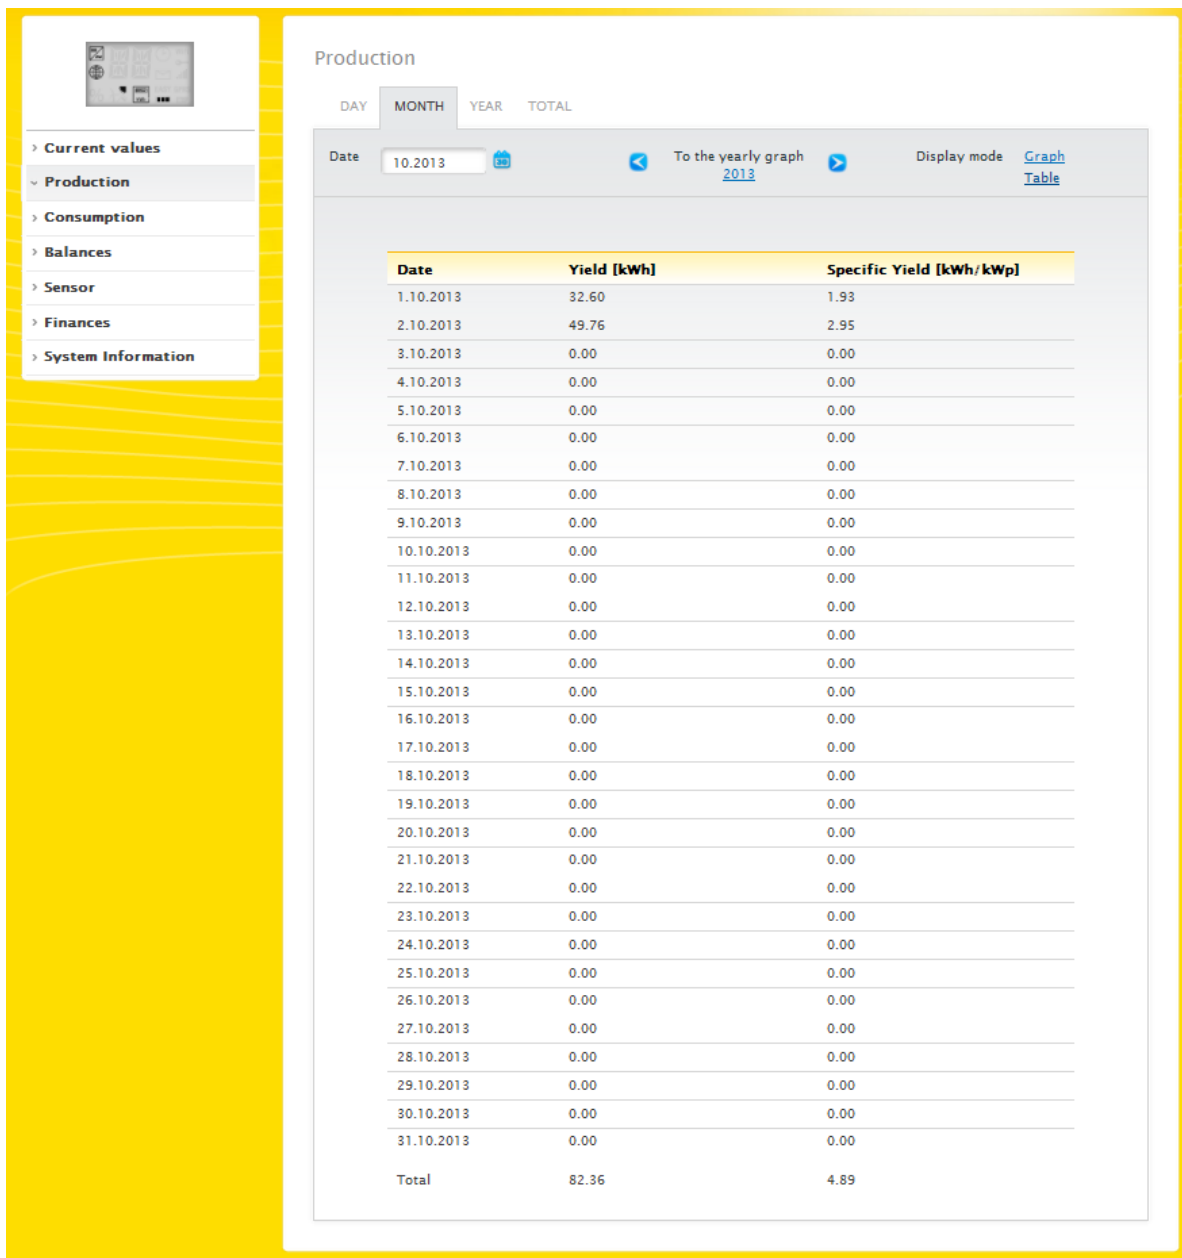


Fig.: Month view of the production table

When you click on [Table](#), the date and daily output will be listed for the entire month.

2.5.3 Year view

The **Year** tab displays the monthly yields from the year as a total in a bar graph.

- Move the mouse above one of the bars to display the monthly yield with a comparison of the current and target values in regard to the annual forecast.
- Click on a bar to go to the corresponding month view.



Fig.: Year view graph

When you click on **Table**, the annual values for the entire year are allocated to each month according to the actual output generated.

2.5.4 Total view

The **Total** tab displays the annual yields as a total in a bar graph. The red line displays the target balance that is calculated according to the annual forecast.

- Move the mouse above one of the bars to display the annual yield with a comparison of the current and target values in regard to the annual forecast.
- Click on a bar to go to the corresponding year view.

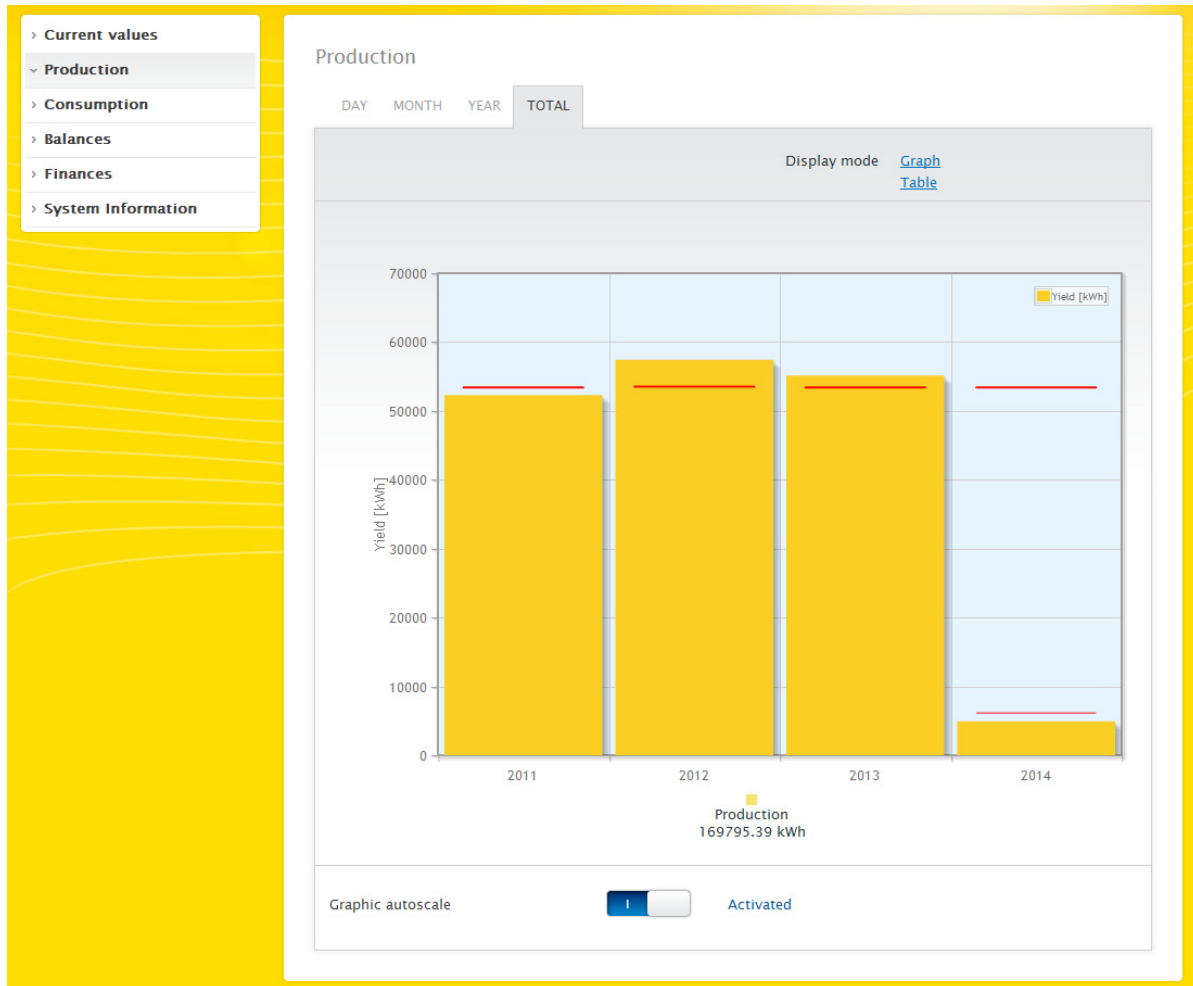


Fig.: Total view graph

Table:

The plant's total power output (since the monitoring started) is allocated every year according to the output generated.

The **Date** box is included in the **day**, **month** and **year** view and has a calendar function with which you can search for certain days, months or years according to the view selected. You can go backwards and forwards within the selected period with the arrow keys for the previous day or week, or for the following day or week.

2.6 Consumption

From the [Consumption](#) menu, you can view the exact consumption from appliances that are connected via networked “smart plugs” with the Solar-Log 1200 and 2000, relays or the Solar-Log™ Meter.

Note!



Consumption is only displayed once a meter is connected.

The day view can be selected from the [Consumption](#) menu. The view appears as a [Day Graph](#) with the total consumption values.

As soon as sub-consumers are connected, e.g. a washing machine or freezer, the view expands to include the tab [Details Sub-consumers](#).

All of the appliances consuming electricity are shown in different colors here and they are also displayed as in a pie chart at the bottom with the colors in the key.

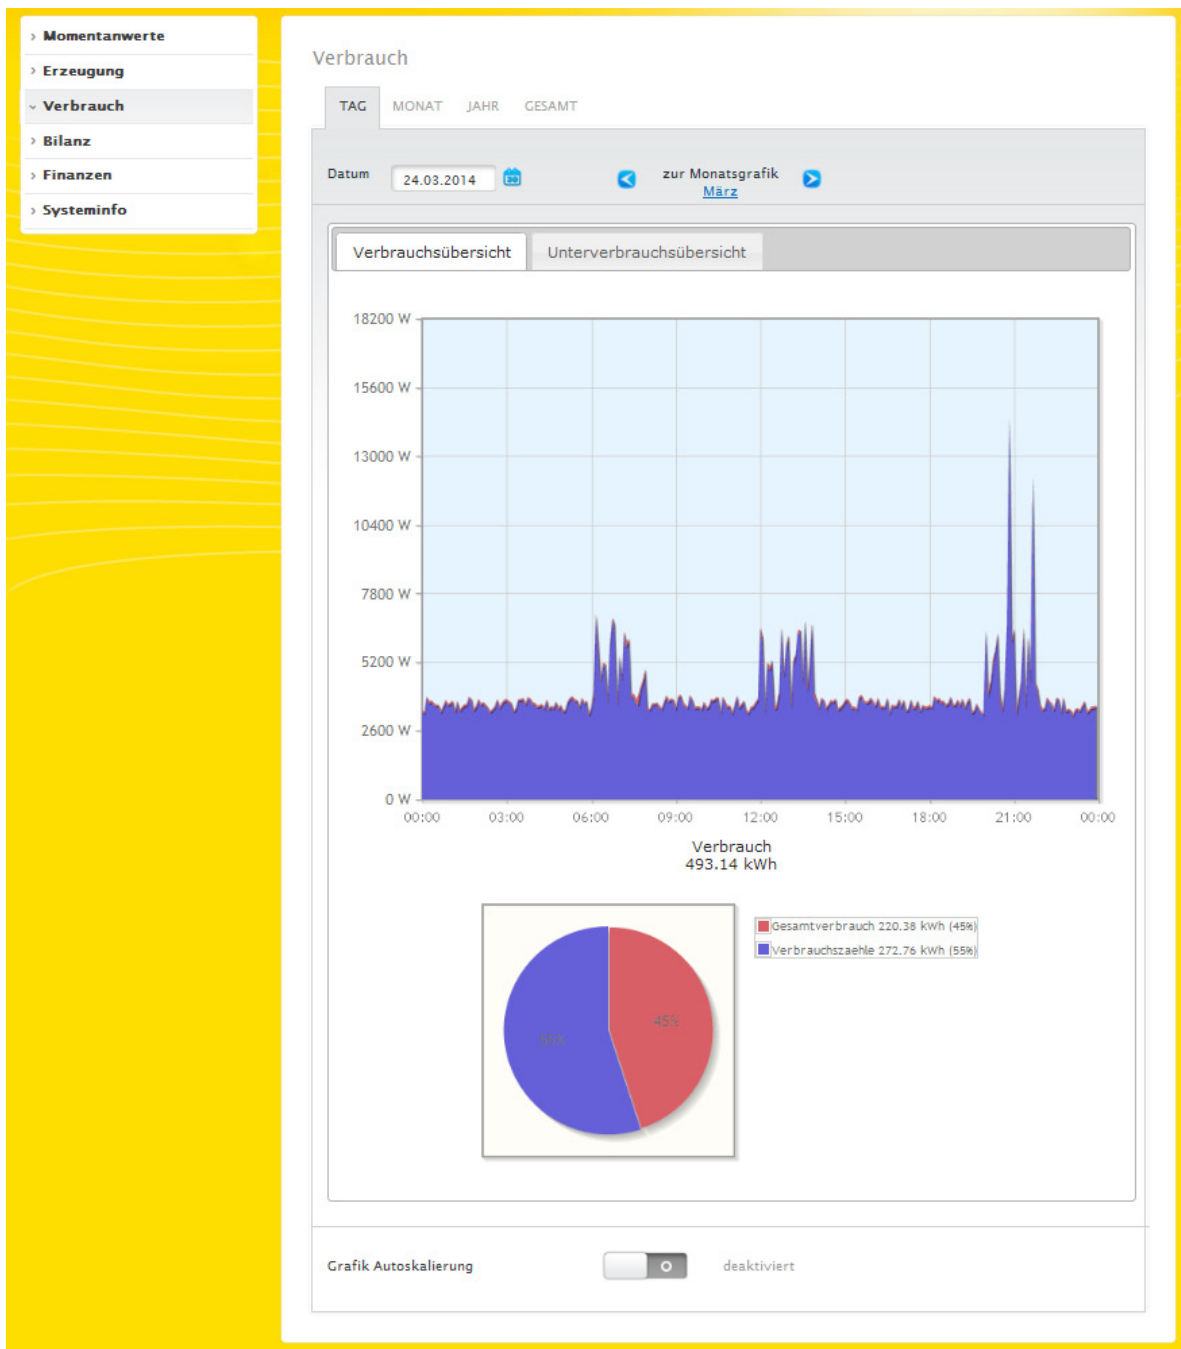


Fig.: Graph of daily consumption with two meters connected

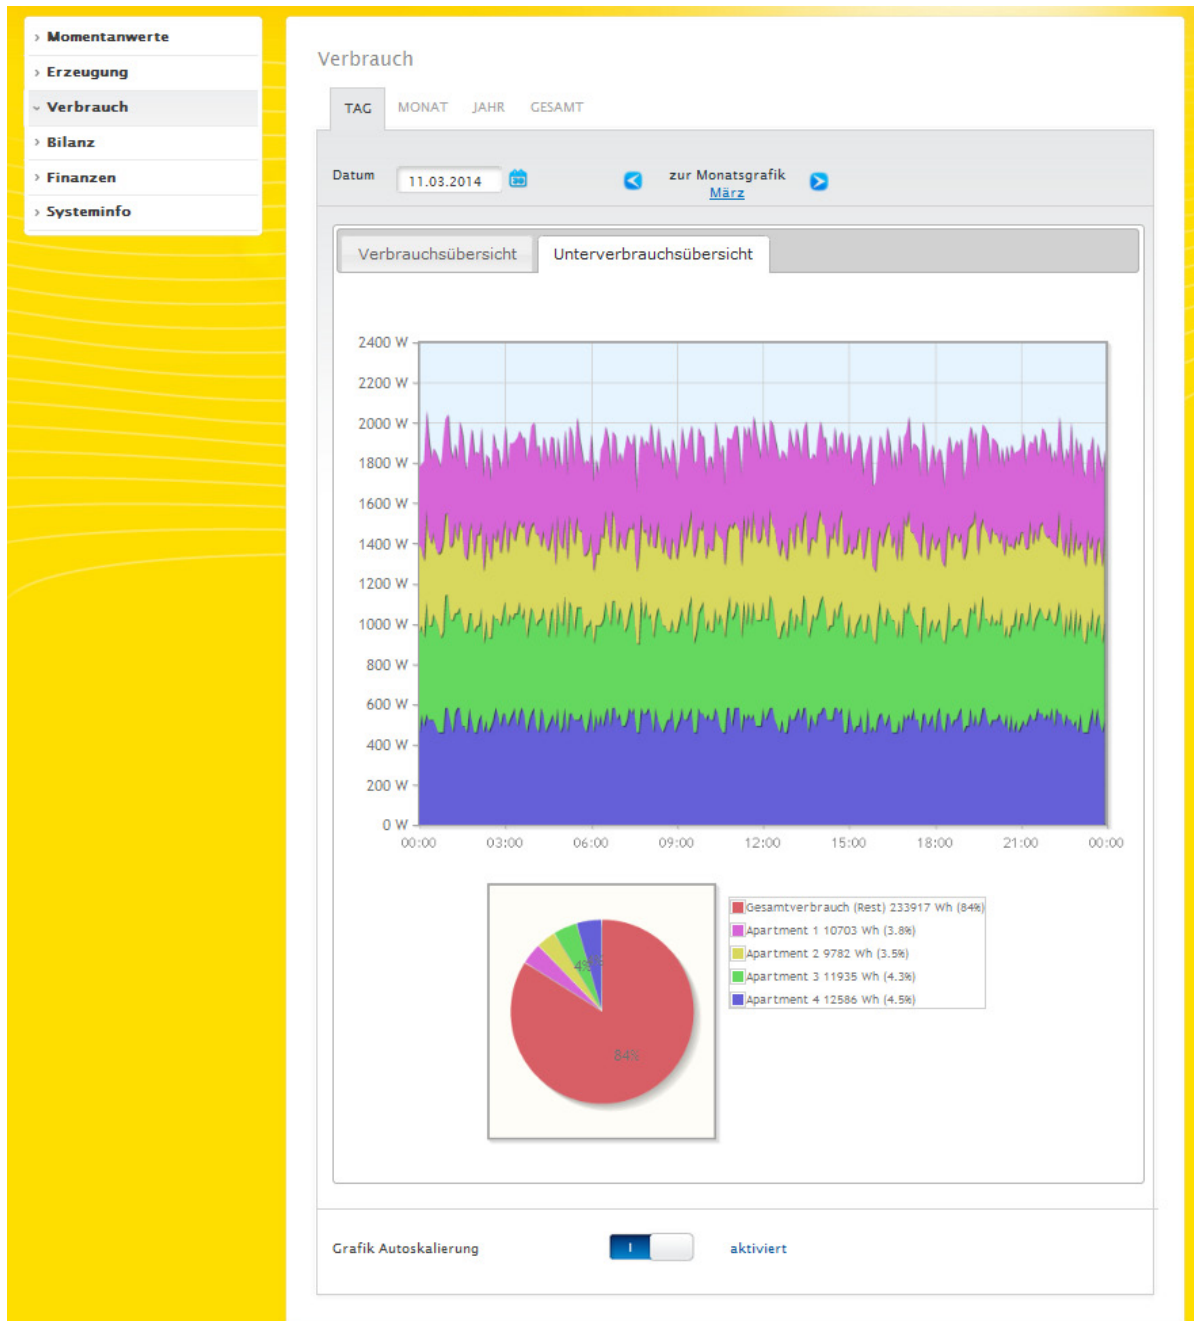


Fig.: Graph of daily consumption with connected appliances in the sub-consumer view

You have the option to select additional menu items in the consumption view.

- **Month:**

displays the Month Graph View as a bar graph. There are two tabs in the Month View, the same as in the Day View.

The [Consumption Overview](#) and the [Sub-consumer Overview](#).

The total consumption values are displayed in the Consumption Overview as a bar graph.

In the [Sub-consumer Overview](#), you see the devices connected as a bar graph with the power consumption displayed in different colors. Below this, the values are also displayed in a pie chart with the colors in the key.

There is the option from both views to select the individual days from the individual bars and sections.

- **Year:**

displays the Year Graph View as a bar graph. There are two tabs in the Year View, the same as in the Month View.

The [Consumption Overview](#) and the [Sub-consumer Overview](#).

The total consumption values are displayed in the Consumption Overview as a bar graph.

In the [Sub-consumer Overview](#), you see the devices connected as a bar graph with the power consumption displayed in different colors. Below this, the values are also displayed in a pie chart with the colors in the key.

There is the option from both views to select the individual months from the individual bars and sections.

- **Total:**

displays the Total Graph View as a bar graph. There are two tabs in the Total View, the same as in the Year View.

The [Consumption Overview](#) and the [Sub-consumer Overview](#).

The total consumption values are displayed in the Consumption Overview as a bar graph.

In the [Sub-consumer Overview](#), you see the devices connected as a bar graph with the power consumption displayed in different colors. Below this, the values are also displayed in a pie chart with the colors in the key.

There is the option from both views to select the individual years from the individual bars and sections.

Balances

You can see the relationship between your plant's production and consumption from the **Balances** menu.

Note!



Consumption is only displayed once a meter is connected.

Note!



The auto-scaling option always scales the graphics up as much as possible in the yield data section. The auto scaling can be manually disabled for the respective graphics. Then the scaling is done based on the value defined in the device configuration. (Refer to the chapter "Configuring Inverters" in the Installation Manual)

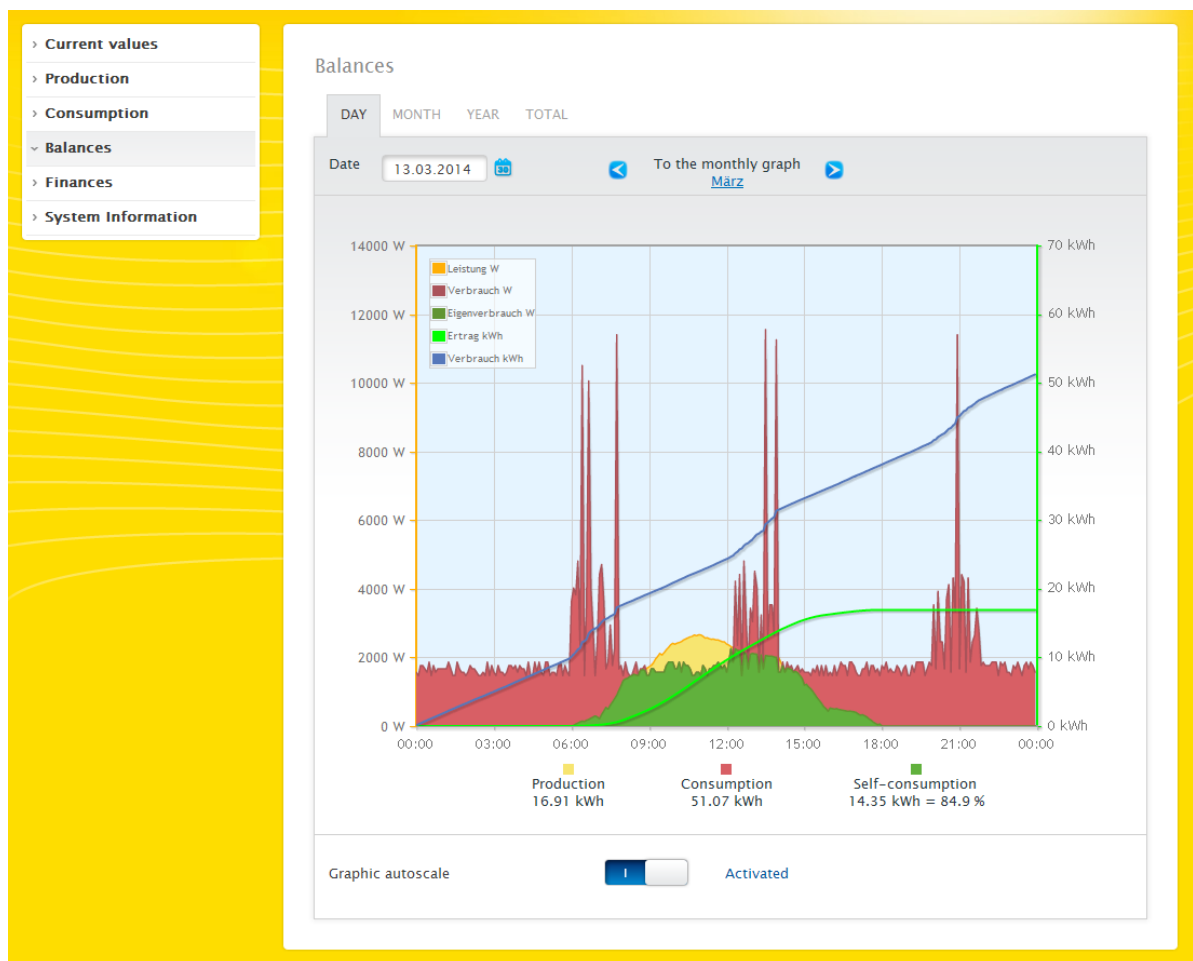


Fig.: Daily Balance Graph with the Auto Scaling activated

The following tabs can be selected:

- Day
- Month
- Year
- Total

The start view displays the current daily values as a graph.

2.6.1 Day balance

The **Day** tab under Balances displays the production, consumption and self-consumption side-by-side as a day curve. The values at the top left of the graph key can be hidden and unhidden by clicking on them. Different values with different units are displayed in the graph. The units used and their colors are defined in the key at the top.

The different values throughout the day can be displayed by moving the mouse along the curve.

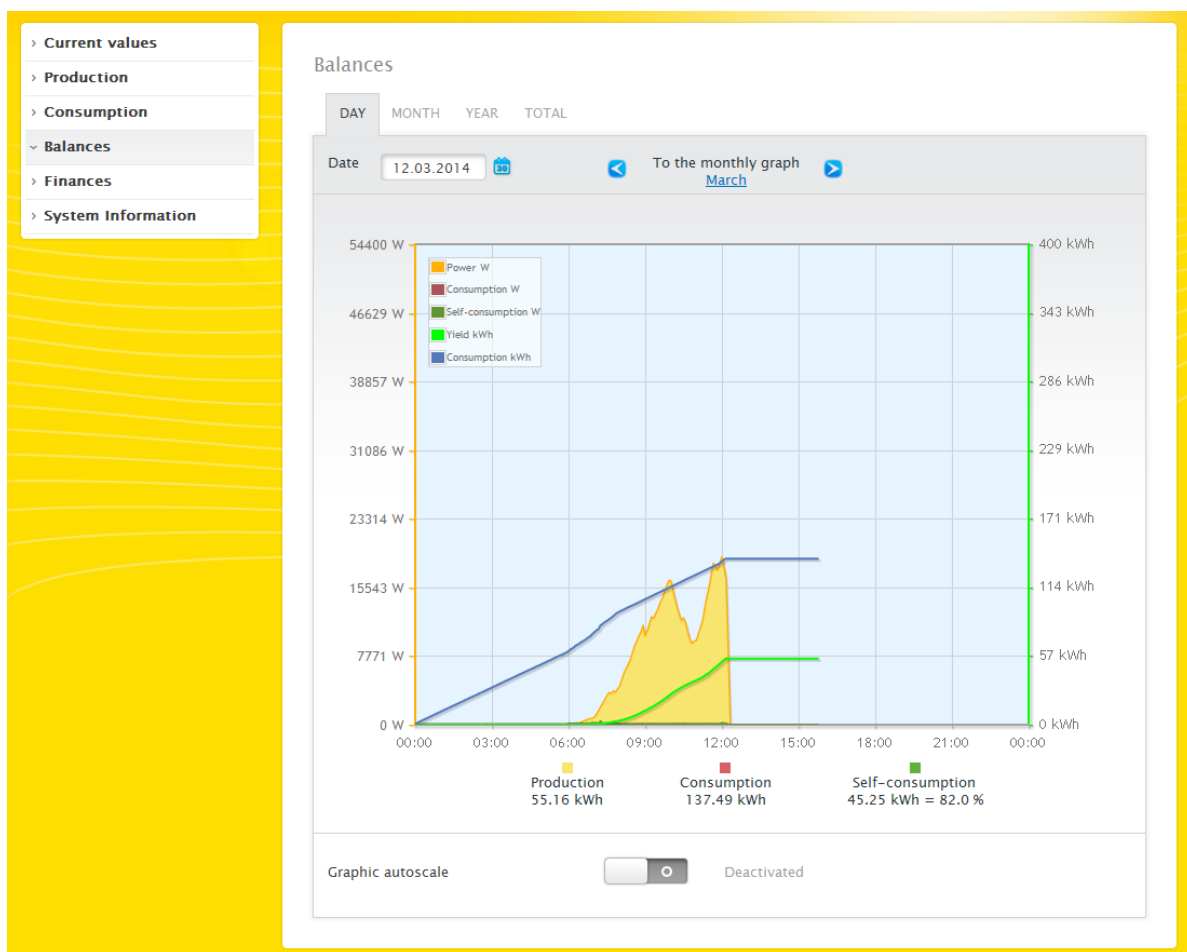


Fig.: Daily Balance Graph with the Auto Scaling deactivated

The green areas display the amount of consumption that was covered with PV power. The yellow areas display the surplus of PV-generated power and the red areas display the amount of consumption that was not covered with PV power.

You have a choice between the **Graph** and **Table** display mode.

2.6.2 Month balance

The tab **Month** under balances displays the production and consumption side-by-side in a bar graph.

- Move the mouse above one of the bars to view either the daily yield or consumption.
- Click on one of the bars to go to the corresponding day view.

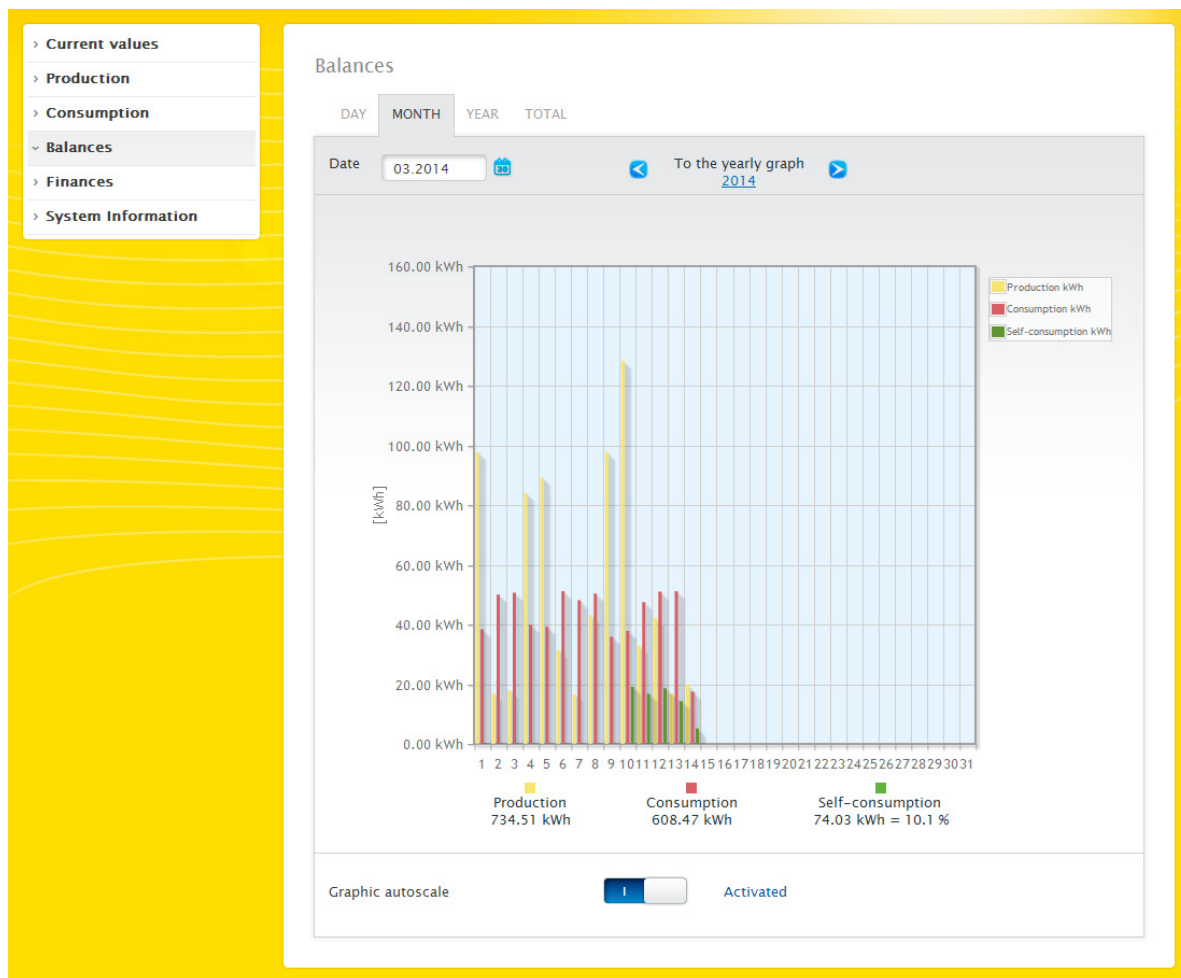


Fig.: Month view balance graph

2.6.3 Year balance

The Year tab under Balances displays the production and consumption side-by-side in a bar graph.

- Move the mouse above one of the bars to view either the monthly yield or consumption with a comparison of the current and target values in regard to the annual forecast.
- Click on one of the bars to go to the corresponding month overview.

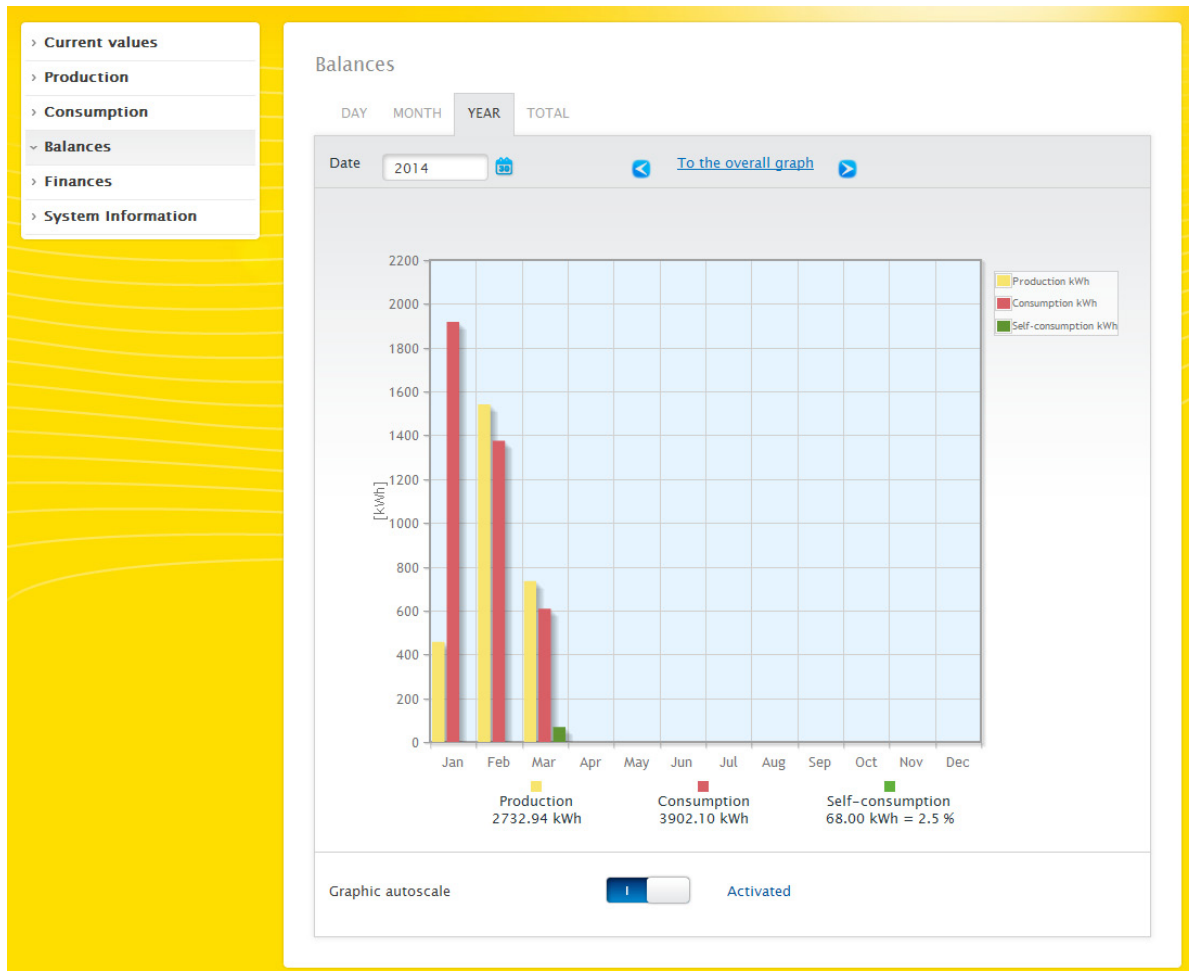


Fig.: Year view balance graph

2.6.4 Total balance

The tab **Total** under balances displays the production and consumption side-by-side in a bar graph.

- Move the mouse above one of the bars to view either the annual yield or consumption with a comparison of the current and target values in regard to the annual forecast.
- Click on one of the bars to go to the corresponding annual overview.

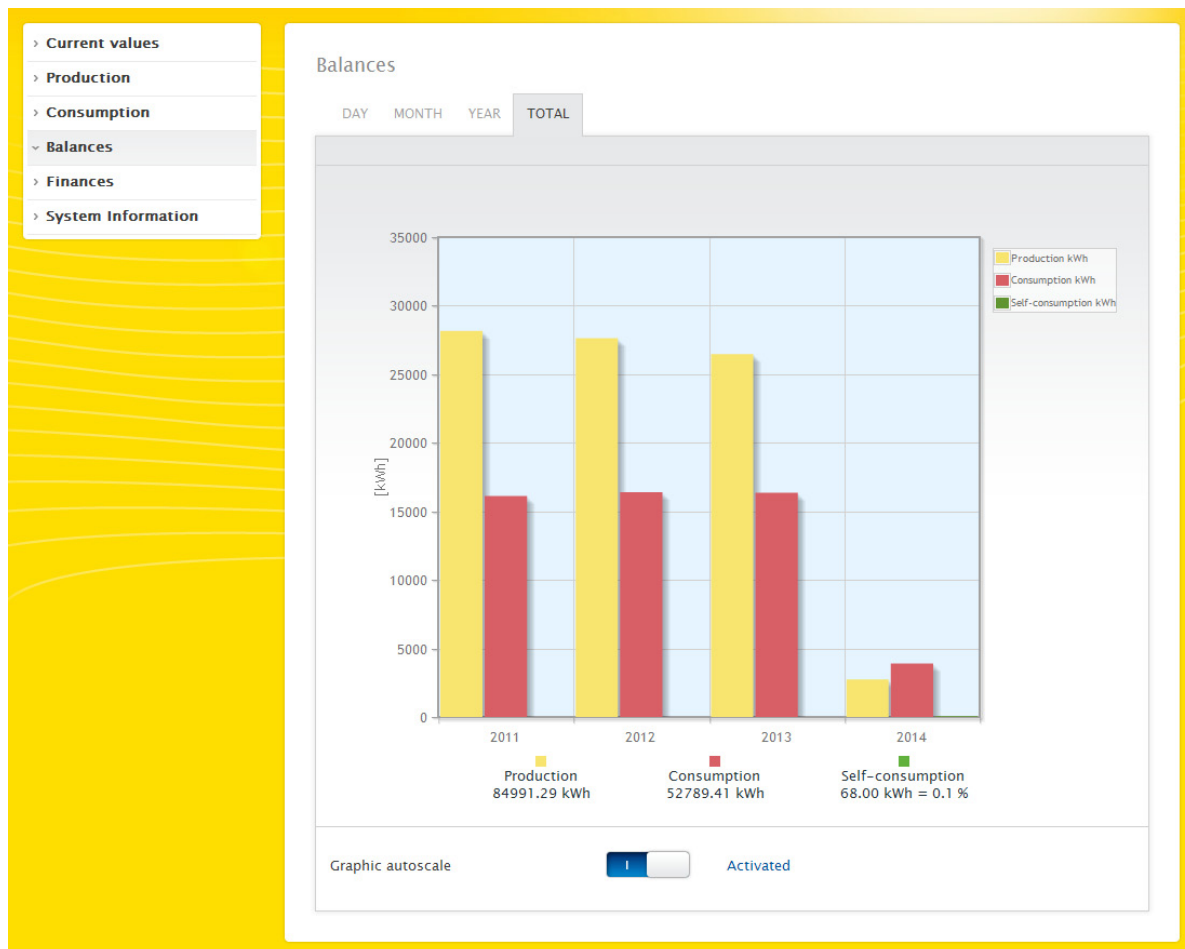


Fig.: Total balance graph

2.7 Finances

Your plant's financial performance can be displayed as a graph or table from the **Finances** menu. (See the chapter "Defining Tariffs and Costs" in Installation Manual for the configuration of the tariff and consumption values)

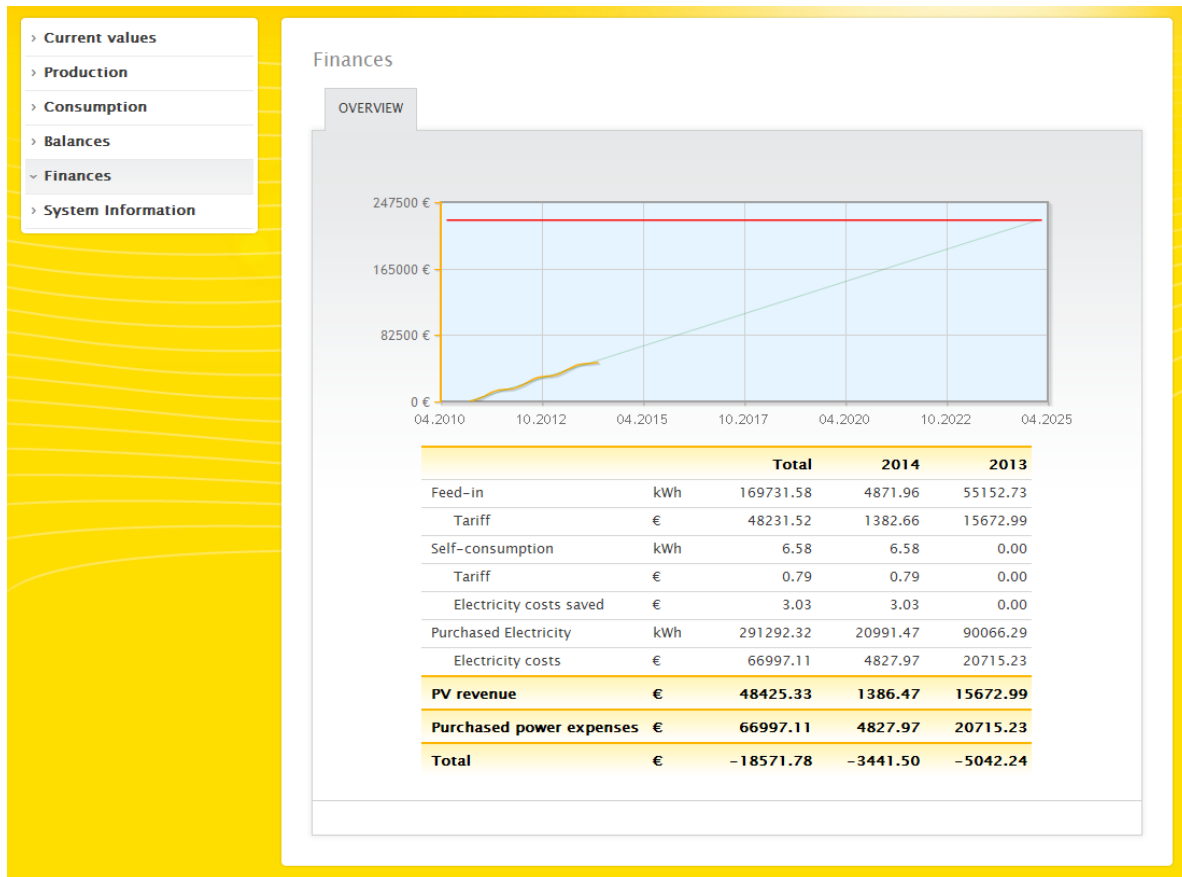


Fig.: Finances overview

The total financial performance of your plant is displayed as a graphic with the actual/target value curve in the overview.

The following values are displayed for each individual year and the total for all of the years since the Solar-Log™ started monitoring the plant:

- **Feed-in:**

This displays the amount of generated power in kWh that has been fed into the public grid.

- **Tariff:**

The tariff calculates the financial compensation for the feed-in amounts based on the rate and currency defined in the Configuration | Plant | Tariff settings.

- **Self-consumption:**

This displays the amount of generated power in kWh that has been consumed locally.

- **Tariff:**

Based on the rate in the settings for the tariff under Feed-in, this displays the financial compensation for the self-consumption refund (when such a compensation is allowed).

- **Electricity costs saved:**

This displays the electricity costs saved with self-consumption (power that did not have to be obtained from the grid).

- **Power consumption:**

This displays the amount of power consumed that was obtained from the grid.

- **Electricity costs:**

The calculations are based on the rate defined in the Configuration | Plant | Electricity Costs settings.

- PV revenue:

This displays all of the revenue from the PV plant based on the feed-in and self-consumption tariffs and the electricity costs saved with self-consumption.

- Purchased power expenses:

This displays the total expenses for the power obtained from the grid.

- Total:

This is the total after the purchased power expenses have been subtracted from the PV revenue.

Note!



The overview curve is only visible in the [Yield Data | Finances](#) section after several weeks of data recording.

2.8 Sensor

A graphic evaluation from the connected sensors can be displayed from the [Sensor](#) menu.



Fig.: Graph of Sensor Box values

The following values can be displayed individually:

- Irradiation W/m
- Module temperature C°
- Ambient temperature C°
- Wind speed m/s

Different values with different units are displayed in the graph. The units used and their colors are displayed in the key at the top.

Here you also have the option to show or hide individual values with a mouse click. You can select and subsequently evaluate certain days with the Date box.

Note!



Data is only available if a sensor is connected.

2.9 System Information

Go to the [System info](#) menu for plant and system information.

System information	
About this Solar-Log™	
Model	Solar-Log 1200 GPRS
Serial number	812991680
Firmware version	3.0.0 Build 60 - 11.10.2013
Plant data	
Plant size	16860 kWp
Installation date	[Date of installation]
Detected devices	
Inverters	RS485_B: 2 x Fronius
Power meters	RS485_A: 4 x Janitza
Sensors	RS485_A: 1 x M&T Sensor
Data transfers	
Portal transfer	Deactivated
Export (FTP)	Deactivated
E-mail	Deactivated

Fig.: System Information

The following information is displayed:

About this Solar-Log™:

- Model
- Serial number
- Firmware version

Plant data:

- Plant size
- Installation date

Detected devices:

- Inverters
- Power meters
- Sensors

Data transfers:

- Portal transfer (activated/deactivated)

- Export (FTP): Last transfer with the time and date and state message (in the example: OK)
- E-Mail: Last transfer with the time and date and state message (in the example: OK)

2.10 Accessing Diagnostic values

Access the Diagnostic from the header bar.

The following options can be selected from the [left-side navigation](#) menu.

- Inverter diagnostic
- Event log
- Notifications
- Feed-In Management
- SCB Monitor (only Solar-Log 2000 with SCB activated)
- Alarm contact (only Solar-Log 2000)
- CSV Export

2.10.1 Inverter diagnostic

To access the Inverter diagnostic menu, go to [Diagnostic | Inverter Diagnostic](#).

The following tabs can be selected from this menu:

- Inverter details
- Tracker comparison
- Module field comparison

Different values with different units are displayed in the following diagnostic graph. A key is displayed for every graphic to define which units are used and their colors.

Inverter details

To access the Inverter details menu, go to [Diagnostic | Inverter Diagnostic | Inverter details](#).

A particular date and device (e.g. inverter or sensor) can be selected under inverter details and evaluated.



Fig.: Inverter details graph

In the example (see Fig.: Inverter details graph), the following values can be displayed for the inverter:

- Pac
- DC power 1
- DC voltage 1
- Temperatur (this value is displayed if the inverter supports this function. Otherwise only the value 1/0 °C is displayed in the graph.)
- Yield

All of the displayed values can be directly selected and deselected at any time by clicking in the graph key (upper-right corner of the graph),

Tracker comparison

To access the Tracker comparison menu, go to [Diagnostic | Inverter Diagnostic | Tracker comparison](#). Two trackers (either from the same device or two different devices) can be compared on a particular date by selecting the date, device and tracker.

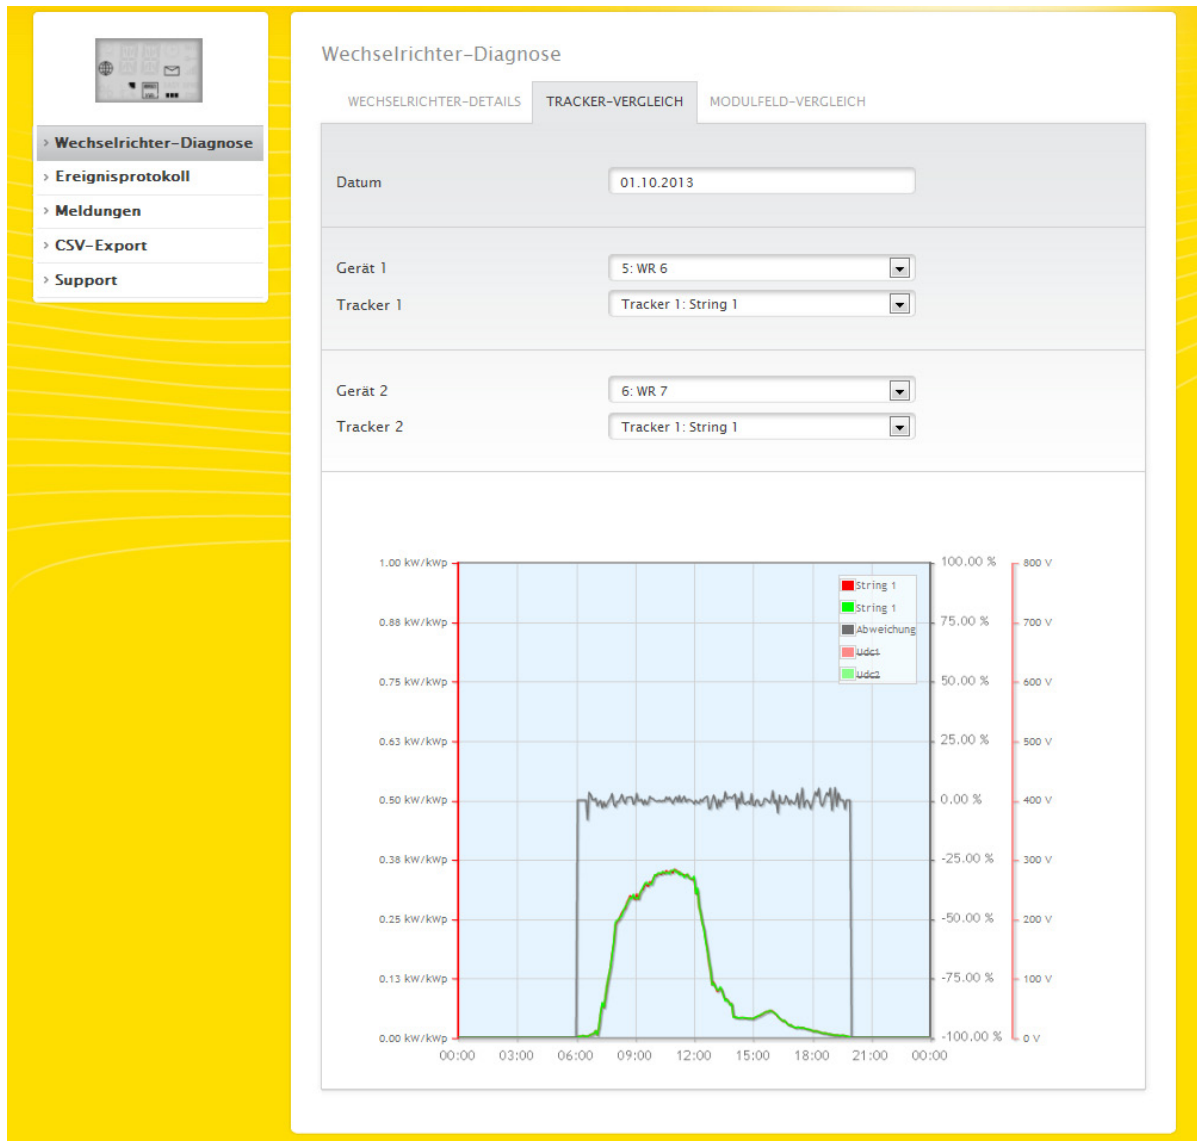


Fig.: Tracker comparison graph

In the example (see Fig.: Tracker comparison graph), two different inverters have been selected and evaluated. ***the better view has been selected for the DC voltage 1 and 2 values.

The two strings from inverter 6 and 7 are directly compared to each other.

The gray line displays the degree of deviation. The deviation is indicated as a percentage in the right column and displayed as a positive or negative percentage. In the example, the deviation between the strings is from about -5% to +5%. The column on the left indicates the kW/kWp output of the tracker.

All of the displayed values can be directly selected and deselected at any time by clicking in the graph key (upper-right corner of the graph).

Module field comparison

To access the Module field comparison menu, go to [Diagnostic | Inverter Diagnostic | Module field comparison](#).

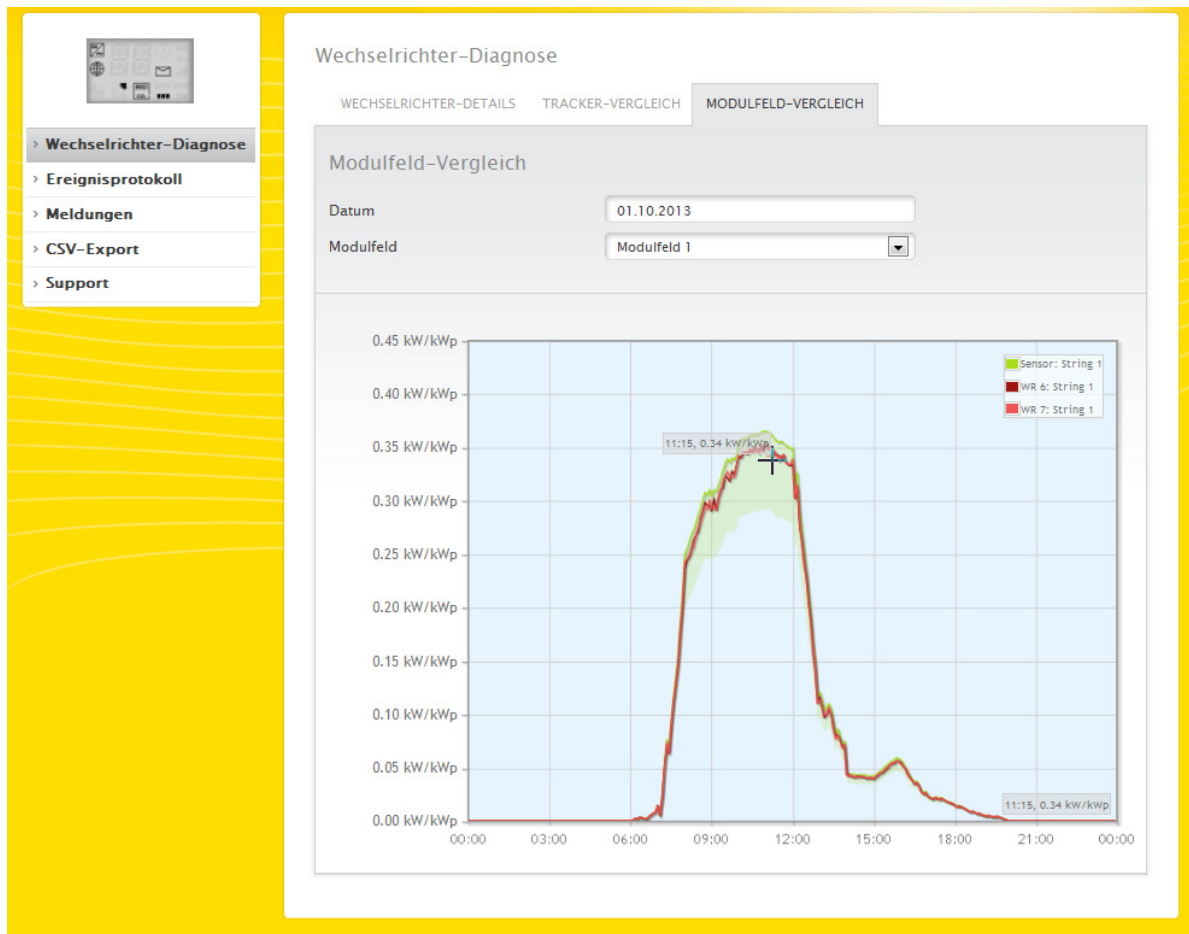


Fig.: Module field comparison graph

With the [Date](#) and [Module Field](#) boxes, the module field comparison permits all devices (e.g. inverters and sensors) and their strings that are assigned to the same module field to be compared on the current and previous days (see Fig.: Module field comparison graph) in order to more efficiently detect faults from the performance monitoring.

In the example graph, the following values are displayed:

- Sensor
- Inverter 6
- Inverter 7

The gray areas along the course of the sensor line show the range of tolerance in which the plant should operate.

All of the displayed values can be directly selected and deselected at any time by clicking in the graph key (upper-right corner of the graph).

2.10.2 Accessing Event logs

To access the Event logs menu, go to [Diagnostic | Event logs](#).

The following mode is loaded when accessing the event logs.

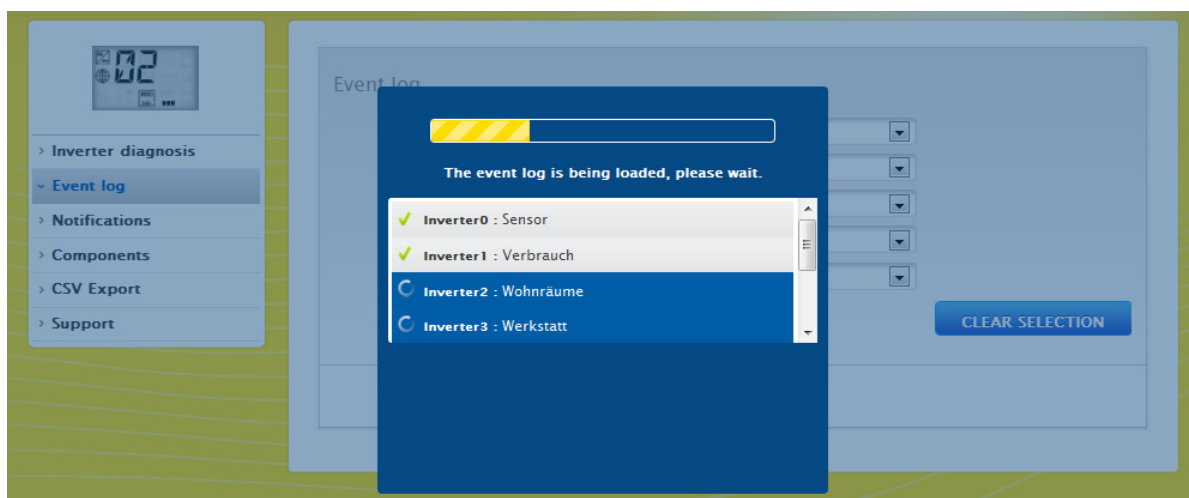


Fig.: The event log is being loaded.

After the event log has been loaded, the window switches back to the normal view.

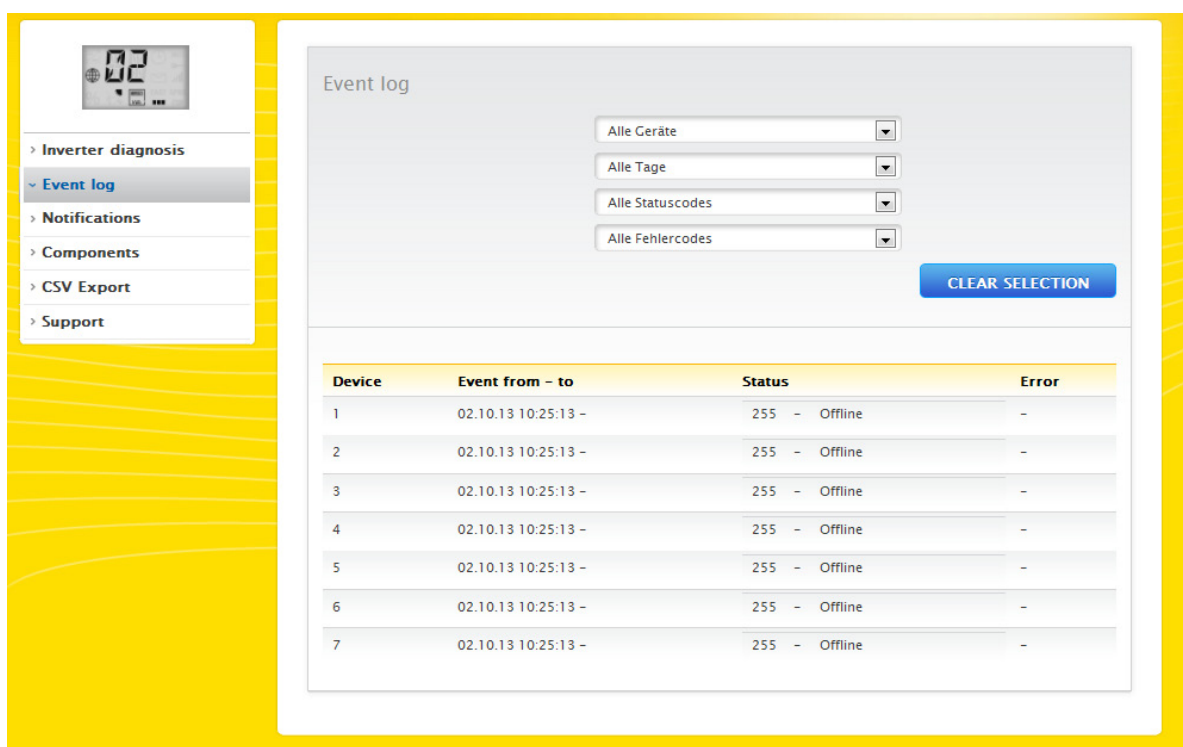


Fig.: Event log

The following settings are available from the four drop-down menus in this view:

- Devices:

Under devices (default "All devices"), you can select individual devices or leave the default selection as is.

- Days:

Under days (default "All days"), you can select individual days or leave the default selection as is.

- Status codes:

Under status codes (default "All status codes"), you can select individual status codes or leave the default selection as is.

- Fault codes:

Under fault codes (default "All fault codes"), you can select individual fault codes or leave the default selection as is.

By default, the current day is displayed in the table with all devices, fault codes and status codes.

2.10.3 Accessing Notifications

To access the Notifications menu, go to [Diagnostic | Notifications](#).

Message date	Send date	Send Tries	Message type	Recipient	Text
18.10.13 12:26:28	ausstehend	0	Offline	0	
18.10.13 12:26:28	ausstehend	0	Offline	0	
18.10.13 11:55:58	ausstehend	0	Offline	0	
18.10.13 11:55:58	ausstehend	0	Offline	0	
18.10.13 11:26:26	ausstehend	0	Offline	0	
18.10.13 11:26:26	ausstehend	0	Offline	0	
17.10.13 12:32:10	ausstehend	0	Offline	0	
17.10.13 12:32:10	ausstehend	0	Offline	0	
17.10.13 12:01:31	ausstehend	0	Offline	0	
17.10.13 12:01:31	ausstehend	0	Offline	0	
17.10.13 11:26:21	ausstehend	0	Offline	0	
17.10.13 11:26:21	ausstehend	0	Offline	0	
16.10.13 12:26:05	ausstehend	0	Offline	0	
...					
...					
13.10.13 12:26:15	ausstehend	0	Offline	0	
13.10.13 11:56:45	ausstehend	0	Offline	0	
13.10.13 11:56:45	ausstehend	0	Offline	0	
13.10.13 11:26:43	ausstehend	0	Offline	0	
13.10.13 11:26:43	ausstehend	0	Offline	0	
12.10.13 12:26:30	ausstehend	0	Offline	0	
12.10.13 12:26:29	ausstehend	0	Offline	0	
12.10.13 11:56:13	ausstehend	0	Offline	0	
12.10.13 11:56:13	ausstehend	0	Offline	0	
12.10.13 11:26:01	ausstehend	0	Offline	0	

Fig.: Notification overview

The notification overview is displayed as a table.

A maximum of 50 messages are displayed in this table. The following columns are displayed:

- Message date:

When a fault is detected and reported.

- Send date:

A date is displayed in this column if the message has been successfully sent. Pending is displayed in this column if there are more send attempts remaining, or aborted after 5 unsuccessful attempts to send the message.

- Send Tries:

The number attempts needed to successfully send the message or the number of unsuccessful attempts is displayed in this column. Aborted occurs after 5 unsuccessful attempts to send the message. The number 1 to 5 can be displayed in this column if there are still more send tries remaining.

- Message type:

This column displays the type message. (For example: Offline. If an inverter is offline)

- Recipient:

The method with which the message is sent is displayed here.

- Text:

There is the option to display the messages sent by the Solar-Log™ under Text.

Note!



For sending notifications, see the chapter "Configuring Notifications" in the Installation Manual.

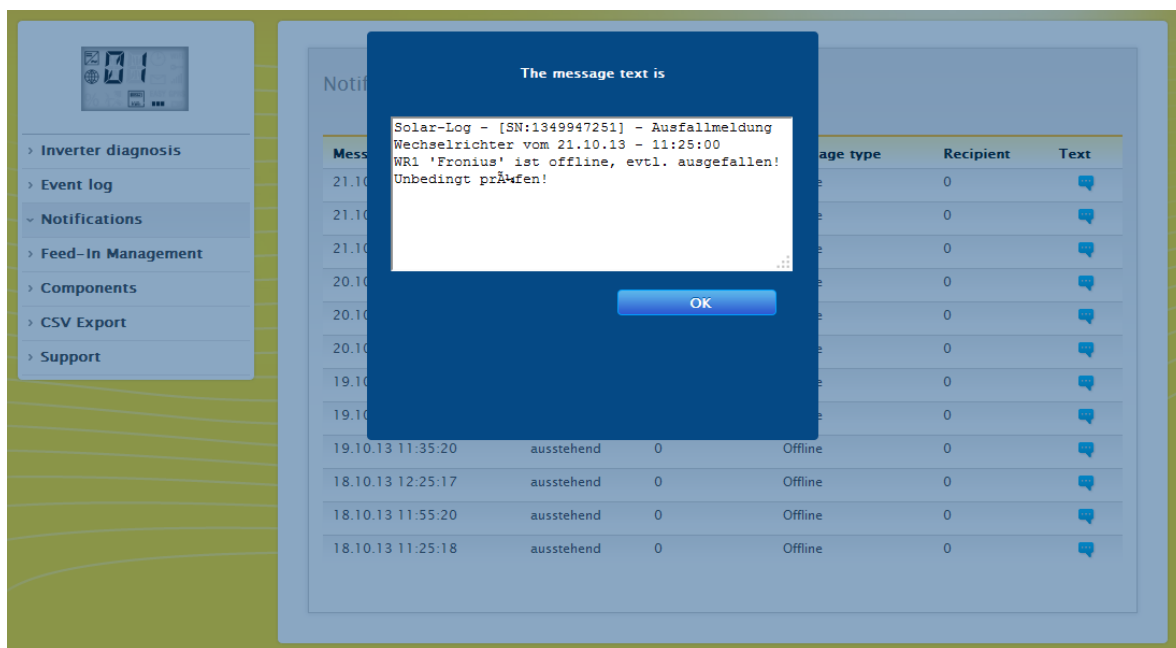


Fig.: Message with text field

2.10.4 Accessing Feed-In Management

To access the Feed-In Management menu, go to [Diagnostic | Feed-In Management](#).

Note!



The menu [Feed-In Management](#) under [Diagnostic | Feed-In Management](#) only appears if active power has been configured in the [Configuration | Special Functions | Feed-In Management](#) section.

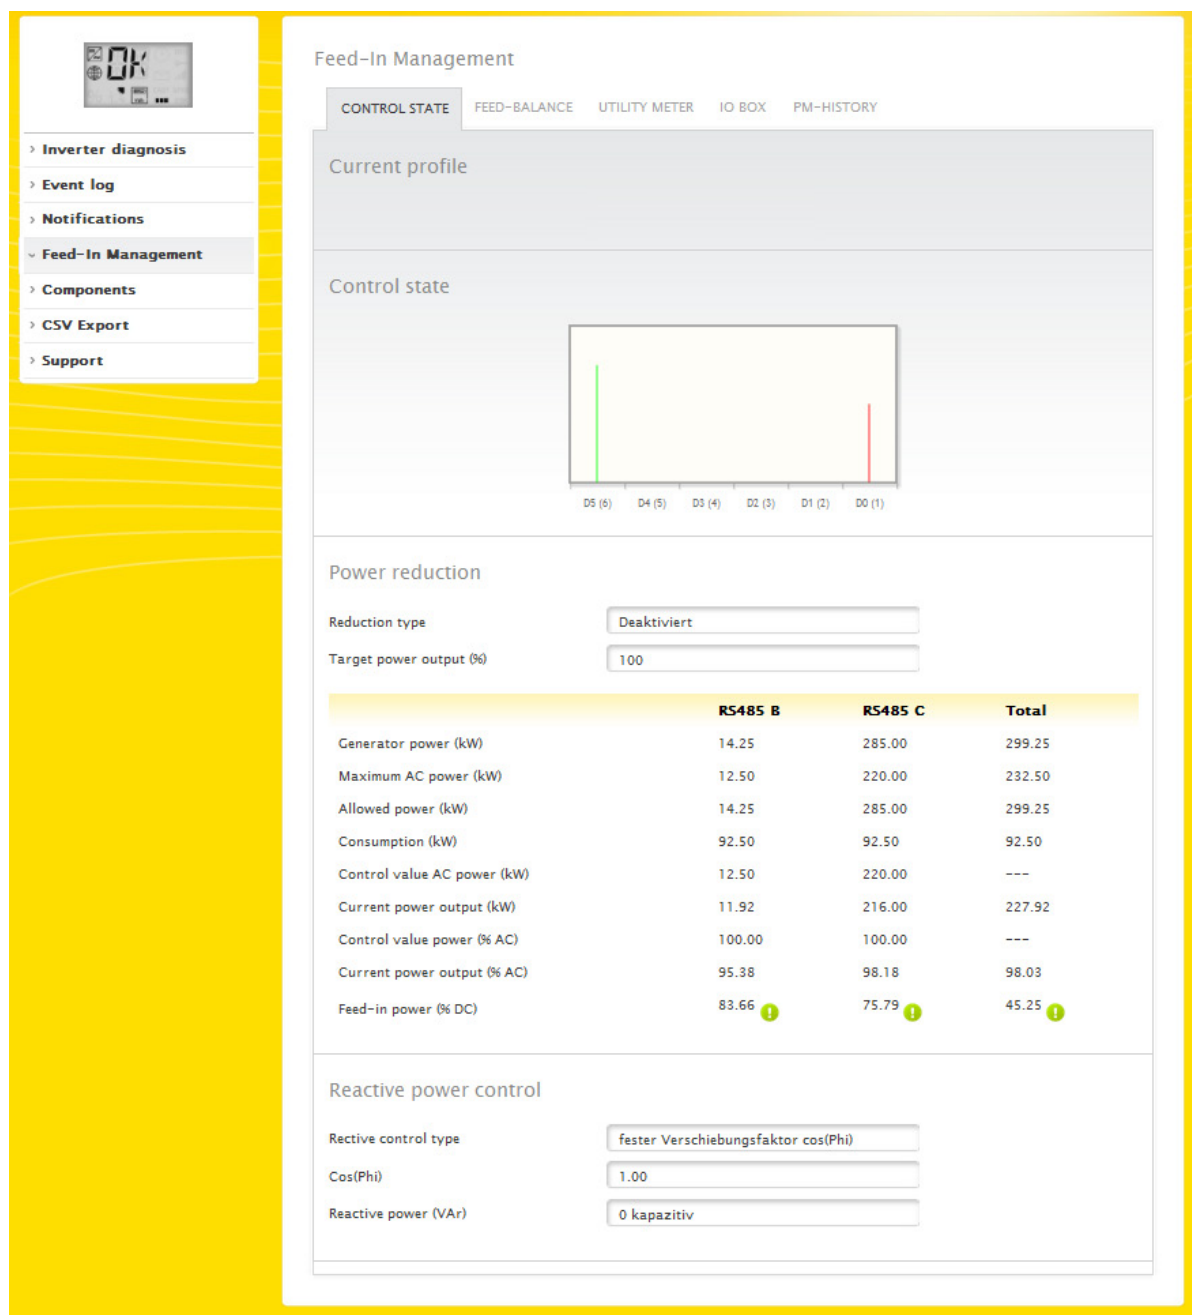


Fig.: Feed-In Management - Control State

The inverter control can be analyzed and adjusted in the [Diagnostic | Feed-In Management](#) settings section.

There is also a **10% Diagnosis Function** to simulate a dynamic reduction to 10%.
The values are displayed in the table.

Note!



The 10% Diagnosis Function can only be used when the 70% Fixed Reduction has been activated.

Explanation of the Symbols and Values in the Power Reduction Section

The following values are displayed in the Power Reduction section:

Type of Reduction:

The type of reduction configured in Configuration | Special Functions | Feed-In Management is displayed here.

Target power output %:

The current reduction level is displayed here as a percentage of the power output.

The detailed values for the individual bus connections and for the total plant are displayed in the following table. The individual buses (RS485 a-c) are displayed depending on which bus is assigned to control the inverters.

The column **Total** always corresponds to the plant total and reflects the value from the grid connection point. The consumption values are displayed in all of the columns, but only the plant total is taken into account.

Note!



The values from the individual inverters are calculated per bus and for the entire plant.

Generator power (kW):

The generator power corresponds to the module output of the inverter that is connected to this data bus. This value results from the total of the partial outputs entered in the field generator power under configuration | Devices | Configuration. This kW values is used when calculating the output reduction (e.g.: the 70% reduction).

Maximum AC power (kW):

The maximum AC power of the inverter(s) depends on the device. Refer to the inverter specifications for this value and configure it in the field Maximum AC power under configuration | Devices | Configuration.

Allowed power (kW):

This kW value is the maximum amount of power that is allowed at the grid connection point. The value is calculated based on the generator output and the current power output.

Consumption (kW):

This value is calculated from the consumption meters and refers to the entire plant. The values displayed in the respective bus column only refer to the plant total and are not taken into account in the corresponding columns. The consumption value is normally subtracted from the allowed power from the entire plant.

Control value power (kW):

This value is calculated by the Solar-Log™ and is the maximum current power output from the inverters. It is used for the current target power output.

Note:

The values recorded may differ due to rounding in the calculations by the Solar-Log™ (technical reasons).

Current power output (kW):

The value refers to the current output generated by the inverter per interface (column) and for the entire plant.

Control value power (% AC):

The Solar-Log™ calculates the control value power (kW) as a percentage of the maximum AC power and relays this to the inverters.

Current power output (AC%):

The value indicates the total output generated as a percentage of the maximum AC power for the inverter or all of the inverters on a bus.

Feed-in power (% DC):

This value is the current amount of feed-in power as a percentage of the generated output.

Explanation of the Symbols in the Feed-in power (% DC) column:

The feed-in power value is in the target power range with a tolerance of -2% to +1%.



The feed-in power value is below the target value allowed. Generally, this means that the output allowed at the grid connection point is not being achieved due to low irradiation or high self-consumption.



This means that the value is above the target value allowed.

If the red triangle is only displayed at a bus and entire plant has a green symbol, this means that only this bus is over the target value allowed. However, the plant totals do not go over the target value because of self-consumption.

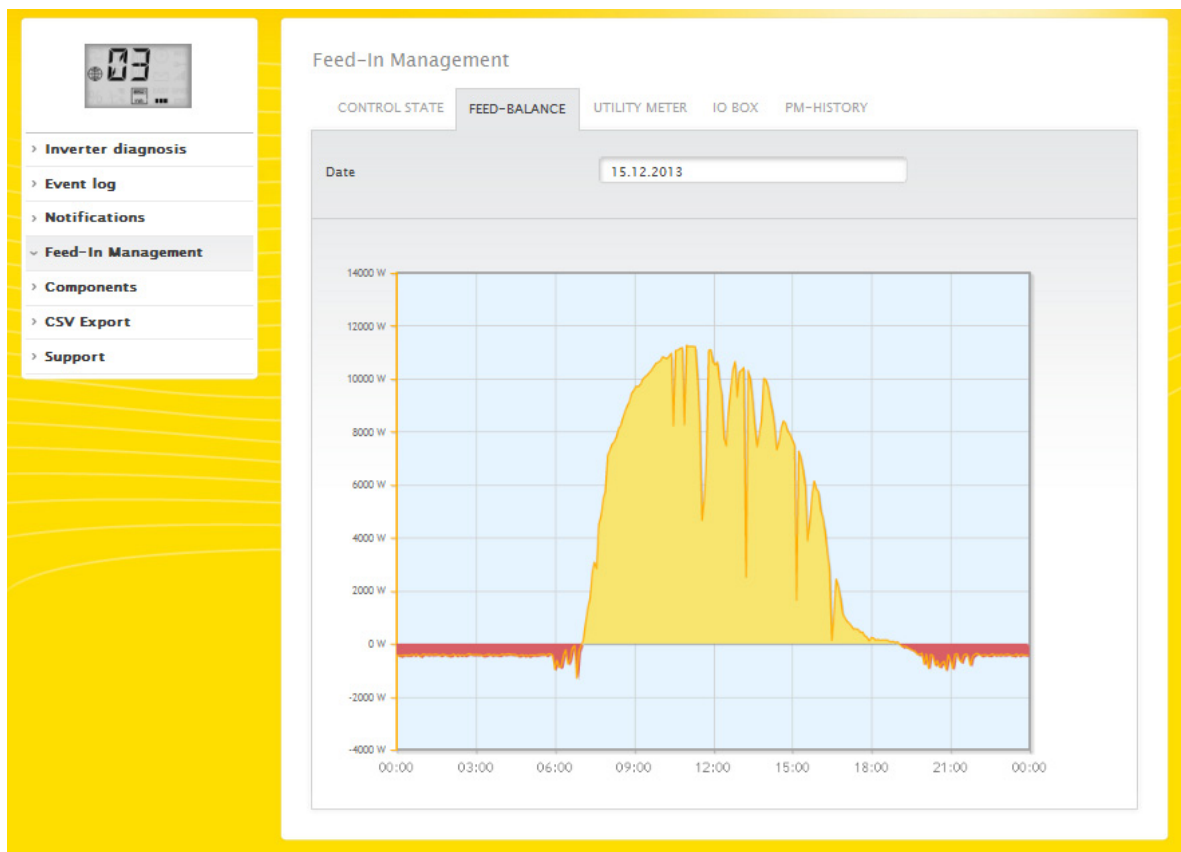


Fig.: Feed-In Management - Feed-balance

The **Feed-balance** tab displays when power output was fed into the grid and when power was purchased from the grid. Negative values mean that the power was purchased from the grid and positive values mean that power was fed into the grid.

The power reductions are displayed in a table with two columns in the **PM History** tab.

- Event from - to:
 - The time and date that a power reduction was activated.
- Power reduction:
 - The power reduction as a percentage.

Two additional tabs can be accessed via the Power Management section:

Utility Meter

I/O Box

There is a detailed guide for this in the "Special Functions | Power Management" chapter of the Installation Manual.

2.10.5 Accessing the SCB Monitor (only Solar-Log 2000)

To access the SCB Monitor menu, go to **Diagnostic | SCB Monitor**.

Components

SO METER ALARM CONTACT **SCB MONITOR**

SCB string overview

Device: 0: Test-SCB1

Messung vom 11.12.13 09:04:40

Analog no.	Type	Value
1	Current	no data
2	Current	no data
3	Current	no data
4	Current	no data
15	Current	no data
16	Current	no data
17	Current (total)	no data
18	Voltage (total)	no data

Digital no.	Value
1	Keine Daten
2	Keine Daten

Fig.: SCB string overview

The **SCB String Overview** is displayed in a split-screen window. The connected devices (SCBs) can be individually accessed in the top screen via the pull-down menu.

The bottom screen displays the current measurements of the individual strings based on the analog and digital number.

Note!



The SCB Monitor menu only appears when a SCB is connected. It is also only available with the Solar-Log 2000.

2.10.6 Accessing components

To access the [Components](#) menu, go to [Diagnostic | Components](#).

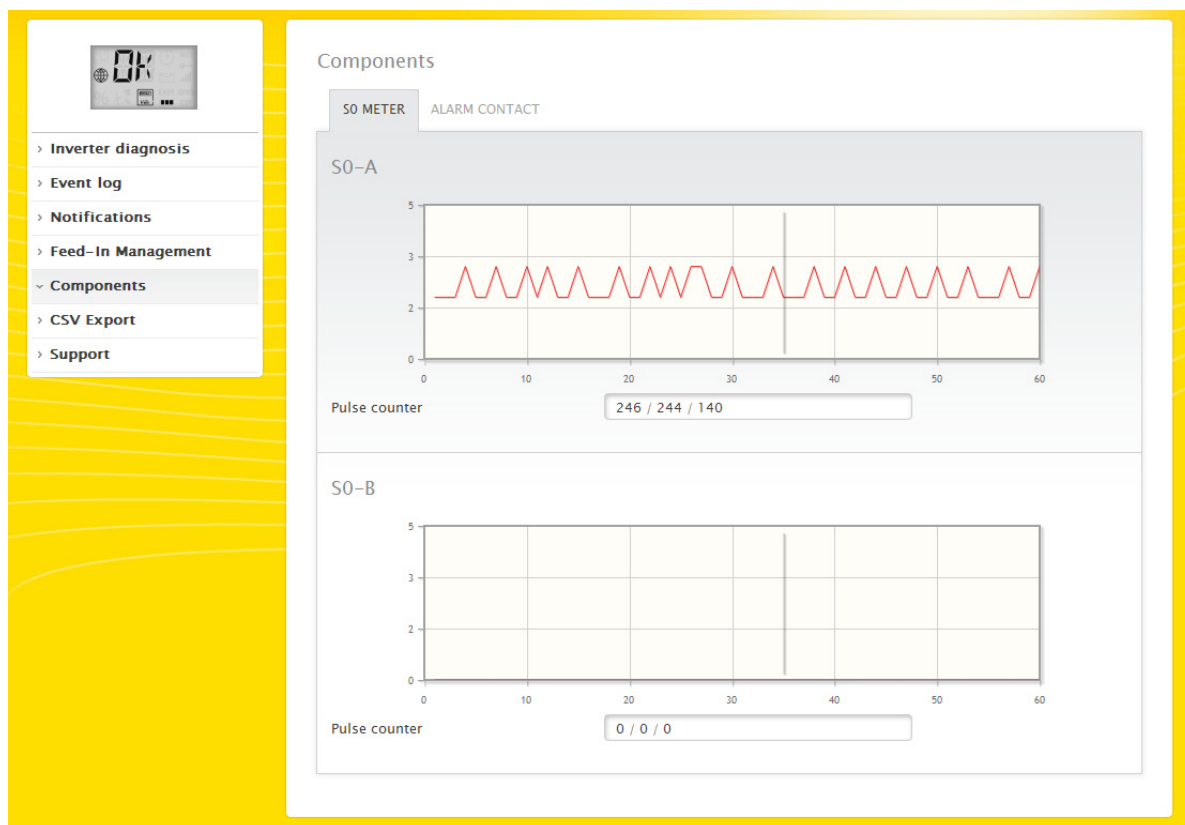


Fig.: Components - SO meter on interface A and B

The following tabs are available in the [Components](#) menu:

- SO meter (see Fig.: Components - SO meter on interface A and B)
- Alarm contact (only with the Solar-Log™ 2000) (see Fig.: Alarm contact)
- Wireless Package (only when connected and the Wireless package visible has been activated) (See Fig.: Connection Test - Wireless Package)

All of the SO meters connected to the Solar-Log™ are listed in the [Diagnostic | Components | SO-Meter](#) menu. The following values are displayed in the Pulse meter box:

- Total number of pulses for the SO meter since the last restart of the Solar-Log™ (first number)
- Number of pulses since the menu has been accessed (second number)
- Pulse number interval in a minute (third number)

Note!



The Solar-Log™ restarts every night to reorganize the data. This means the total number of pulses for the SO meter is reset to zero every night.

The [Diagnostic | Components | Alarm contact](#) menu is displayed in a split-screen window.

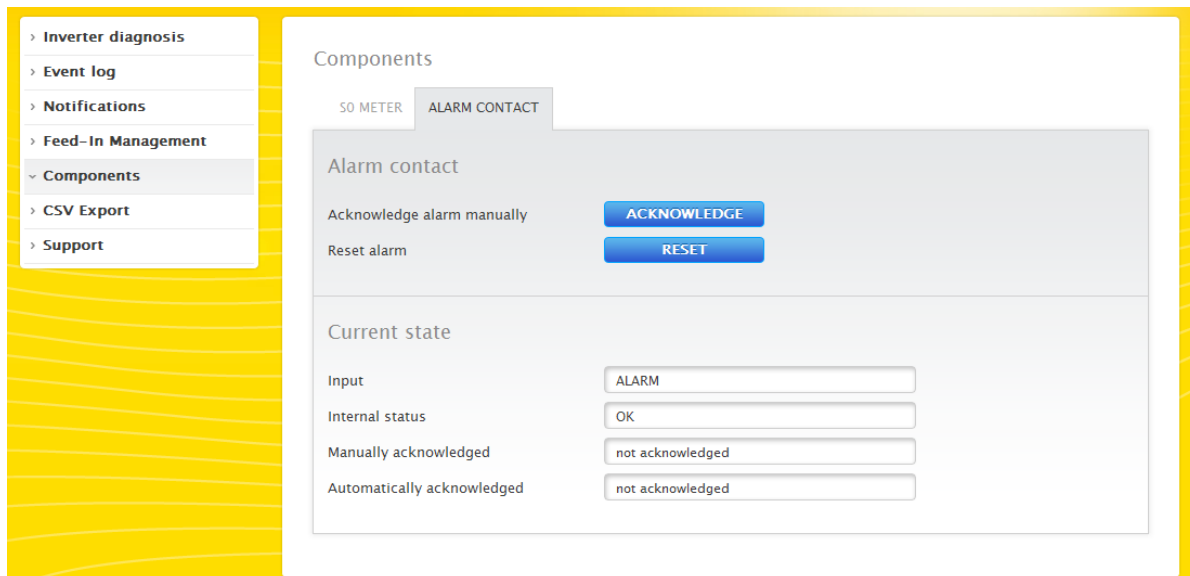


Fig.: Alarm contact

In the [Alarm contact](#) part at the top, you have the option to manually acknowledge the alarm or to reset it.

In the [Current Status](#) part at the bottom, you can see the information in regard to the input of the notification (e.g. alarm), the Internet status (e.g. OK) and if the notification has been manually or automatically acknowledged.

Note!



The alarm contact is only available with the Solar-Log 2000.

You can access the Wireless Package test function from the [Diagnosis | Components | Wireless Package](#).

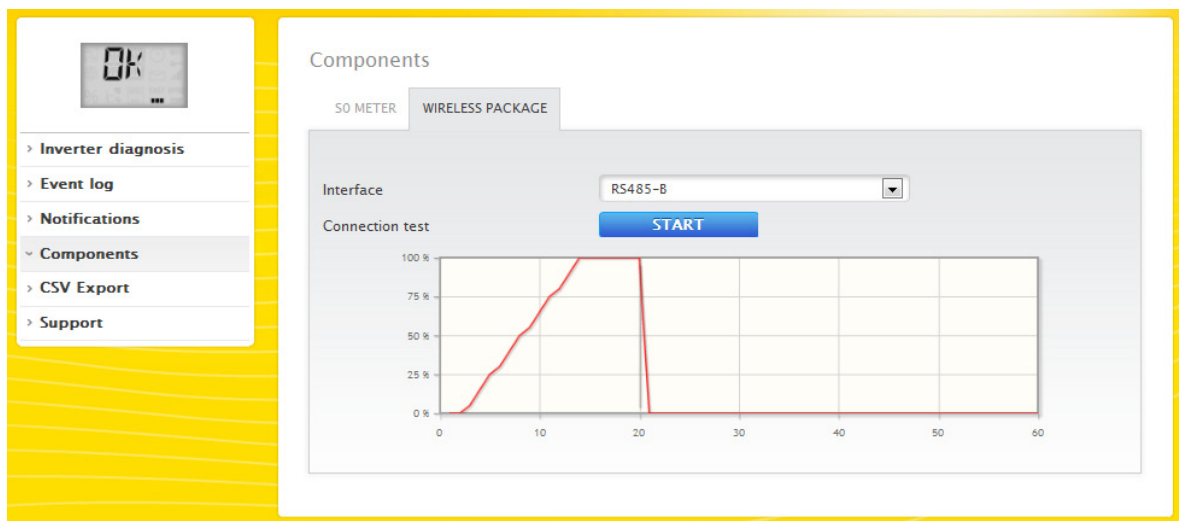


Fig.: Connection test - Wireless Package

To perform a connection test a Wireless Package has to be connected to the Solar-Log™, the interface with the Wireless Package has to be activated in the [Configuration | Devices | Definition](#) menu and the inverter has to be selected. (See the RS485 Wireless Package Installation Instructions).

Select the interface that the Wireless Package is connected to and press the Start button for the connection test.

The test is successful when the line goes to 100% percent and remains there.

Note!



Successful data transfers can only be guaranteed when the wireless connection is permanently at 100%.

Note!



Refer to the Installation Manual for the installation and configuration of the Wireless Package.

2.10.7 Accessing CSV Export

To access the CSV Export menu, go to [Diagnostic | CSV Export](#).

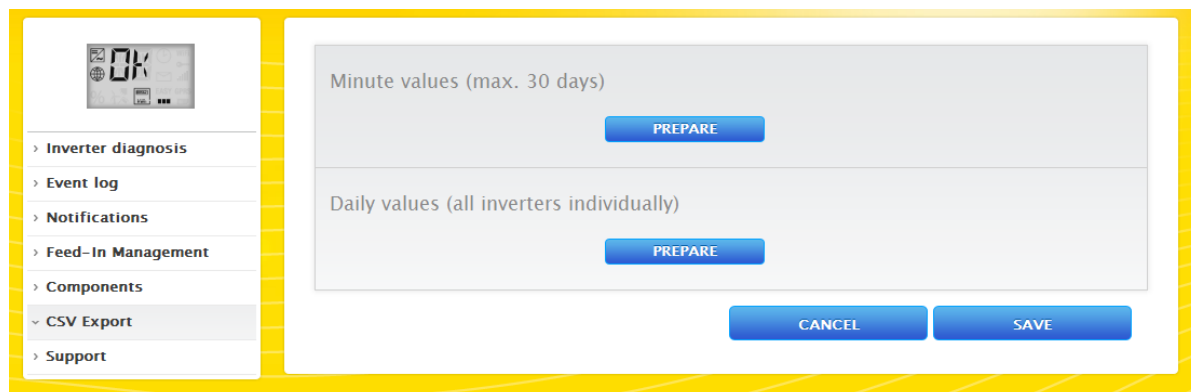


Fig.: CSV Export

You can download a CSV file from your plant from the [CSV Export](#) menu. You can select between [minute values](#) or [daily values](#) for the CSV file.

When Minute Values are selected, the file contains only a maximum of 30 days' worth of values. When selecting Daily Values, all of the inverters are individually listed, but only the end-of-the-day value is documented.

The CSV file with minute values is in a table format and contains the 5-minute values from the last 30 days and the Pac and DC values from the individual inverters and also from every MPP tracker.

The CSV file with day values is in a table format and contains the day values from every individual inverter since the start of the plant's operation (since plant monitoring with the Solar-Log™ started).

Note!



Files in the CSV format can be created with simple text editors or spreadsheet programs like MS Excel or Open Office Calc.

Important:



Only a CSV file with day values can be imported and **not** a CSV file with minute values.

Important:



When importing CSV data, all of the data on the device is deleted and replaced.

2.10.8 Accessing Support

To access the [Support](#) menu, go to [Diagnostic | Support](#).

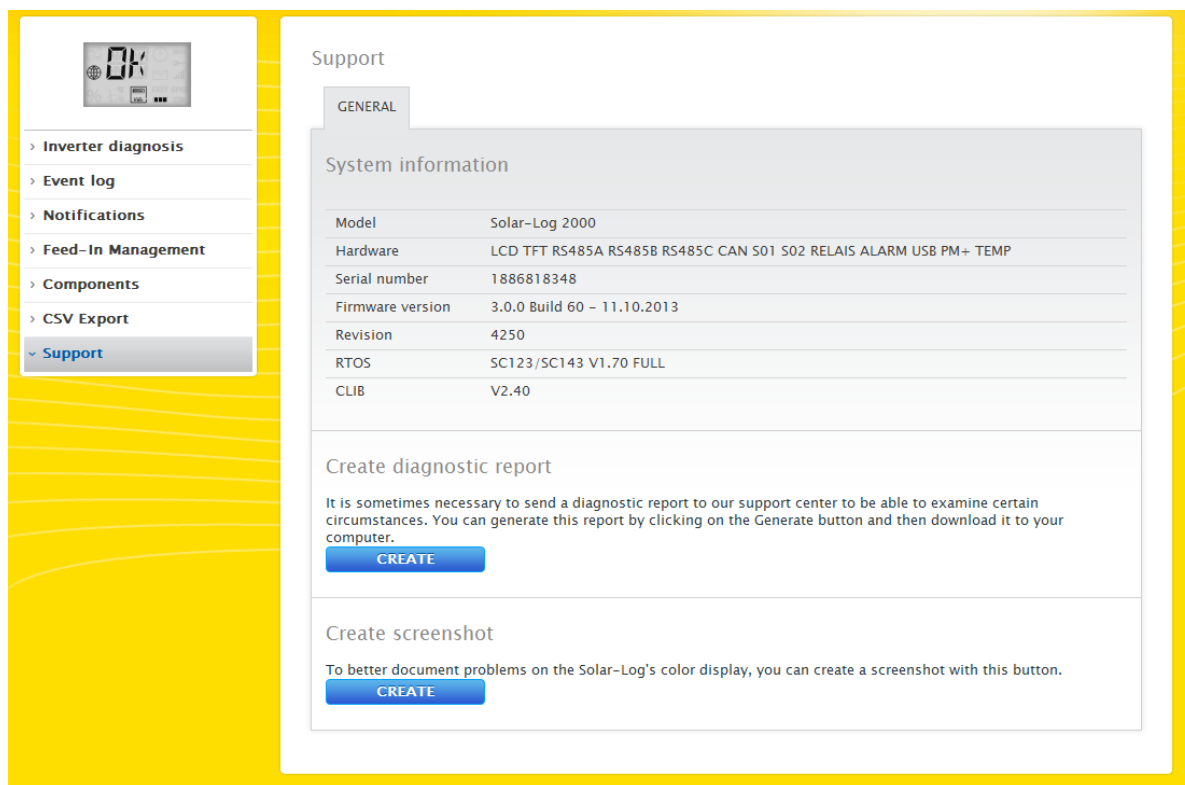


Fig.: Support - General

There are three sections under the [Support | General](#) menu:

- System Information:

The following information is available in this tab:

- Model (type of Solar-Log™).
- Hardware (hardware components available for the device).
- Solar-Log™ serial number.
- Firmware Version and date.
- Revision number.
- RTOS (Solar-Log™ operating system).
- CLIB (Version number of the Solar-Log™ library used).

- Creating diagnostic reports:

You have the option to create and download a diagnostic report. This can be sent to Solar-Log support for analysis. (See Fig.: Support - General.)

- Creating screenshots:

You have the option to create and download screenshots of the display in this section. This can be used to document errors on the Solar-Log's internal display. (See Fig.: Support - General.)

3 Notifications

3.1 Yield E-mail

All three Solar-Log models—300, 1200, 2000—come with an e-mail program that can send a daily overview of the day's performance to two different e-mail addresses (maximum of 57 characters, separated with a semicolon).

The settings are configured under the [Configuration | Notifications](#) menu.

Click on the [Recipient tab](#) to enter the recipient's e-mail address or set up text message (SMS) notifications.

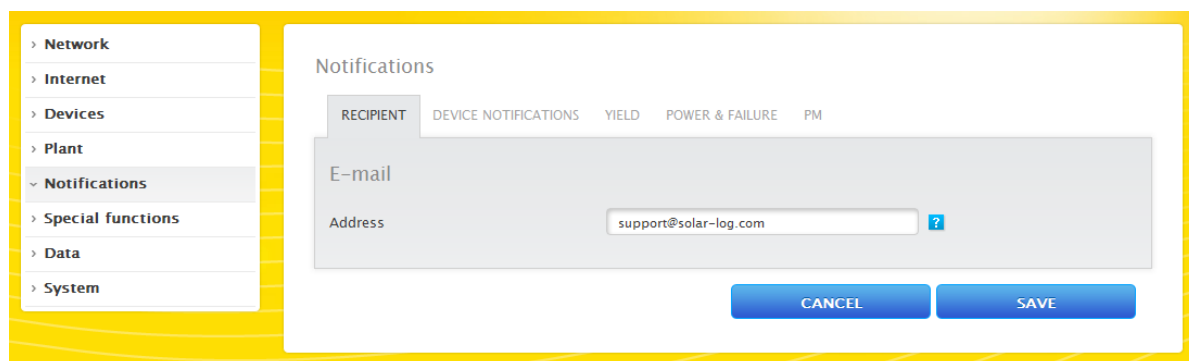


Fig.: Entering the recipient's e-mail address.

In the **Yield** tab, you can define yield notifications per e-mail or text message (SMS).

The screenshot shows the 'Notifications' configuration window with the 'YIELD' tab selected. The left sidebar contains a menu with options: Network, Internet, Devices, Plant, Notifications (selected), Special functions, Data, and System. The main area is divided into two sections. The top section, 'Messages by e-mail', has a 'Sending time' dropdown menu open, showing options: 'Yield overview (all INV & groups)', 'Deactivated', 'Yield overview short', 'Yield overview (all INV)', and 'Yield overview (all INV & groups)'. The bottom section, 'Text message (SMS) notifications', has a toggle switch set to 'Deactivated' and a 'Sending time' dropdown set to '22:15'. Both sections have checkboxes for days of the week (Monday through Sunday), all of which are checked. At the bottom are 'CANCEL' and 'SAVE' buttons.

Fig.: Defining Notification times and setting types

The time frame for notifications can be defined here.

There are many types of settings:

- Deactivated
- Yield overview short
- Yield overview (all INV)
- Yield overview (all INV & groups)

Note!



See the chapter "Notification Settings" in the Installation Manual for additional information on the notification function.

3.1.1 Explanation of the individual E-mail Functions:

Deactivated

- When no e-mail notifications are to be sent.

Yield overview short

- The yield data from the entire plant is totaled and displayed for the day, month and year. (See Fig.: Screenshot of a yield message)

Day:

Total	0.95 kWh
Spec.	0.01 kWh/kWp
Target	154.8 kWh
Act. yield	0 %
Overall yield meter	78.95 kWh
Consumption meter	0.00 kWh

Month:

Total	2842 kWh
Spec.	47.3 kWh/kWp
Max	254 kWhMax
Average	142 kWh
Target	3100 kWh
Act. yield	91 %

Year:

Total	6448 kWh
Spec.	47.3 kWh/kWp

Fig.: Example of a yield message

Yield overview (all INV)

- Yield data is totaled for the entire plant with the totals for every individual inverter (also SO meters) broken down by day, month and year. This is then displayed in HTML format as a table. (See Fig.: Yield overview (all INV) in HTML format)

	Day				Month						Year	
	Total	Spec.	Target	Act. yield	Total	Spec.	Max.	Average	Target	Act. yield	Total	Spec.
Total	0.95 kWh	0.01 kWh/kWp	154.8 kWh	0 %	2842 kWh	47.3 kWh/kWp	254 kWhMax	142 kWh	3100 kWh	91 %	6448 kWh	107 kWh/kWp
Kostal	0.95 kWh	0.06 kWh/kWp	38.71 kWh	2 %	711 kWh	47.4 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1612 kWh	107 kWh/kWp
WR 1	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp
WR 2	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp
WR 3	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp

	Type	Daily total
Gesamtverbrauch	Overall yield meter	78.95 kWh

	Type	Daily total
Total	-	0.00 kWh
Verbrauchszaehle	Consumption meter	0.00 kWh

Fig.: Yield overview (all INV) in HTML format

Yield overview (all INV & groups)

- Yield data is totaled for the entire plant with the totals for every plant and its inverter (also SO meters) broken down by day, month and year. This is then displayed in HTML format as a table. (See Fig.: Yield overview (all INV & groups) in HTML format)

	Day				Month						Year	
	Total	Spec.	Target	Act. yield	Total	Spec.	Max.	Average	Target	Act. yield	Total	Spec.
Total	0.95 kWh	0.01 kWh/kWp	154.8 kWh	0 %	2842 kWh	47.3 kWh/kWp	254 kWhMax	142 kWh	3100 kWh	91 %	6448 kWh	107 kWh/kWp
Dach West	0.95 kWh	0.06 kWh/kWp	38.71 kWh	2 %	711 kWh	47.4 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1612 kWh	107 kWh/kWp
Kostal	0.95 kWh	0.06 kWh/kWp	38.71 kWh	2 %	711 kWh	47.4 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1612 kWh	107 kWh/kWp
Dach Ost	0.00 kWh	0.00 kWh/kWp	116.1 kWh	0 %	2130 kWh	47.3 kWh/kWp	190 kWhMax	106 kWh	2325 kWh	91 %	4835 kWh	107 kWh/kWp
WR 1	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp
WR 2	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp
WR 3	0.00 kWh	0.00 kWh/kWp	38.71 kWh	0 %	710 kWh	47.3 kWh/kWp	63.6 kWhMax	35.5 kWh	775 kWh	91 %	1611 kWh	107 kWh/kWp

	Type	Daily total
Gesamtverbrauch	Overall yield meter	78.95 kWh

	Type	Daily total
Total	-	0.00 kWh
Verbrauchszaehle	Consumption meter	0.00 kWh

Fig.: Yield overview (all INV & groups) in HTML format

Explanation of the individual sections of the Yield Overviews

Subject: The Solar-Log serial number and time and date

Day:

Field	Explanation Text
Total	The actual amount of grid feed for the day in kWh.
Specific	Yield specific. The energy yield divided by the amount of generator power installed. (Values are normalized to 1 kWp)
Max	The maximum power in Kw
Target	The yield in kWh which can be achieved according to the forecast.
Actual Yield	The percentage of days on which the target was achieved, the daily yield achieved as percentage, in relation to total/target.
Total yield meter	displays the plant's total yield. (Lines only appear when a total yield meter is available.)
Consumption meter	The consumption is displayed with this meter. When several meters are used, the consumption will be displayed according to the configuration settings. (This line only appears when a meter is connected)

Month:

Field	Explanation Text
Total	The actual amount of grid feed for the day in kWh.
Specific	Yield specific. The energy yield divided by the amount of generator power installed. (Values are normalized to 1 kWp)
Max	Displays the maximum daily production for this month in kWh.
Medium	The average daily production which was achieved for this month.
Target	The yield in kWh which should have been achieved up to the current day.
Actual Yield	Percentage of the monthly target that has already been achieved up to the current day. The month target already achieved as a percentage and the total-to-target ratio.

Year:

Field	Explanation Text
Total	The actual amount of grid feed for the day in kWh.
Specific	Yield specific. The energy yield divided by the amount of generator power installed. (Values are normalized to 1 kWp)

3.2 Performance Monitoring

To monitor different sized inverters, the Solar-Log™ normalizes the value from every inverter to 1 kWp. The Solar-Log™ uses the amount of generator power set in [Configuration | Devices | Configuration](#). The generator power is equivalent to 100% and the value here is normalized to 1 kWp.

Example plant:

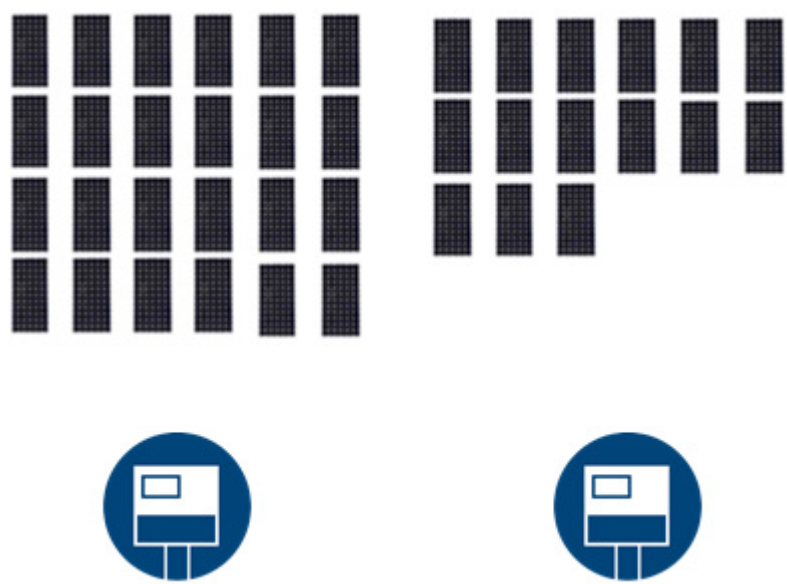


Fig.: Performance Monitoring: Example plant with two inverters

Inverter 1, Inverter 1 house	Inverter 2, Inverter 2 house
Generator Power: 25* 220W (modules) = 5500 Wp	Generator Power: 15* 220W (modules) = 3300 Wp
Module Field 1	Module Field 1

The Solar-Log™ compares all of the inverters that are located in the same module field.
[Settings for the module fields are under Configuration | Devices | Configuration](#).

Geräte

KONFIGURATION REIHENFOLGE

Gerätekonfiguration

Gerät: 1: Kostal ?

Modell: Kostal

Adresse / Seriennummer: 1

Modulfeld, Leistung & Bezeichnung

Maximale AC-Leistung: 14000 ?

Pac-Korrekturfaktor: 1000 ?

	Modulfeld	Generatorleistung	Bezeichnung
Gerät		15000 ?	Kostal
MPP-Tracker 1	1	5000	String 1
MPP-Tracker 2	1	5000	String 2
MPP-Tracker 3	1	5000	String 3

ABBRECHEN SPEICHERN

Fig.: Configuring module fields

Performance Monitoring Configuration under Configuration | Notifications.

Notifications

RECIPIENT DEVICE NOTIFICATIONS YIELD POWER & FAILURE PM

Performance and Failure Monitoring

Device: 5: WR 6

Performance Monitoring: ☒ Activated

Monitoring parameters

Monitoring begin: 11

Monitoring end: 13

Minimum amount of feed-in power: 20

Deviation as a percentage: 10

Fault duration in intervals: 6 = 30 Minutes

Maximum number of message to be sent per day: 3

Snow cover: ☒ ?

Notification as

E-mail: ☒
 Text message (SMS): ☐
 Relay: ☐

SAVE ALL... SAVE MULTIPLE...
 CANCEL SAVE

Fig.: Configuring performance monitoring

The output measured from the inverters is contrasted with the generator capacity that is listed in the system.

A notification is sent (by email) when the deviation exceeds the amount configured (for example 10%) over a set time period (for example 30 minutes).

Note!



For performance monitoring configurations, see the chapter "[Configuring Notifications](#)" in the [Installation Manual](#).

3.2.1 Performance Monitoring Notification

Example Notification:

Module Field 1 - Inverter 1 'Inverter 1 House'

IRV = 4916W (Inverter 2, Inverter 2 House'), IAV = 3950W, deviation = 19.65 %

The notification contains the following information:

Module field:

The module field which was affected or at least the module field in which a deviation was detected.

Deviating inverter:

Inverter 1

IRV:

The reference value that is used to contrast inverters. It comes from the most effective operating inverter, the value is in W.

IAV:

The amount of output from inverter with a deviation.

Dev:

The amount of deviation as a percentage of the reference value.

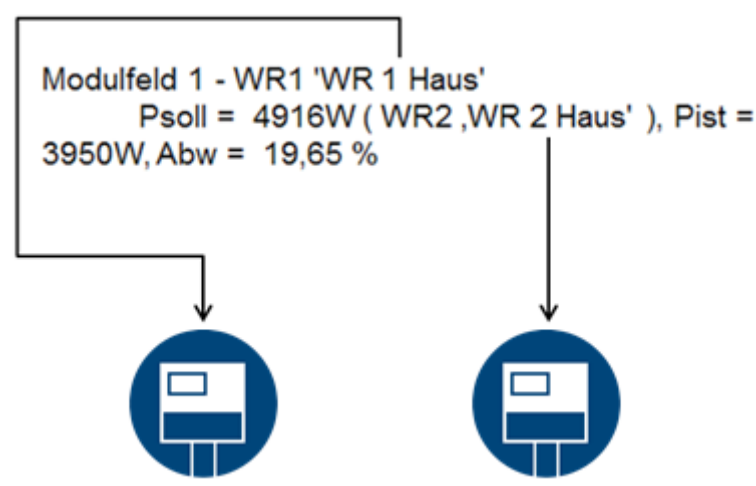


Fig.: Performance Monitoring with notification and inverter

Inverter 1, Inverter 1 house		Inverter 2, Inverter 2 house
Generator Power=	5500 Wp	3300 Wp
Current power output	= 3950 W	= 2950 W
Current efficiency	= 71.81 %	= 89.39 %
Inverter with a deviation		Reference Inverter

Inverter has generated the most power with its value of 0.8939 and is thus used as the [Reference Inverter](#).

3.2.2 Calculation and Explanation of the Notification

In regard to the reference inverter, inverter 1 is compared to all of the inverters in the same module field (in the example only output is used).

A deviation of 19.65% is determined based on the comparison of the generator capacity and IRV forecast.

Calculating the Deviation for Inverter 1

Deviation Calculation

Inverter 1 IRV calculation	(5500 x 89.39)100= IRV 4916 W
Efficiency of Inverter 1	(3950 W: 5500 W)* 100= 71.81%
This corresponds to 71.81 % of the generator power or a value of 0.7181 kWp.	

Deviation as a percentage

IRV Inverter 1 - IAV Inverter 1	4916 W -3950 W= 966 W
Deviation as a percentage	(966 W: 4916 W)* 100= 19.65 %

Inverter 2 is used as the reference inverter since it was the most effective one at the time of the measurement. Inverter 1 should have produced an output of 4916 W based on the measurement and the calculations comparing all of the inverters in the same module field. The actual output was 3950 W, a deviation of 19.65%. This caused a notification to be sent.

4 Operating the Solar-Log 1200 and 2000 via Touch Display

The Solar-Log 1200 and 2000 are equipped with a touch screen that allows power output, yield history and environmental performance to be quickly displayed. Data can also be transferred to and from the USB sticks via the display.

Note!



Never use sharp, pointed objects on the touch screen!
This will damage the screen's delicate surface.

4.1 Navigating from the touch screen

After the Solar-Log 1200 or 2000 has started, the overview view is displayed.

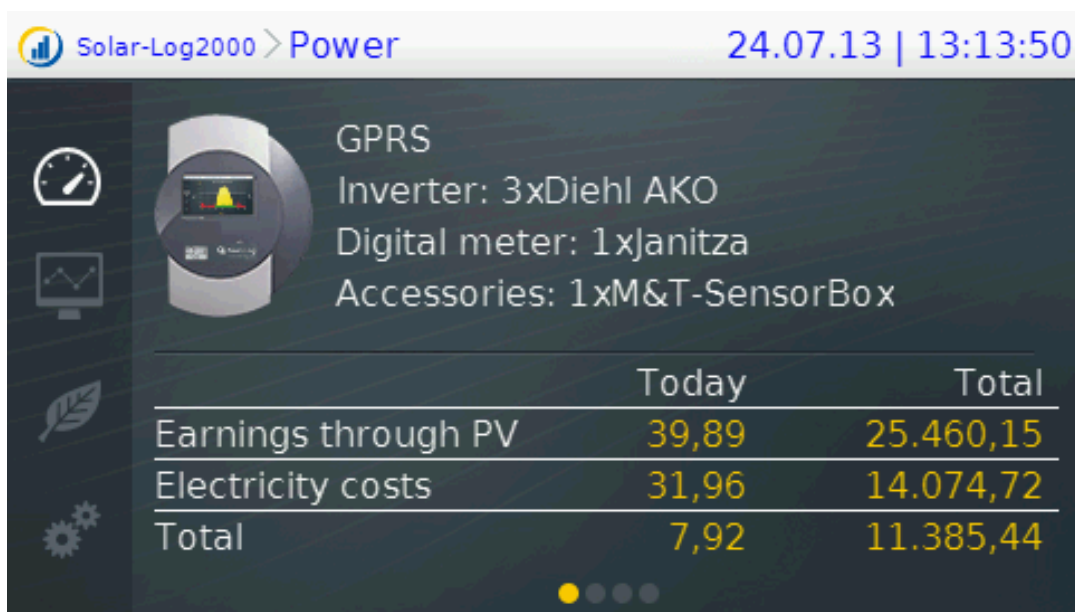


Fig.: Start page of the display

The following is displayed in this view:

the header bar with

- the Solar-Log™ module
- navigation heading
- date
- time

The following symbols are displayed in the left-side navigation menu and can be selected for additional options:



Power



Yield History



Environmental per-
formance



Settings

the display window with:

- Solar-Log™ type
- the connected devices (inverter, power meter etc.)
- a table with the following values: earnings from PV, purchased power (only with connected meters) and the total for the day and overall.

Swipe your fingers on the display, either from right to left or left to right, to switch to the next view.

There is a split-screen window for the energy balance, environmental performance and yield history menus.

The dots at the bottom of the screen() indicate the current page of the menu.

You can always view the power output for the current day by tapping on the top area with the time and date. The current Dashboard is displayed by tapping on it twice.

4.2 Accessing the Dashboard

From the **Power** menu, you can swipe to go from the start page to the Dashboard.

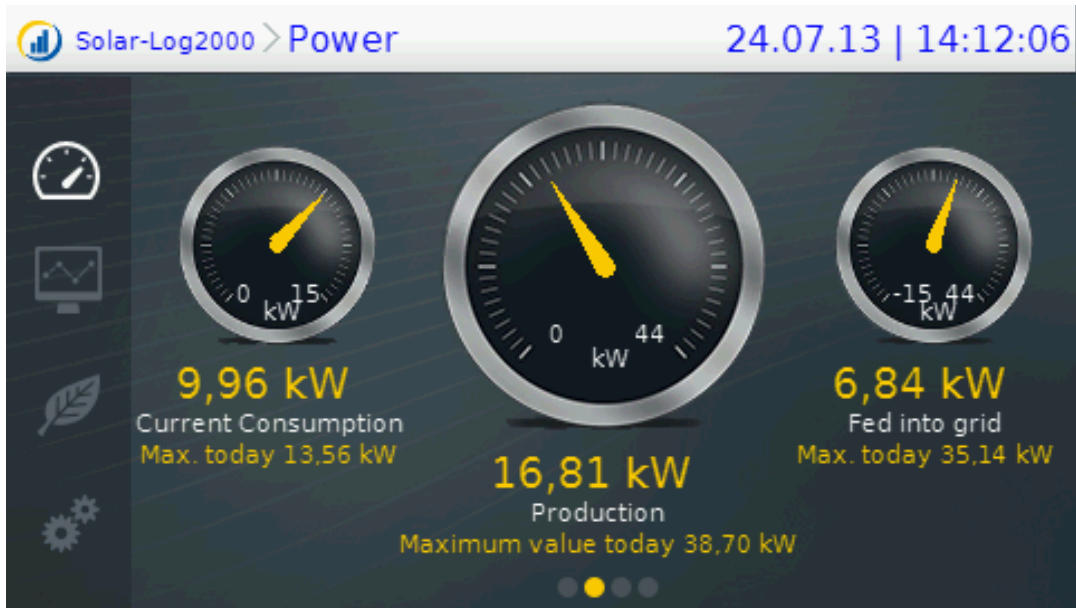


Fig.: Dashboard view

In the view from left-to-right:

Current consumption and today's consumption high (only with connected meters).

Current production and today's production high

Current grid feed and today's grid feed high (only with connected meters)

4.3 Accessing the Energy Balance

From the **Power** menu, you can swipe from the start page to go to the Energy Balance.

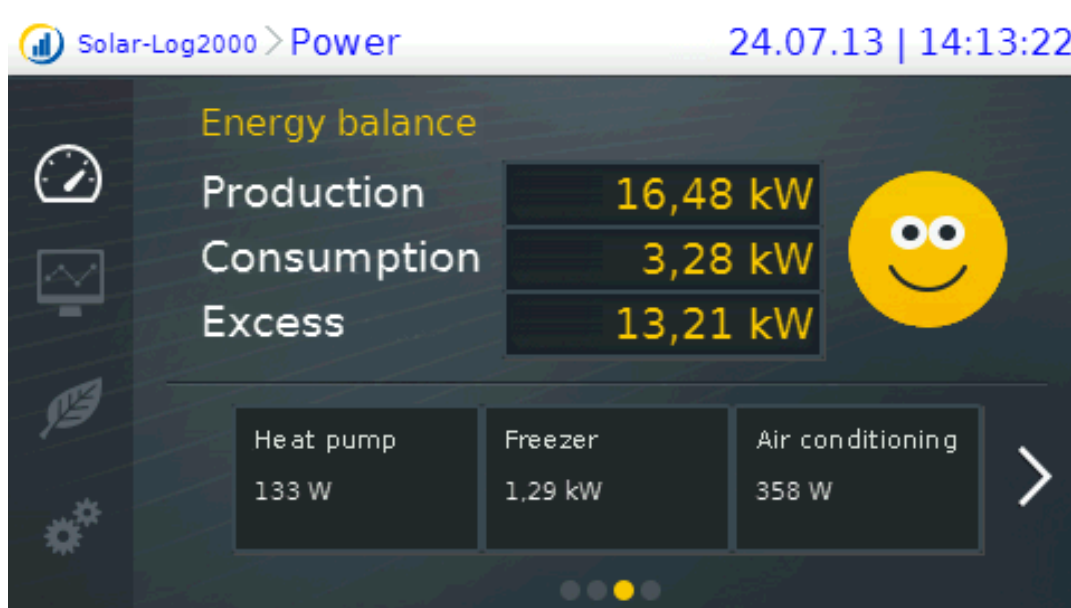


Fig.: Energy Balance view

The energy balance is a split-screen window. The top part of the window displays the following values:

Production:

- Current plant production.

Consumption:

- Current power consumption (only with connected meters).

Surplus:

- Current grid feed (only with connected meters).

The bottom window displays the connected appliances with their current consumption values. Use the arrows to display additional appliances.

Note!



Values are only visible if appliances are connected via networked "smart plugs," relays or the Solar-Log™ Meter.

Note!



Up to 10 appliances can be connected and configured.

4.4 Accessing Forecast

Swipe in the **Power** menu to go to the forecast.

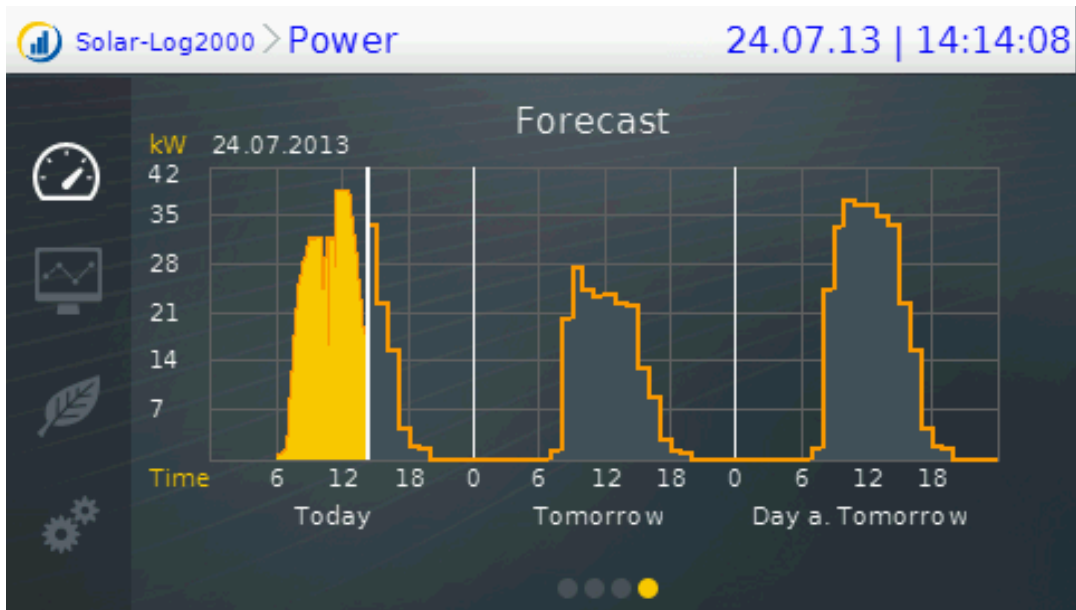


Fig.: Forecast view

In the forecast view, weather data is accessed in 60-minute intervals and based on this data, the values for the current day and the next two days is calculated and shaded in gray.

This is automatically asked with the Classic 2nd Edition. This has to be entered in the inverter details with the Commercial Edition.

Note!



It is required to be registered and logged into our portal Classic 2nd or Commercial Edition to display the forecast on the Solar-Log™.

Note!



Plant location and the alignment and inclination of the module need to be configured in the portal to receive daily weather updates.

The weather data is transfer to the Solar-Log™ in the morning and in the evening.

4.5 Accessing Yield history

Access the **Yield History** from the navigation menu on the left by tapping on the symbol.

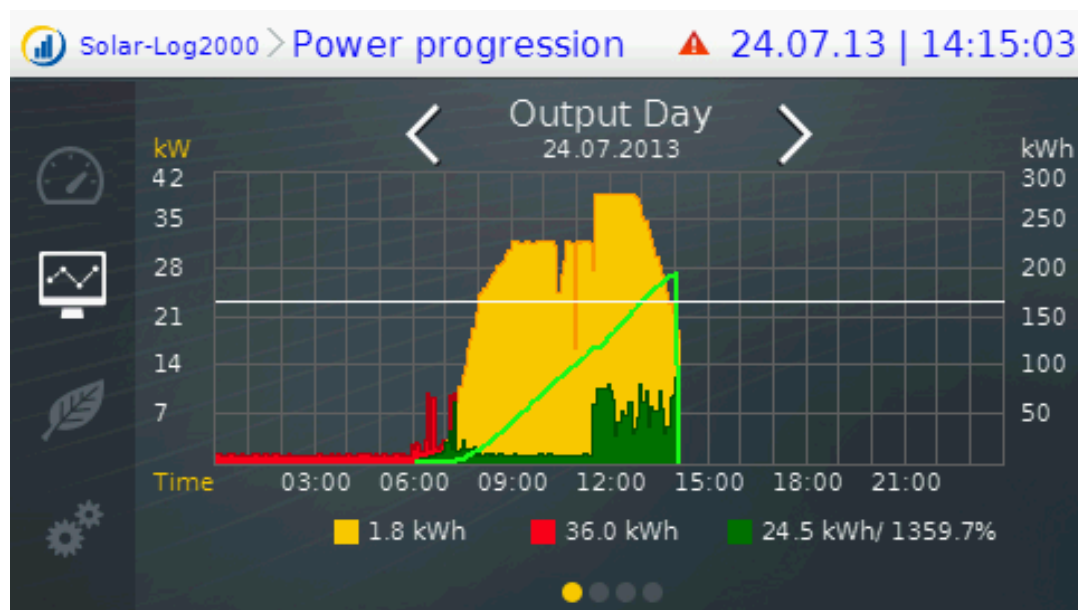


Fig.: Yield history - Day

The Yield history view is displayed in two sections:

In the top part, you have the option, depending on the display mode (year, month, year), to swipe on the display to go to the exact date.

In the bottom part, you can swipe to the next display mode: day, month, year or total.

4.6 Accessing Environmental performance

Access the Environmental Performance from the navigation menu on the left by tapping on the symbol.



Fig.: Environmental performance - Day view

The Environmental performance view is displayed in two sections.

The top display contains:

- Day
- Month
- Year
- Total

The bottom display contains the values for your plant's environmental contributions:

- Avoided CO2 emissions
- Oil saved
- Reduced nuclear waste
- Trip with an electric car in kilometers
- Trees saved
- Households (energy needs for a family of four)

4.7 Accessing the USB menu

Access the USB menu from the navigation menu on the left, by tapping on the Settings symbol.

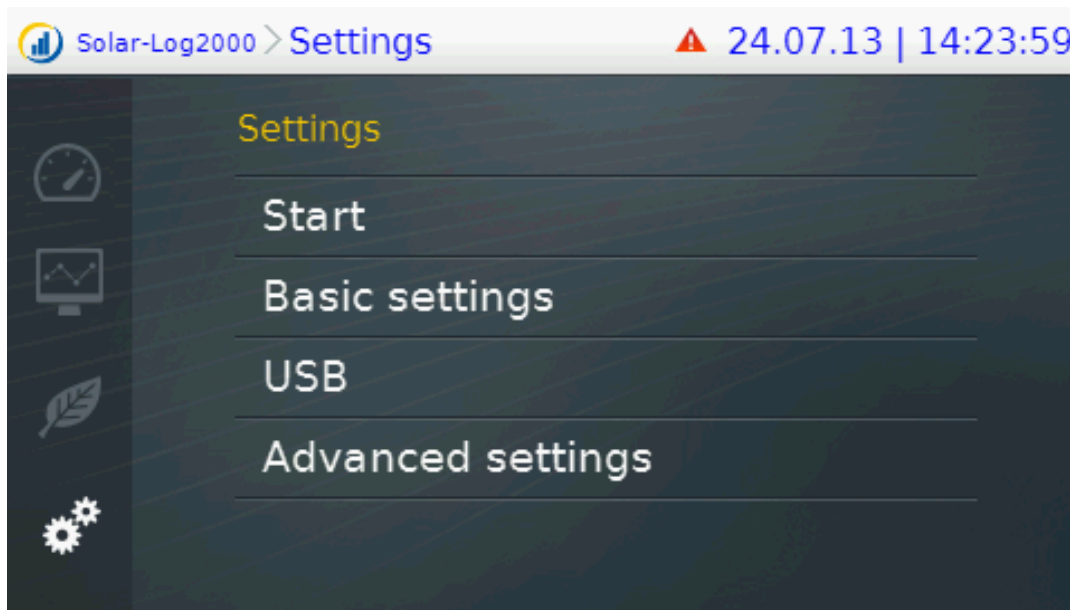


Fig.: Menu Settings

This brings you to the main **Settings** menu. Tap on **USB**.

The sections:

- Start
- Basic settings
- Advanced settings

are described in detail in the chapter "Direct Device Configurations" in the Installation Manual.

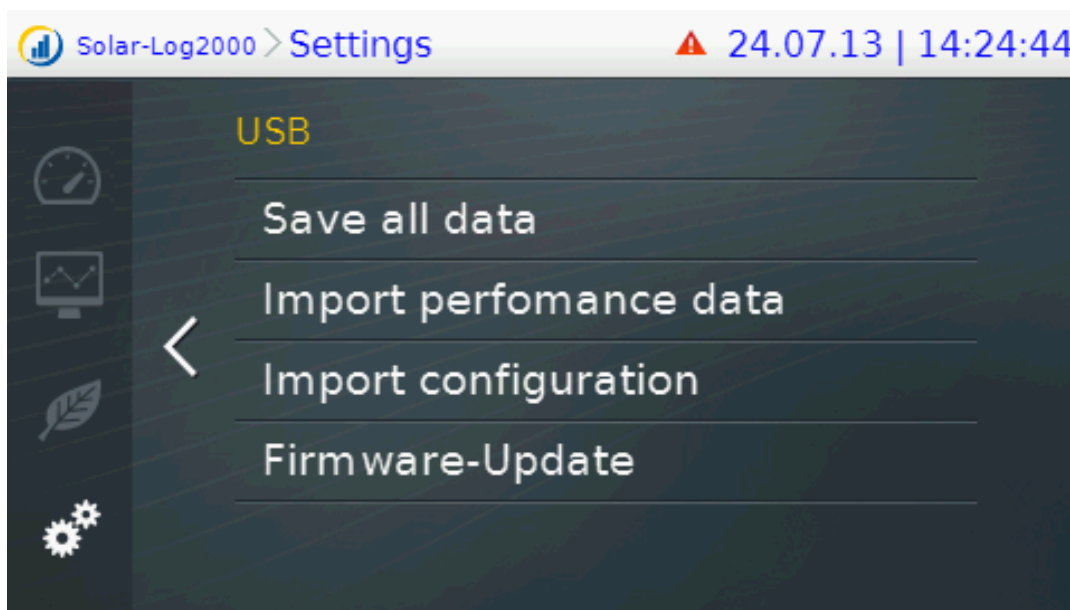


Fig.: USB menu

You have the following options from the USB menu:

Save all data:

- The Solar-Log™ creates the folder "backup" on the stick and saves the solarlog_backup.dat and solarlog_konfig.dat files there.

Import yield data:

- The Solar-Log™ searches for a valid solarlog_backup.dat file on the USB stick and imports it.

Import configuration:

- The Solar-Log™ searches for a valid solarlog_konfig.dat file on the USB stick and imports it.

Firmware update:

- The Solar-Log™ searches for a firmware update to import and then starts the update.

Note!



For technical reasons, only the last 30 days of minute values are saved when making a data back-up. To ensure the preservation of all data files, including the minute files, we recommend registering the Solar-Log™ on either our "Classic 2nd Edition" or "Commercial Edition" web portals.

Note!



As soon as a USB stick has been plugged in, the folder named "Backup" is automatically created on the USB stick. At the end of the day, the Solar-Log™ saves a daily backup with the date in this folder.

Important:

The Solar-Log™ does **not** overwrite the daily backup files. Thus it is important to regularly backup or exchange the USB stick before it runs out of space.

Important:



When importing data from the USB stick, all of the data on the device is deleted and replaced.

Note!



Import the current configuration before importing saved yield data.

5 Operating the Solar-Log 500 and 1000 via the Display

5.1 Display Solar-Log 500

In addition to the web interface described above, the Solar-Log 500 also has a two-line text display on which the current power data can be displayed.

The following values are displayed at regular intervals.

Name	Unit	Meaning
Feed-in power Pac	W	Current amount of feed-in power P on the AC side
Generator Power Pdc	W	Current amount of feed-in power P on the DC side (Solargenerator) If only one multi-string inverter has been selected, the individual strings are displayed separately.
YDay	kWh	Daily yield
Yspec	Wh/Wp	Specific power "performance in kW/kWp." After that, all of the values will be comparable in regard to their specific output. Diminishing module performance can also be recognized.

5.2 Display Solar-Log 1000

The Solar-Log 1000 comes with a touchscreen that allows for quick and easy access to performance data, diagnostic information and inverter logs. It also allows a data transfer to be performed via USB.

Note:



Never use sharp, pointed objects on the touch screen!
This will damage the screen's delicate surface.

Note!



The screen saver is activated after a few minutes. You can set the number of minutes to wait until the screen saver is activated in the configuration menu. Refer to the Installation Manual for information on the settings in the configuration menu.

5.3 How to Navigate with the Touchscreen

Tap your finger on the display.

- After touching the screen, the overview is displayed.

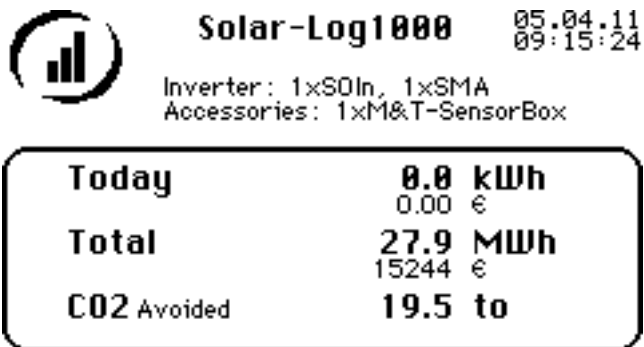


Fig.: Home Screen

After the display of the Solar-Log 1000 has been touched, it automatically displays the yield for the current day, the total yield for the plant and the amount of CO2 avoided.

Tab your finger on the display again.

- The main navigation screen is displayed.

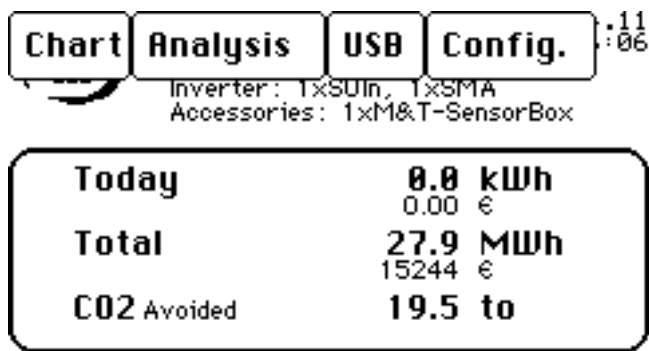


Fig.: Display's Main Navigation Screen

The main navigation screen displays four sections:

Graphic

The yield data can be accessed here.

Diagnosis

Here, you can access the system notifications, acknowledge alarm messages and adjust self-consumption.

USB

If the device is not connected to a local area network (LAN), a USB stick can be used to backup and re-store data. The USB connection can also be used to update the firmware on the Solar-Log™.

Configuration

The configuration menu allows you to change settings and to make adjustments to the device's software. (Refer to the Installation Manual for more information)

5.4 Accessing Yield data

Tap your finger on the display.




- The main navigation screen is displayed.

Tap on Graphic.

- Different yield periods are displayed.

Tap on the overview to return to the overview of the current values.

5.4.1 How to navigate between different overviews

Symbol	Meaning
 	Arrow button to move to the previous and next displayed time period.
	The "back" button closes the window that is currently open.

5.4.2 The meaning of the values in the overviews

The following table contains the values and their meaning in alphabetical order.

Name	Unit	Meaning
CO ₂	to	The amount of carbon dioxide emissions that have been avoided based on the power output.
Y-current	kWh	The current yield for the selected period
Yield Current/Target	%	The current value displays the ratio of the current yield to the target yield for the selected period.
Y-max	kWh	The maximum yield for the selected period.
Y-min	kWh	The minimum yield for the selected period.
Y-avg	kWh	The average output for the selected period.
Energy	kWh	The total output for the day
Y-target	kWh	The Solar-Log™ runs a forecasting statistics function that specifies a certain target value for each month. If the target value or higher has been achieved, the forecasted output has been produced.
Y-spec	Wh/Wp	The energy yield divided by the maximum power. This value is a good reference value when comparing plants.
Pac	Watt	Current amount of feed-in power P on the AC side.
Pdc	Watt	Current amount of feed-in power P on the DC side (Solargenerator) If only one multi-string inverter has been selected, the individual strings are displayed separately.
P-max	Watt	Maximum output for the day.
EF	%	The current efficiency from the generator power and feed-in power. The manufacturer's specification on the inverter's efficiency can be checked here.

5.4.3 Daily Graph

Tap **your finger on the display**.

- The main navigation screen is displayed.

Tap on **Graph** and then on the **Day**.

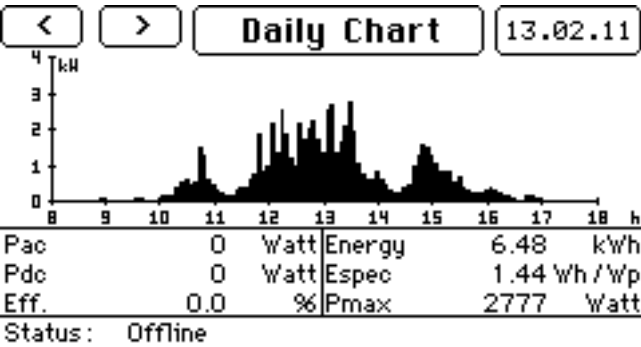


Fig.: Daily Graph

Tap on the day's date to display the information for that day.

Tap on the **Daily Graph** to display the yield values for the connected inverters.

- The settings menu window is displayed.

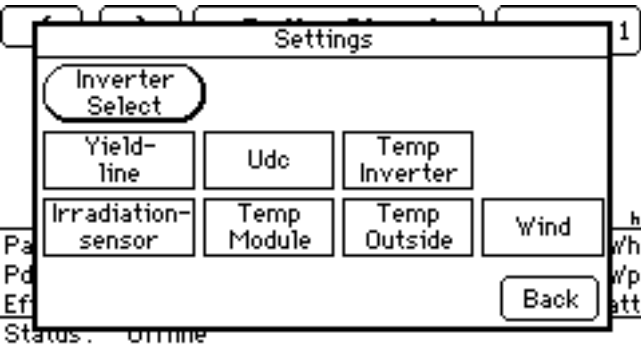


Fig.: Graphic Settings

Tap on **INV Selection** to select the desired inverter.

- The total plant menu window is displayed.

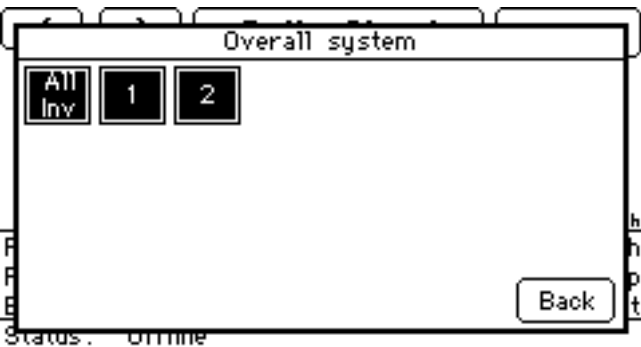


Fig.: Total Plant Graphic

Select the desired inverter and tap on "Back."

- The values from the selected inverter are displayed.

Tap on the **Daily Graph** to display the additional measured values.

Select the desired view and tap on "Back."

- The selected setting is displayed.
- If you selected the **yield curve**, the target value is also displayed.

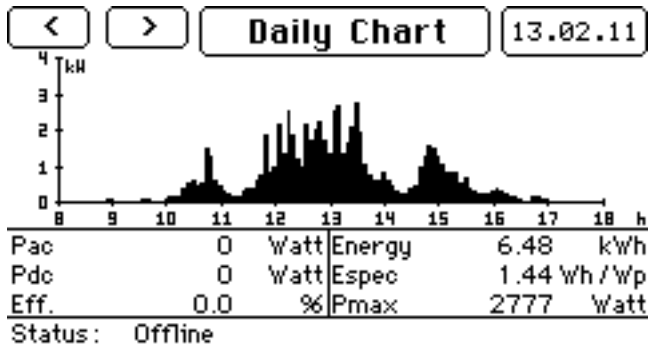


Fig.: Daily Graph

Tap on the **display** to access the main **Main Navigation**.

5.4.4 Monthly Graph

Tap your finger on the display.

- The main navigation screen is displayed.

Tap on **Graph** and then on the **Month**.

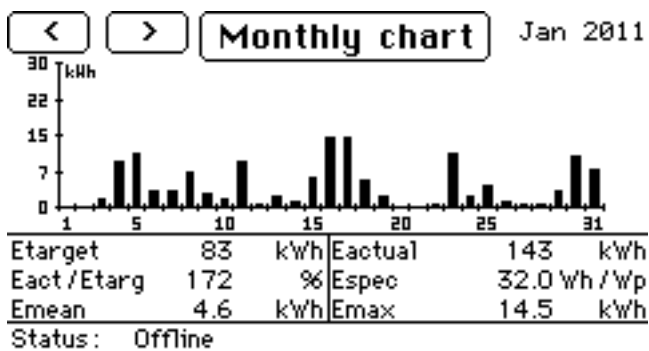


Fig.: Monthly Graph

The monthly graph displays the current values for the selected month.

Tap on the displayed bar to view the **Daily Graph** for the selected day.

Tap on the **Monthly Graph** to display the yield values for the connected inverters.

- The **Total Plant** menu window is displayed.

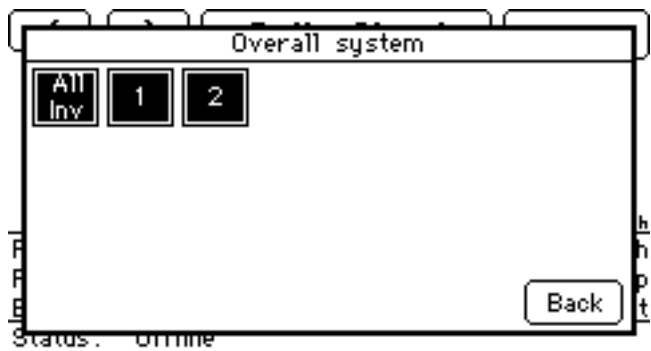


Fig.: Total Plant

Select the desired inverter and tap on [Back](#).

- The values from the selected inverter are displayed.

[Tap](#) on the display to access the Main Navigation.

5.4.5 Yearly Graph

[Tap](#) your finger on the display.

- The main navigation screen is displayed.

[Tap](#) on [Graph](#) and then on the [Year](#).

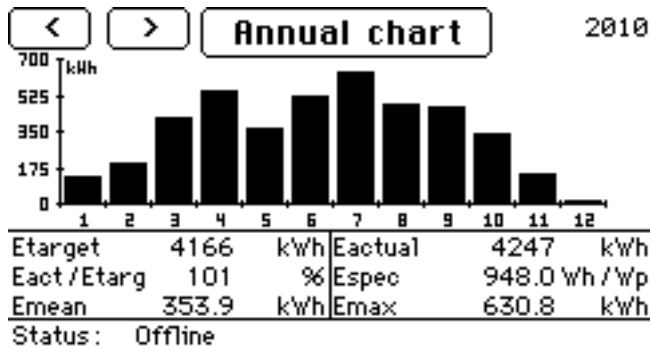


Fig.: Yearly Graph

The yearly graph displays the current values for the selected year.

[Tap](#) on the displayed bar to view the Monthly Graph for the selected month.

[Tap](#) on the [Yearly Graph](#) to display the yield values for the connected inverters.

- The total plant menu window is displayed.

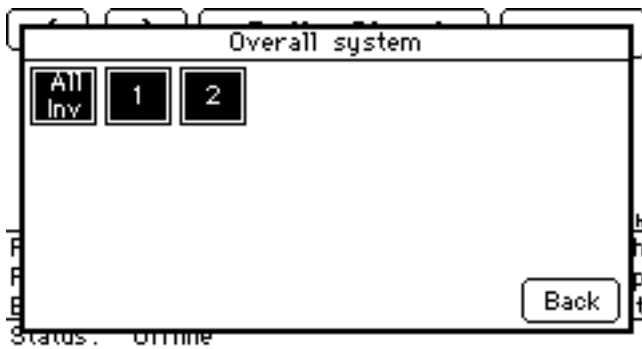


Fig.: Total Plant

Select the desired inverter and tap on **Back**.

- The values from the selected inverter are displayed.

Tap on the display to access the Main Navigation.

5.4.6 Overall Graph

Tap your finger on the display.

- The main navigation screen is displayed.

Tap on **Graph** and then on the **Total**.

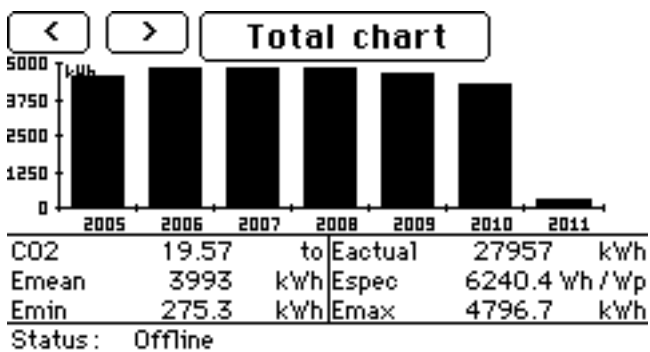


Fig.: Total Graph

The total graph displays the values for the plant since it has been monitored by the Solar-Log™.

Tap on the displayed bar to view the Yearly Graph for the selected year.

Tap on the **Total Graph** to display the yield values for the connected inverters.

- The total plant menu window is displayed.

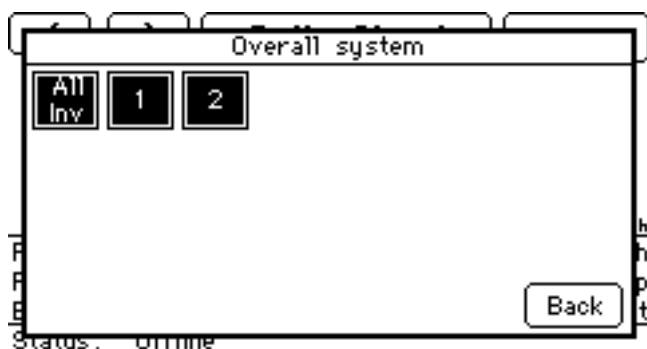


Fig.: Total Plant

Select the desired inverter and tap on [Back](#).

- The values from the selected inverter are displayed.

[Tap](#) on the display to access the Main Navigation.

5.4.7 Large External Display

[Tap](#) your finger on the display.

- The main navigation screen is displayed.

[Tap](#) on [Graph](#) and then on the [Large external display](#)

- The detailed view of the current yield values is displayed.

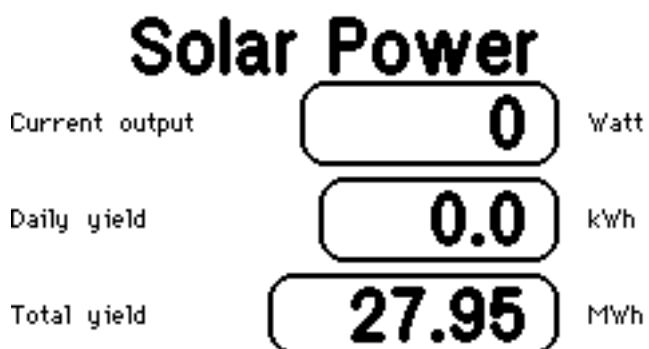


Fig.: Large External Display

The large external display presents the current output of your plant.

[Tap](#) on the display to access the Main Navigation.

5.4.8 Power Balance

If a power meter with the type "consumption meter" is set up on the Solar-Log 1000, the Power Balance menu appears on the touchscreen.

Tap your finger on the display.

- The main navigation screen is displayed.

Tap on **Graph** and then on the **Power Balance**.

- The detailed view of the current yield values is displayed.

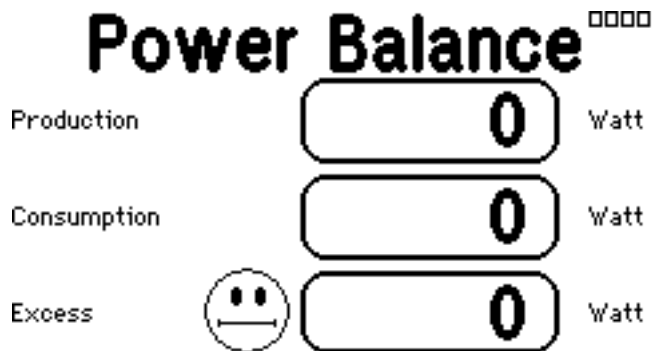


Fig.: Power Balance

The Power Balance displays the current yield, the current consumption and the difference between these two values.

If more electricity is obtained from the grid than what is fed into the grid, the excess value will be negative and a frowning face is displayed.

Tap on the display to access the Main Navigation.

5.5 Accessing the Diagnosis

The diagnosis menu allows you to access to device logs. You can view all of the errors, faults and status changes from the connected inverters.

5.5.1 Accessing Notifications

Tap your finger on the display again.

- The main navigation screen is displayed.

Tap on **Diagnosis** and then on **Notifications**.

- A list of notifications appears on the display.

Messages				1/1
04.04.11	12:20:47	Inverter offline	Email	NOK
04.04.11	11:55:29	Inverter offline	Email	NOK
04.04.11	11:20:37	Inverter offline	Email	NOK
				^
				▼
			Choose	End

Fig.: Notifications

Select the desired notification from the list.

- The details of the notification are displayed.

Meldung
Solar-Log - Ausfallmeldung Wechselrichter vom 18.03.11 - 11:45:00 S01N1 'Verbrauch' ist offline, evtl. ausgefallen! Unbedingt prüfen!
Weiter

Fig.: Notification details

Tap on **Next** to display the next notification or to return to the notification list.

Tap on **End** to close the notification list.

5.5.2 Display the Inverter Events

Tap your finger on the display again.

- The main navigation screen is displayed.

Tap on **Diagnosis** and then on **INV Event Log**.

- A list of events from the connected inverters is displayed.

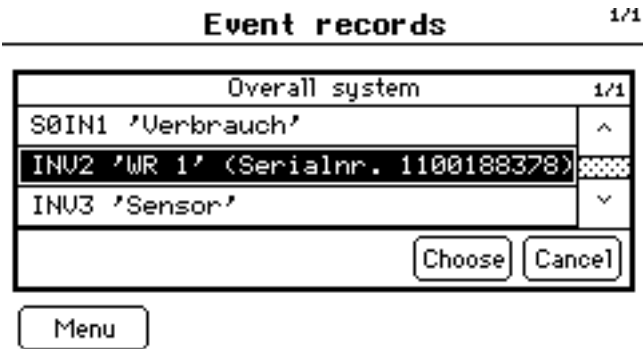


Fig.: Inverter Event Log

Select the desired inverter from the list.

- The event record for the selected inverter is displayed.

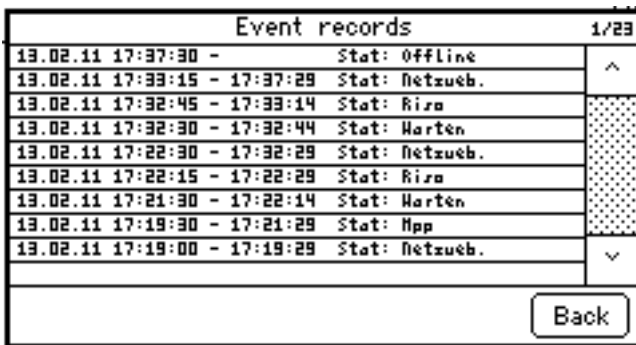


Fig.: Inverter Event Log

Tap on **Back**.

- A list of events is displayed.

Tap on **Menu**.

- The main navigation screen is displayed.

5.5.3 Handling Alarm Notifications

You can acknowledge fault notifications in this menu.

Tap your finger on the display again.

- The main navigation screen is displayed.

Tap on [Diagnosis](#) and then on [Alarm Contact](#).

- The alarm monitoring status is displayed.



Fig.: Alarm contact

Tap on [Acknowledge Alarm Manually](#).

- The alarm notification stops.

After the fault has been resolved, tap on [Reset Alarm](#).

- This resumes the operating mode.

Tap on [Menu](#).

- The main navigation screen is displayed.

5.5.4 Optimizing the consumption of self-produced power

To specifically concentrate your power consumption at times when there is sufficient power production, the

Solar-Log 1000 offers the option to automatically turn on and off up to 10 appliances as needed. The appliances are displayed as "Switches" on the display.

The control of the devices is based on the current power surplus, e.g. "production minus consumption." If no consumption meters are connected, the management is based purely on the power production values.

Note!



Refer to the Installation Manual for the switch settings or contact your installer.

5.6 Using Data Transfer with USB

If your Solar-Log 1000 is not connected to a local area network (LAN), you can use a USB stick to transfer data, event logs and settings.

The USB connection is located at the top of the Solar-Log 1000 underneath the cover. You also need a USB stick with the FAT32 format (USB 2.0).

- Remove the cover from the top of the case by pulling it forward and plug the USB stick in the port labeled USB.

5.6.1 Create a Backup

You can also use a USB stick to create a backup. You have the following selection possibilities:

- Save the yield and settings data or
- copy yield data saved on the USB stick to the device or
- copy settings saved on the USB stick to the device.

Important:



When importing data from the USB stick, all of the data on the device is deleted and replaced.

Tap your finger on the display again.

The main navigation screen is displayed.

Tap on **Diagnosis** and then on **Backup**.

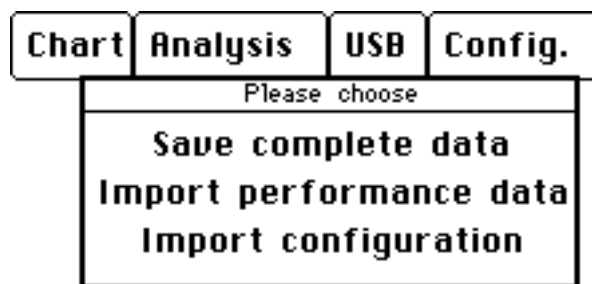


Fig.: USB Backup Selection Menu

Select the desired **Option**.

Saving all of the data



Fig.: Starting USB Backup

Tap on **Start Backup**.

- The current data from the Solar-Log 1000 is copied to the USB stick. It can take several minutes to copy all of the data depending on the amount of data.

Tap on **Cancel** if you do not want to start a backup.

- The main navigation screen is displayed.

Note!



For technical reasons, only the last 30 days of minute values are saved when making a data back-up. To ensure the preservation of all data files, including the minute files, we recommend registering the Solar-Log™ on either our “Classic 2nd Edition” or “Commercial Edition” web portals.

Import configuration

Tap on import **Configuration**

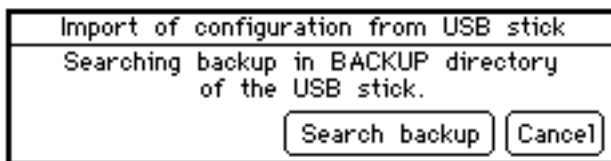


Fig.: Importing USB Configuration

Tap on **Search Backup**.

- The device searches the USB stick for a backup directory and copies the data. It can take several minutes to copy all of the data depending on the amount of data.

Tap on **Cancel** if you do not want to transfer the configuration settings.

- The main navigation screen is displayed.

Import yield data

Note!



Import the current configuration before importing saved yield data.

Tap on **Import Yield Data**.



Fig.: Importing USB Yield Data

Tap on **Search Backup**.

- The device searches the USB stick for a backup directory and copies the data. It can take several minutes to copy all of the data depending on the amount of data.

Tap on **Cancel** if you do not want to transfer the yield data.

- The main navigation screen is displayed.

Updating the firmware

The Solar-Log™ firmware can be updated via the USB connection.
Go to our website to download the current firmware version:

<http://www.solar-log.com/de/service-support/firmware.html>.

1. Select the Solar-Log 1000 and copy the firmware to the USB stick.
2. Plug the USB stick into the Solar-Log 1000.
3. Tap on **USB** in the main menu.
4. Tap on Update Firmware.

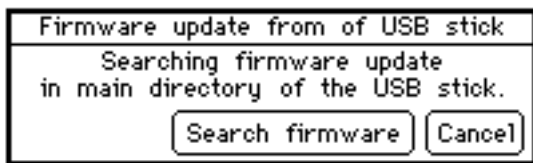


Fig.: USB Firmware Update

5. Tap on **Search Firmware**.
6. The current firmware is located on the USB stick and imported.

Note!



Clear your Internet browser's cache after the update.

7. Tap on **Cancel** if you do not want to update.
 - The main navigation screen is displayed.

5.7 Changing settings in the configuration menu

The configuration menu allows you to change settings and to make adjustments to the device's software. The device should be completely configured by your installer. However, it can happen that you need to make later changes, such as changing the password or adjusting the network settings.

- Contact your installer for changes to your configuration.
- If you would like to make the changes yourself, you can download the Installation Manual from our website.

6 Pac Correction Factor

At photovoltaic plants, several measuring points and power generators (inverters) are combined with one another. The Solar-Log™ evaluates this data and partially looks for any correlations. Since some of the components are not calibrated, deviations in the values measured can easily arise. For example, if the total amount of energy produced based on what the inverters display is compared with the values from calibrated power meters, deviations of up to 8% can arise. In practice, meters and inverters both can display too much or too little kWh. To correct these inaccuracies in the medium term, the Solar-Log™ firmware uses a PAC correction factor. The PAC correction factor is located in the [Configuration | Devices | Configuration](#) menu.

6.7.1 Calculating the PAC correction factor

All of the yield data is saved internally without the correction factor. The correction factor is only applied to the data output. The factor can therefore be adjusted at any time.

The formula for calculating the correction factor is as follows:

$(\text{Yield power meter} / \text{yield inverter}) * 1000$

If the inverter does not have a display, it is advisable to use the values which are recorded by the Solar-Log™ from a period over a week.

That is why it is recommended to leave the default PAC correction factor at 1000 initially.

The correction factor can be adjusted yearly after receiving the statement from the utility company.

Example calculation:

Inverter 1	Inverter 2	Calibrated power meter
Total energy	Total energy	Total energy
259.12 kWh	305.22 kWh	550.55 kWh
Total = 564.34 kWh		Deviation= 13.79 kWh

By comparing the values, you see that the inverters are more likely to display too much output.

7 Using Solar-Log WEB

With the Solar-Log™ WEB, you can access your plant's yield data and event log via the Internet and set yield and fault notifications to be sent to an e-mail address daily. A Solar-Log™ WEB account is required. The portal offers additional functions which can be tailored to your needs. Please contact your installer for more information or check out our website:

<http://www.solar-log.com/en/products-solutions/solar-log-web.html>.

7.1 Registering for Solar-Log™ WEB "Classic 2nd Edition"

The Solar-Log™ WEB "Classic 2nd Edition" online registration is very simple. Start your browser and go to the Solar-Log™ WEB registration site:

<http://www.solar-log.com/classic2/>

Select [Register](#) from the menu on the left.
The registration form then appears.

Solar-Log™ WEB „Classic 2nd Edition“

Anmeldung
Solar-Log™ WEB „Classic - 2nd Edition“

Anlagendaten

Seriennummer Solar-Log™: [Wo finde ich die Seriennummer?](#)

Easy Installation Code™: [Wo finde ich den Easy Installation Code?](#)

Öffentlich sichtbar: ☒ Ja ☐ Nein [Was bedeutet das?](#)

Standortdaten

Anrede:

Vorname:

Nachname:

Firma™:

Strasse / Hausnummer:

PLZ:

Ort:

Land: [Anderes Land?](#)

Bundesland:

Kontaktdaten

Email-Adresse:

Telefon™:

Mobil™:

Fax™:

Sprache:

AGB & Datenschutz

Bitte bestätigen Sie, dass Sie unsere [AGB](#) und die [Datenschutzrichtlinien](#) gelesen haben und diesen zustimmen.

☐ Ich habe die [AGB](#) gelesen und stimme diesen zu.

Bitte geben Sie das links im Bild enthaltene Kennwort ein. [Weshalb dieses Kennwort?](#)

* optionale Angaben

[SUPPORT](#)

Solare Datensysteme GmbH | D-72351 Geislingen-Blinsdorf © 2011 | Solar-Log™ WEB Version: 1.7.0

Fig.: C2 registration

Enter your device's Serial Number.
The serial number (SN) is located under the top cover.

Select whether the data should be publicly visible on the Internet or not.
Your plant information can then be viewed by other portal users. When you select "No," then you have to log on to the site with your user data that you will receive from Solare Datensysteme GmbH once the registration process has been completed.

The "Public Visibility" setting can be changed later at any time from your site's configuration menu.
Enter your location and contact information.
Confirm that you have read our General Terms & Conditions (GTC) and Privacy Policy.

Enter the password from the image. This system is used to prevent bots from trying to access our server. Confirm the information entered by clicking on [Register Now](#).

If you forgot to enter a password or entered the wrong one, a new password is automatically generated again without having to reenter all of the information.

After the registration has been successfully completed, you will receive a confirmation e-mail. After you have confirmed the registration, we will check your data and activate your account.

Note!



Accounts are only activated during the week. This can take up to 24 hours.

7.2 Accessing Plant data

Start your browser and go to the Solar-Log™ WEB start page. Enter the URL that you received in your confirmation e-mail in the address bar.

For example: <http://home10.solarlog-web.de/>

The welcome screen is displayed.

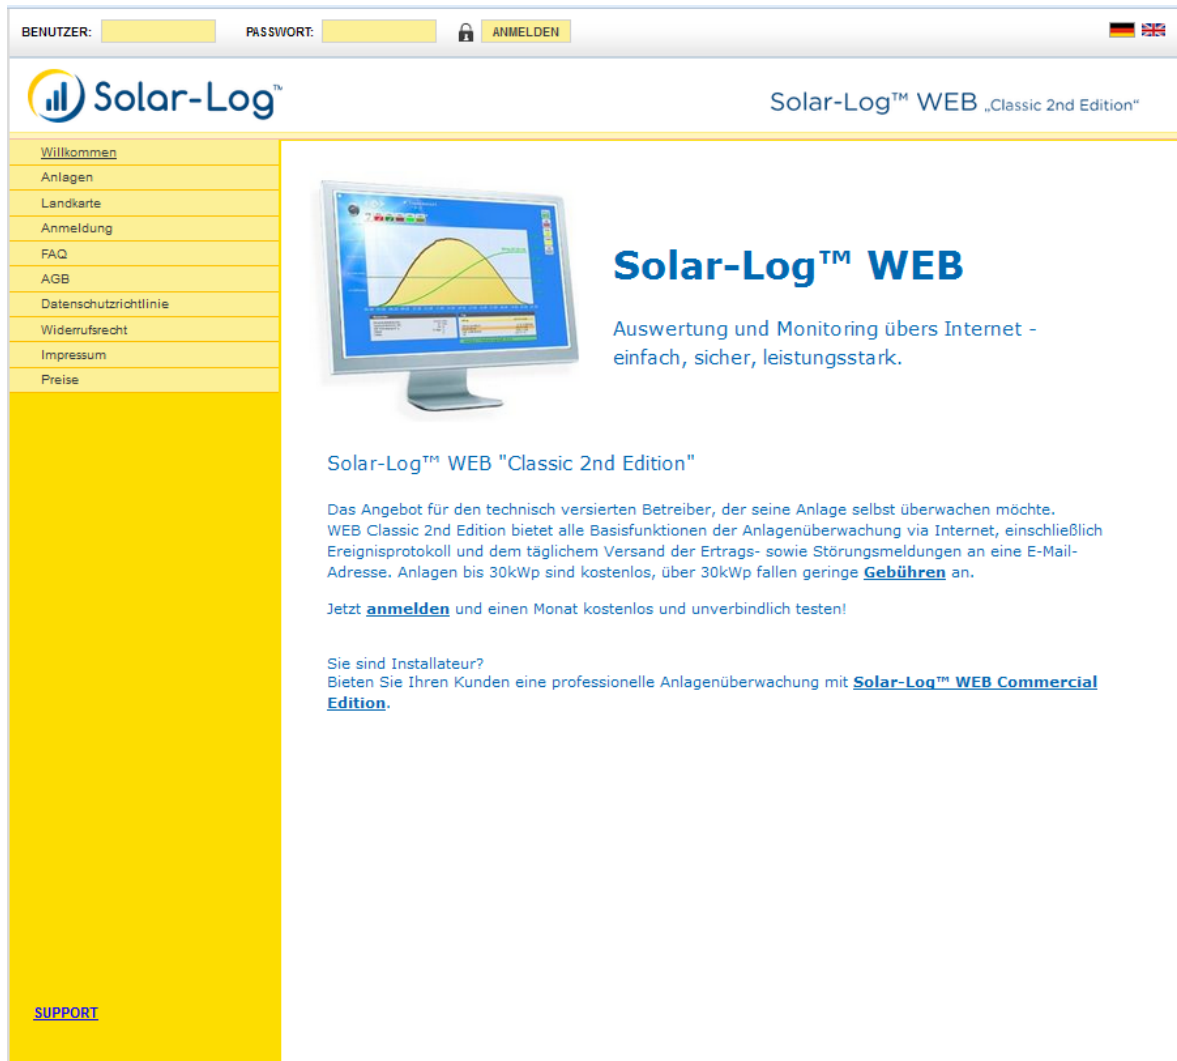


Fig.: C2 registration site

Logging on to the Solar-Log™ WEB

If you did not activate Public Visibility for your plant during the registration, you have to log on to Solar-Log™ WEB first. You can skip logging on if Public Visibility is activated.

Enter your Username and Password in the header bar and then click on LOG ON.

Accessing the Plant overview

To display plants click on Plants from the menu on the left. In the window that appears, you can enter search criteria.

Fig.: C2 Plant search screen

Here you have the following search options:

- Zip code
- Plant size from to
- Production year
- Module type
- Orientation from to
- Roof pitch from to

With **Only results**, the results can also be filtered with the following criteria:

- with image
- with current data
- with irradiation sensor

The number of plants matching the search criteria is displayed in **Results**.

Fig.: C2 Plant search with a filter

The search results overview of the plants includes the number of installed inverters, their power output, orientation and roof pitch. A standard default image is used if there is no publicly viewable image available. You can also find an overview of the current plant yields in the column on the right.

BENUTZER: PASSWORT: ANMELDEN

Solar-Log™ Solar-Log™ WEB „Classic 2nd Edition“

Willkommen
 Anlagen
 Landkarte
 Anmeldung
 FAQ
 AGB
 Datenschutzrichtlinie
 Widerrufsrecht
 Impressum
 Preise

Ihre Auswahl Postleitzahl: 7 mit Einstrahlsensor
 Filter anpassen

Ergebnis 1 bis 6 von insgesamt 57, Seite 1 von 10

DE -
 DC 4.48 kWp
 SMA
 Sanyo
 150° 45°
 2005

zur Anlage

Gestern 2.28 kWh/kWp
 10.23 kWh

Heute 08:30 0 kWh/kWp
 0 kWh

DE -
 DC 5.6 kWp
 SMA
 alfasolar
 180° 30°
 2008

zur Anlage

Gestern

Heute

DE -
 DC 28.8 kWp
 KOSTAL
 ET-Solar
 170° 20°
 2010

zur Anlage

Gestern 1.26 kWh/kWp
 36.25 kWh

Heute

DE -
 DC 29.7 kWp
 SMA
 luxor
 90° 10°
 2010

zur Anlage

Gestern

Heute

DE -
 DC 21.6 kWp
 SMA
 galaxy
 260° 18°
 2010

zur Anlage

Gestern 0.97 kWh/kWp
 20.90 kWh

Heute 08:20 0 kWh/kWp
 0 kWh

DE -
 DC 18 kWp
 FRONIUS
 Sunpower
 180° 39°
 2011

zur Anlage

Gestern 3.45 kWh/kWp
 62.88 kWh

Heute 08:05 0 kWh/kWp
 0 kWh

Ergebnis 1 bis 6 von insgesamt 57, Seite 1 von 10

Fig.: C2 Plant search with results

Click on the [Plant](#) link above the day graph from today.
The graphic overview of the plant is displayed.

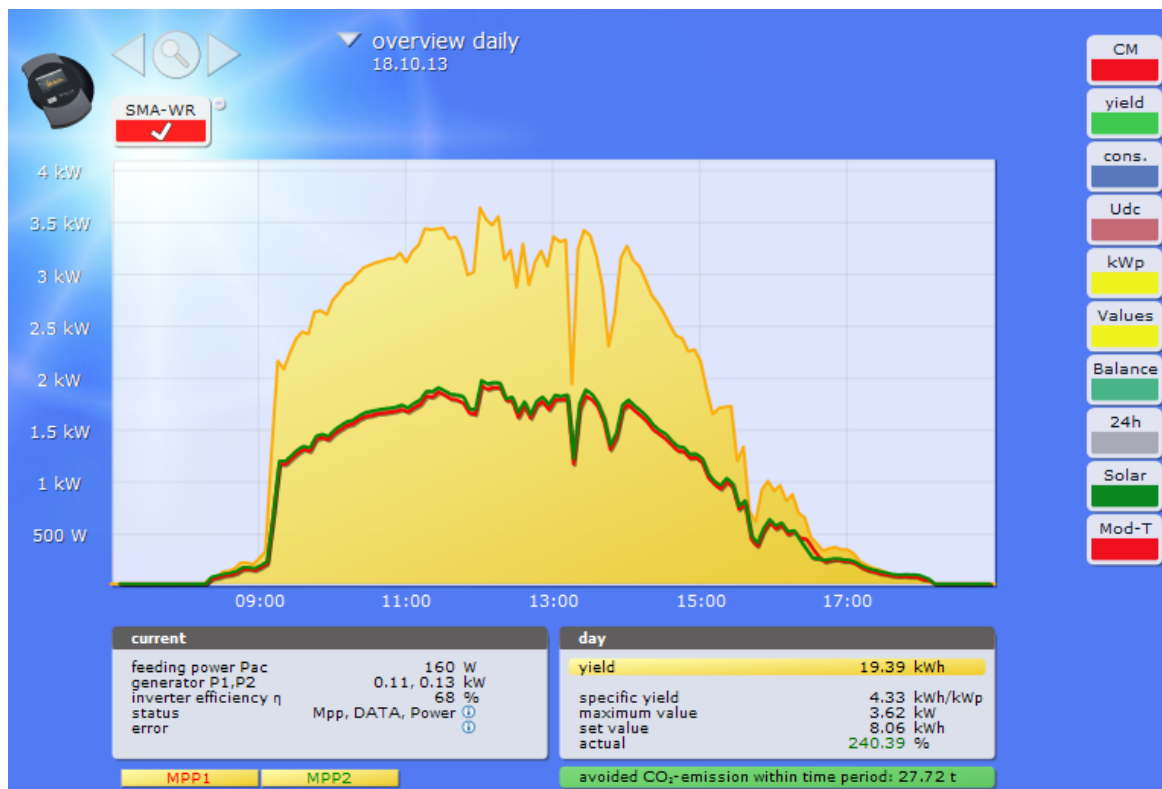


Fig.: C2 plant with a day curve

The graphic overview displays additional options that can be selected for your plant, such as current value, day yield and any fault notifications if present.

Create a bookmark in your browser for faster access to the plant details.

7.3 Accessing Yield data

7.3.1 How to navigate between different overviews

How you navigate the website overviews corresponds to navigating the overview page from your local network.

Switching between overviews

Move your mouse to the inverted triangle on the left next to the displayed period.

An overview of the periods is displayed.

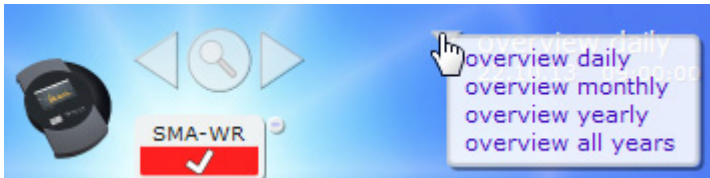


Fig.: C2 Navigating in the view

Click on the desired period.

The period overview is then displayed.

7.3.2 The meaning of the values in the overviews

The values displayed below the graph correspond to the values from the overview page from your local network.

Due to privacy concerns, the plant revenues are not displayed on the Internet site.

7.3.3 Daily Overview

Start your browser and click on the bookmark for your plant.

- You might have to log on.
- The plant details overview is then displayed.

Select Graphic from the menu on the left.

- The plant's daily overview is then displayed.

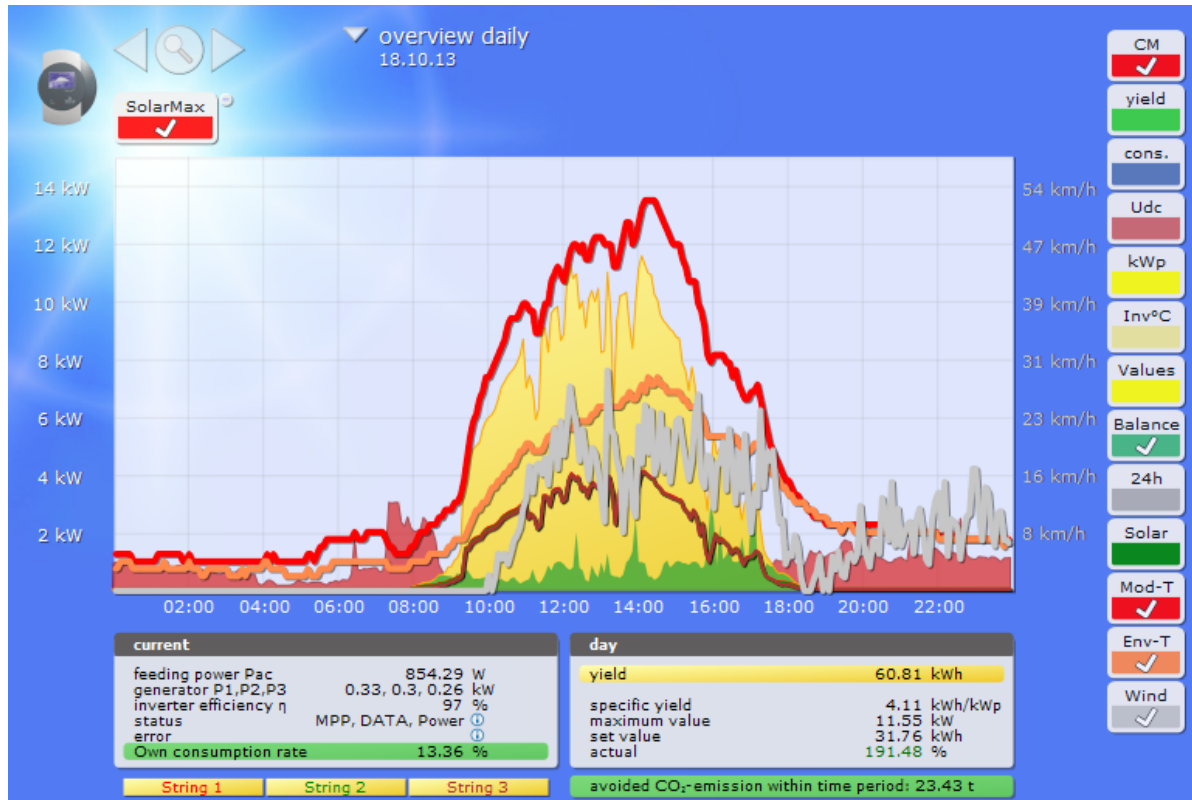


Fig.: Day curve with additional values

The daily yields are displayed as a curve graph. The dark green line indicates the daily target yield.

The different values throughout the day can be displayed by moving the mouse along the curve.

Daily Overview selection buttons

- Yield: Yield curve from which the yield performance can be observed. Additionally, the dark green line indicates the daily target yield total.
- DC voltage: Generator voltage; To view the voltage of individual strings, only one inverter can be selected.
- kWp: Switches the scale from "Output in watt" to "Output in kW/kWp." After that, all of the curves will be comparable in regard to their specific output. Diminishing module performance can also be recognized.
- 24h: This displays the output for every hour of the day in comparison to the consumption for the entire day.

Additional functions with SO power meters

The following displays are additionally available when an SO power meter is connected to the Solar-Log™.

- CM: Displays the power consumption of your building as a graphic in watts.
- Cons.: Displays the power consumption of your building as a curve in kWh.
- Values: Displays various values for your inverter as text.
- Balances: Displays the relation between your power consumption and yield. In the box at bottom on the left, the ration is also displayed as a percentage.

Additional functions with the Sensor Box

Solar: Displays the reference value from an irradiation sensor. The plant's daily output has to lie within the range measured by the sensor.

- M °C: Displays the module temperature. The temperature is measured by the Sensor Box.
- A °C: Displays the ambient temperature. This is measured by the ambient temperature sensor.
- Wind: Displays the wind speed and strength. These values are measured by the wind sensor.

Click on the selection button and then on the magnifying glass icon.

- The selected curve is displayed.

7.3.4 Monthly Overview

Select Monthly Overview from the navigation menu.

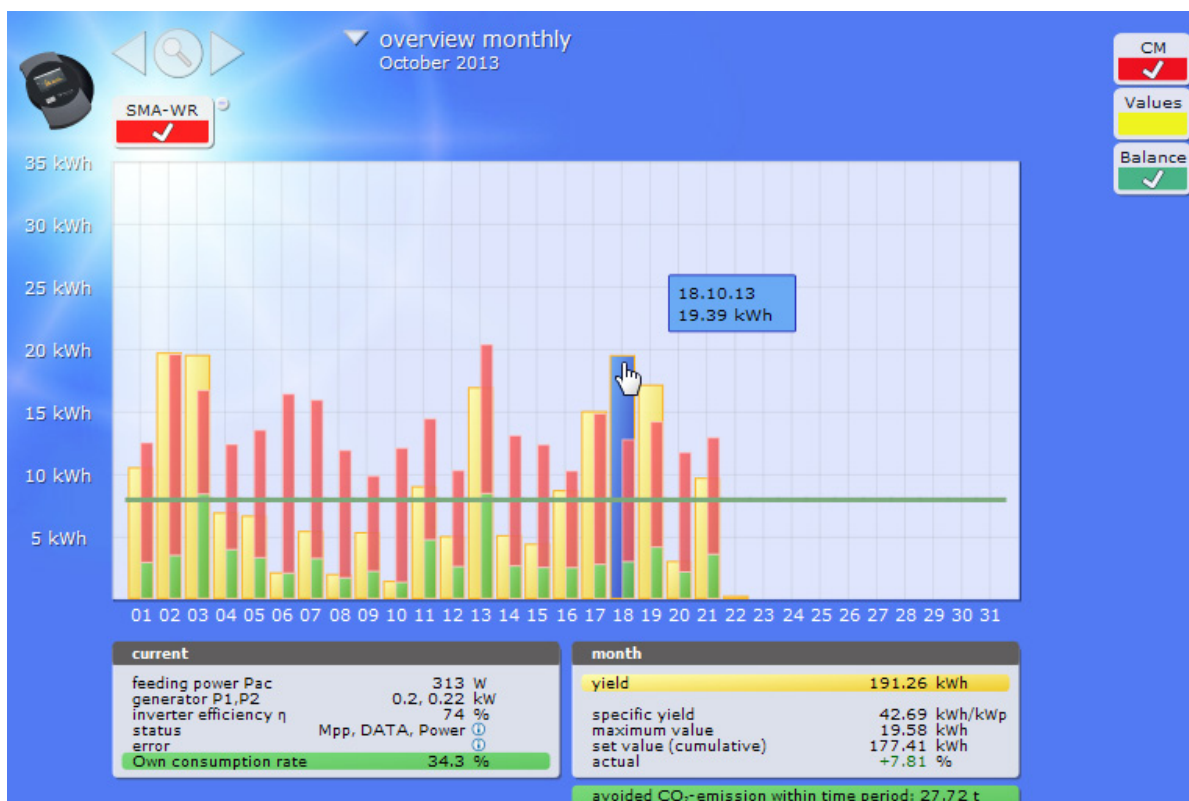


Fig.: Plant C2 - Monthly Overview

The daily yields from a month are displayed as a total in a bar graph. The dark green line indicates the month's target yield.

Move the mouse above one of the day bars.

- The yield from the selected day is displayed.

By clicking on a bar,

- the corresponding curve is displayed.

7.3.5 Annual Overview

Select Annual Overview from the navigation menu.

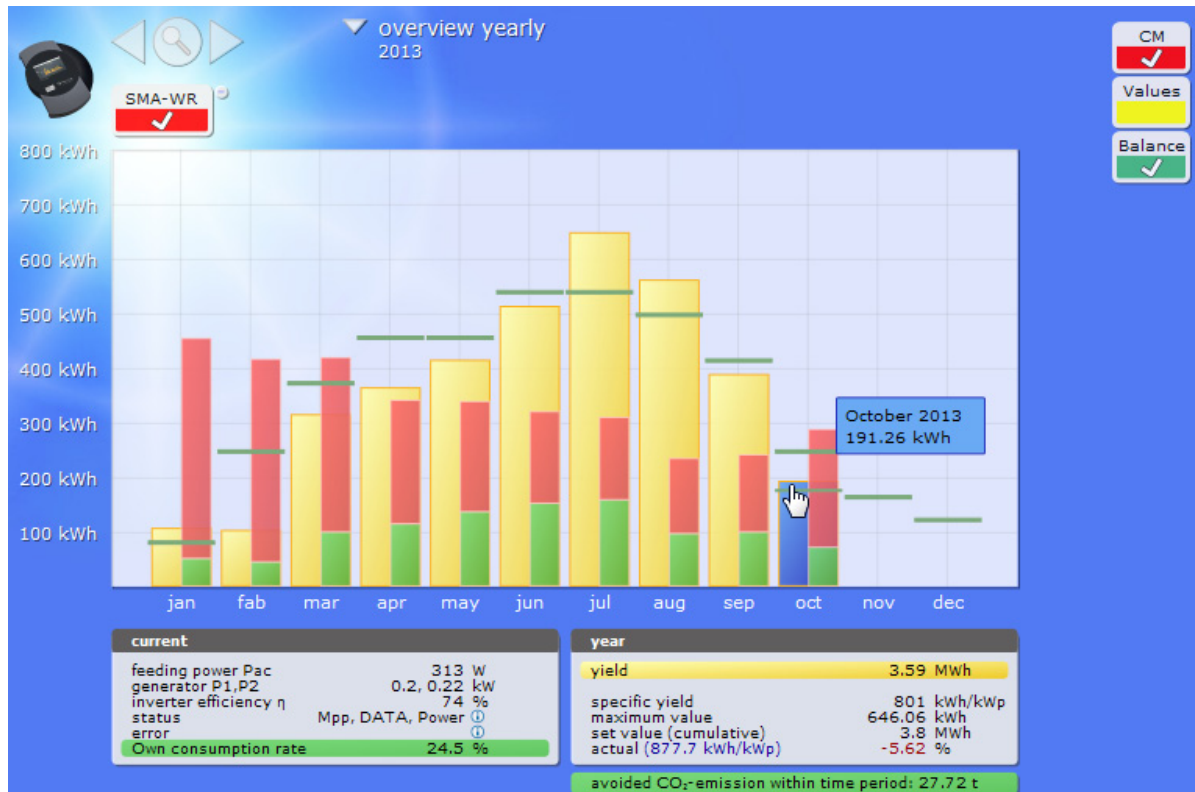


Fig.: Plant C2 - Annual Overview

The monthly yields from a year are displayed as a total in a bar graph. The dark green lines indicate the annual target yield.

The forecast value is calculated from the yields already achieved for the year and from the projected yields from the remaining months of the year.

Move the mouse above one of the month bars.

- The yield from the selected month is displayed.

By clicking on a bar,

- the corresponding monthly overview is displayed.

7.3.6 Total Overview

Select Overview of all Years from the navigation menu.

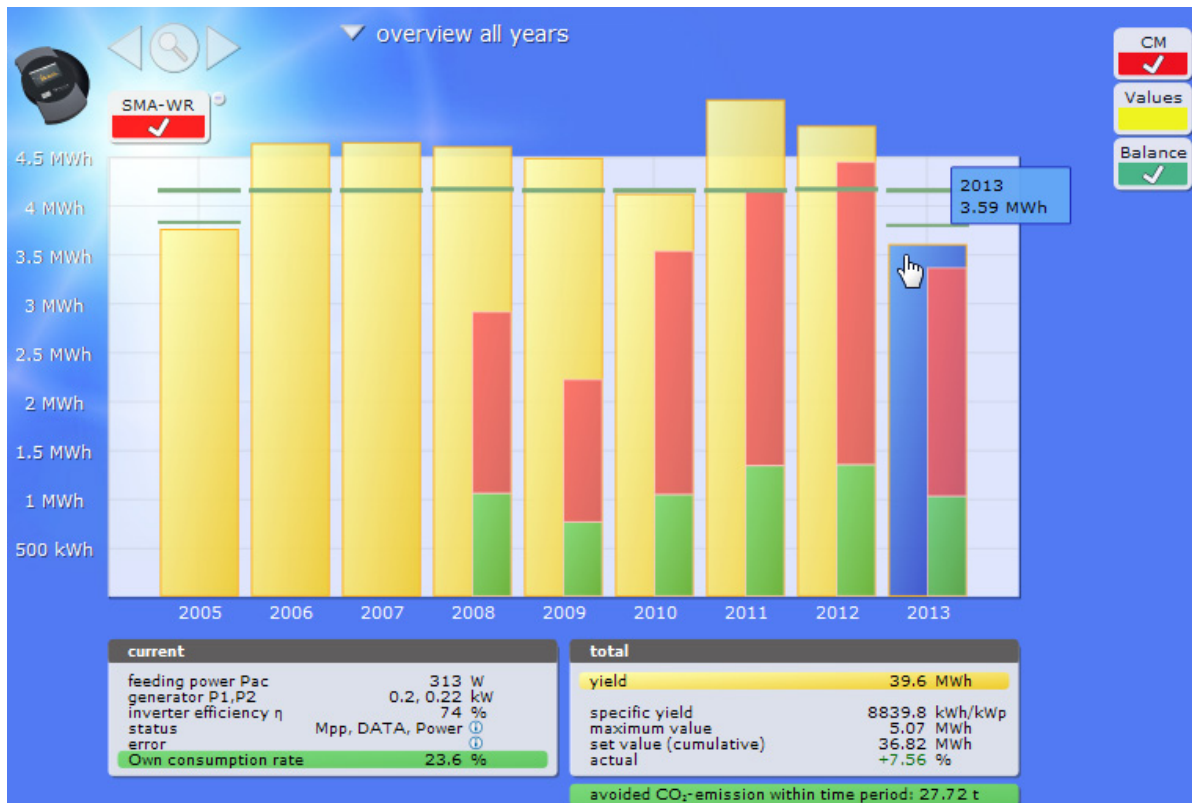


Fig.: Plant C2 - Total Overview

The individual annual yields are displayed as a total in a bar graph. The dark green line indicates the annual target yield. Two green lines are then displayed for the current year:

- The top line indicates the annual target.
- The bottom line indicates the accumulated annual yield compared to the annual target.

Move the mouse above one of the year bars.

- The yield from the selected year is displayed.

By clicking on a bar,

- the corresponding annual overview is displayed.

Click on Linear Overview Years:

- The total linear overview is then displayed.

7.3.7 Accessing and filtering the Event log

Select Events from the menu on the left.

- The complete list of all of the system events is displayed.

All inverters	All days	All status	All errors	Reset selection
---------------	----------	------------	------------	-----------------

12.10.13 - 22.10.13			
Inverter	Events from - to	Status	Error
1	15.10.13 18:04 - 15.10.13 18:24	Offline	-
1	15.10.13 08:04 - 15.10.13 18:04	MPP	-
1	14.10.13 18:25 - 15.10.13 08:04	Offline	-
1	14.10.13 08:10 - 14.10.13 18:25	MPP	-
1	13.10.13 17:27 - 14.10.13 08:10	Offline	-
1	13.10.13 08:52 - 13.10.13 17:27	MPP	-
1	13.10.13 08:50 - 13.10.13 08:52	Offline	-
1	13.10.13 08:45 - 13.10.13 08:50	MPP	-
1	12.10.13 18:33 - 13.10.13 08:45	Offline	-
1	12.10.13 07:48 - 12.10.13 18:33	MPP	-
1	12.10.13 07:33 - 12.10.13 07:48	Offline	-
1	12.10.13 07:33 - 12.10.13 07:33	Startup	-
2	15.10.13 18:04 - 15.10.13 18:24	Offline	-
2	15.10.13 08:04 - 15.10.13 18:04	MPP	-
2	14.10.13 18:23 - 15.10.13 08:04	Offline	-
2	14.10.13 08:10 - 14.10.13 18:22	MPP	-
2	13.10.13 17:27 - 14.10.13 08:10	Offline	-
2	13.10.13 08:52 - 13.10.13 17:27	MPP	-
2	13.10.13 08:50 - 13.10.13 08:52	Offline	-
2	13.10.13 08:45 - 13.10.13 08:50	MPP	-
2	12.10.13 18:30 - 13.10.13 08:45	Offline	-
2	12.10.13 07:47 - 12.10.13 18:30	MPP	-
3	15.10.13 18:03 - 15.10.13 18:24	Offline	-
3	15.10.13 08:03 - 15.10.13 18:03	MPP	-
3	14.10.13 18:26 - 15.10.13 08:03	Offline	-
3	14.10.13 08:10 - 14.10.13 18:26	MPP	-
3	13.10.13 17:30 - 14.10.13 08:09	Offline	-
3	13.10.13 08:50 - 13.10.13 17:30	MPP	-
3	13.10.13 08:49 - 13.10.13 08:50	Offline	-
3	13.10.13 08:44 - 13.10.13 08:48	MPP	-
3	12.10.13 18:30 - 13.10.13 08:43	Offline	-
3	12.10.13 07:47 - 12.10.13 18:30	MPP	-
4	15.10.13 18:07 - 15.10.13 18:24	Offline	-
4	15.10.13 08:02 - 15.10.13 18:07	MPP	-
4	14.10.13 18:24 - 15.10.13 08:02	Offline	-
4	14.10.13 08:09 - 14.10.13 18:24	MPP	-
4	13.10.13 17:31 - 14.10.13 08:09	Offline	-
4	13.10.13 08:46 - 13.10.13 17:31	MPP	-
4	13.10.13 08:44 - 13.10.13 08:46	Offline	-
4	13.10.13 08:39 - 13.10.13 08:44	MPP	-
4	13.10.13 08:37 - 13.10.13 08:39	Offline	-
4	13.10.13 08:32 - 13.10.13 08:37	MPP	-
4	12.10.13 18:32 - 13.10.13 08:32	Offline	-
4	12.10.13 07:47 - 12.10.13 18:32	MPP	-

Fig.: Plant C2 - Notifications

Use the filter function to view a particular event or events from a particular day within the last 35 days.

Inverter4 - Inverter 2	All days	All status	All errors	Reset selection
All inverters				
Inverter1 - Inverter 1				
Inverter2 - Inverter 4				
Inverter3 - Inverter 3				
Inverter4 - Inverter 2				

From - to	Status	Error
15.10.13 08:07 - 15.10.13 18:24	Offline	-
15.10.13 08:02 - 15.10.13 18:07	MPP	-
14.10.13 18:24 - 15.10.13 08:02	Offline	-
14.10.13 08:09 - 14.10.13 18:24	MPP	-
13.10.13 17:31 - 14.10.13 08:09	Offline	-
13.10.13 08:46 - 13.10.13 17:31	MPP	-
13.10.13 08:44 - 13.10.13 08:46	Offline	-

Fig.: Plant C2 - Filtered notifications

- Select the desired inverters from the "All inverters" drop-box.
 - Only the events from the selected inverters are displayed.
- Limit your selection by selecting the desired day from the All Days drop-box.
 - Only the events from the selected day are displayed.
- Limit your selection further by selecting the desired day from the All Days drop-box.
 - The status selection options available are only those that occurred during the selected time period.
- Additionally, you can limit your selection further by selecting the type of fault from the All Faults drop-box.
 - The fault selection options available are only those that occurred during the selected time period.
- Click on Clear Selection to reset all of the filter settings.

8 Using the Solar-Log™ Android App

We offer a Solar-Log™ App for Android tablet PCs and smartphones to allow you to access your plant data at any time and from any location. The App is available for free from the Google Play store.

The App displays current and past yield data in a graphical form.

Note!



The manual and screen shots refer to the Android tablet PC. The operating instructions for smartphones may differ.

The differences are explained in detail in the chapter "Using the Android App with a smartphone."

Requirements

Our Solar-Log™ App is compatible with every Android tablet PC and smartphone starting from OS version 2.3 Gingerbread (4.0 Ice Cream Sandwich is recommended).

The Solar-Log™ App only runs with the server solutions Solar-Log™ Web Classic 2 and the WEB Commercial Edition from Solare Datensysteme GmbH.

8.1 Installing the App

The App is available for free from the Google Play store.

Loading the App

1. Search for "Solar-Log" in the Google Play store.
2. Follow the directions to download and install the App on your smartphone.
3. Start the App on your smartphone.
 - The start screen is displayed.

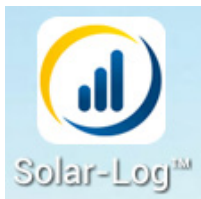


Fig.: The App icon

The App is started via the icon


8.2 Add plants

You can monitor as many plants with the App as are connected with a Solar-Log™.

1. Go to the toolbar to monitor a plant.



Fig.: The App's toolbar

2. Touch the  symbol in the toolbar.

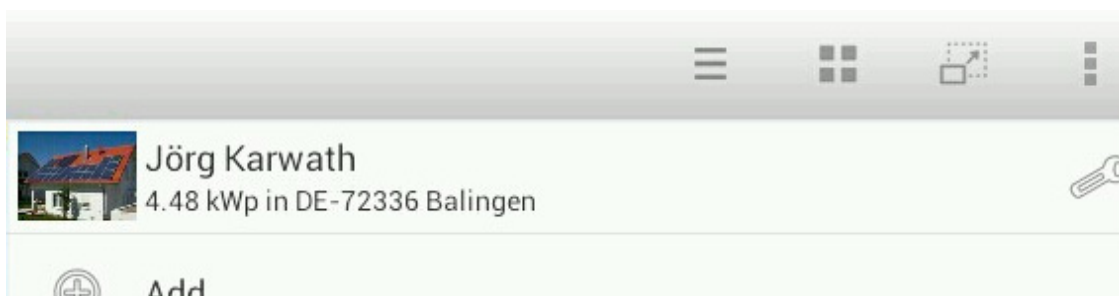


Fig.: Adding a plant to the App

3. Touch the plus symbol.
 - The screen [Solar-Log™ App Access Data](#) is then displayed.

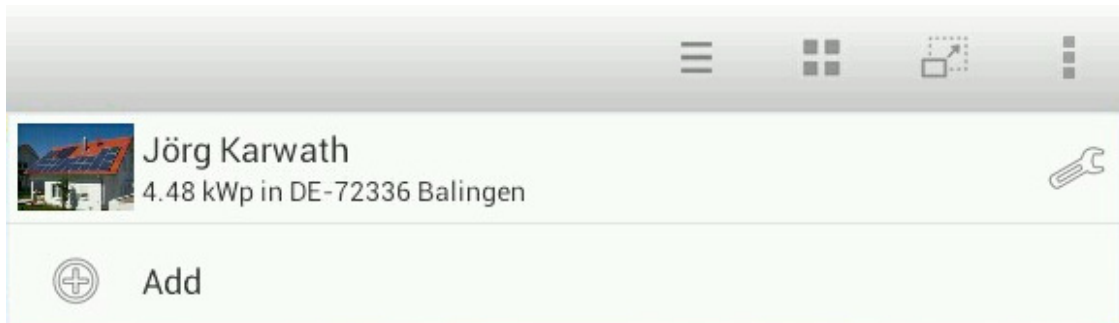


Fig.: Entering the plant's access data

4. Enter the [URL](#), [Serial Number](#) and [Password](#) from the registration email that you received from Solare Datensysteme GmbH.
5. After that tap on the button [Load](#).

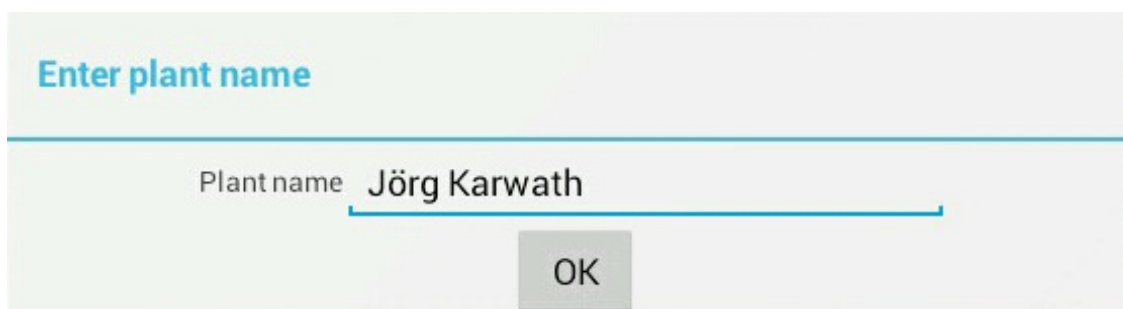


Fig.: Entering the plant name in the App.

6. After that the **Plant Name** appears. Check that everything is correct and then touch **OK**.
7. The plant's current daily values will then be loaded. This can take a moment.

8.3 Plant settings

By selecting add Plants, you can adjust the settings for the view displayed.

1. Tap the  symbol in the toolbar to go to the plant.

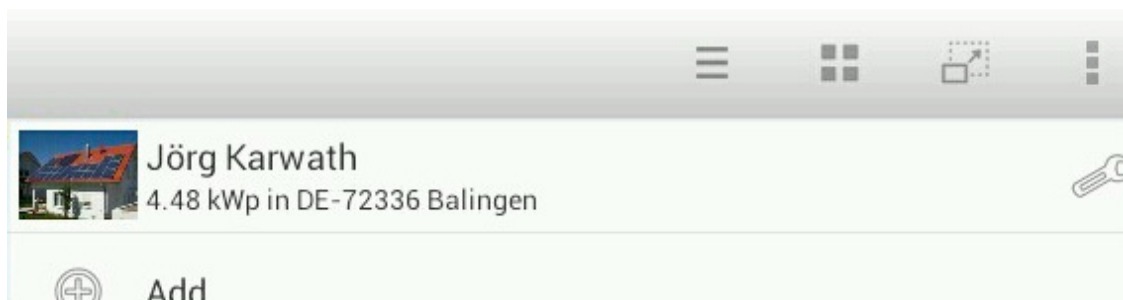



Fig.: Changing the plant display settings.

Tap on the  symbol for the following settings:

- SO meter
- Administration

8.3.1 SO meter

By selecting **SO meter**, you have the option to adjust the settings for the view displayed.

1. Tap on the settings symbol.
2. Tap on **SO meter**.

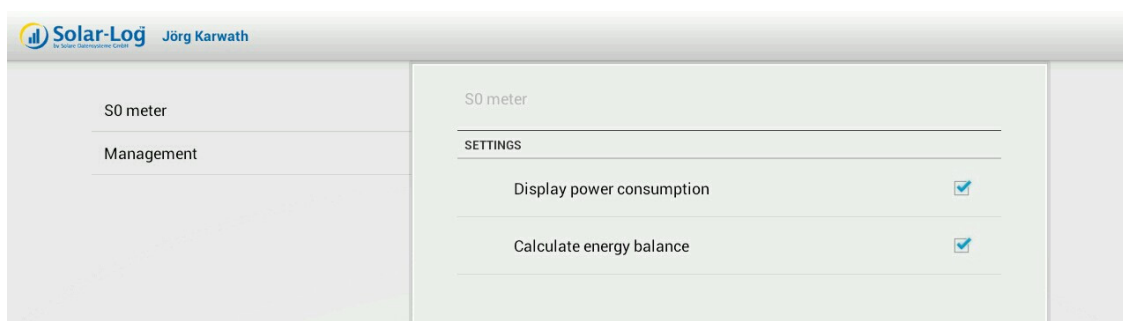


Fig.: SO meter settings

3. The **SO meter**'s view settings have the following options:

- Display power consumption
- Calculate energy balance

8.3.2 Administration

By selecting **Management**, you can update the plant configuration, reset yield data or also delete the plant.

1. Tap on the symbol to go to the settings.
2. Tap on **Management**.

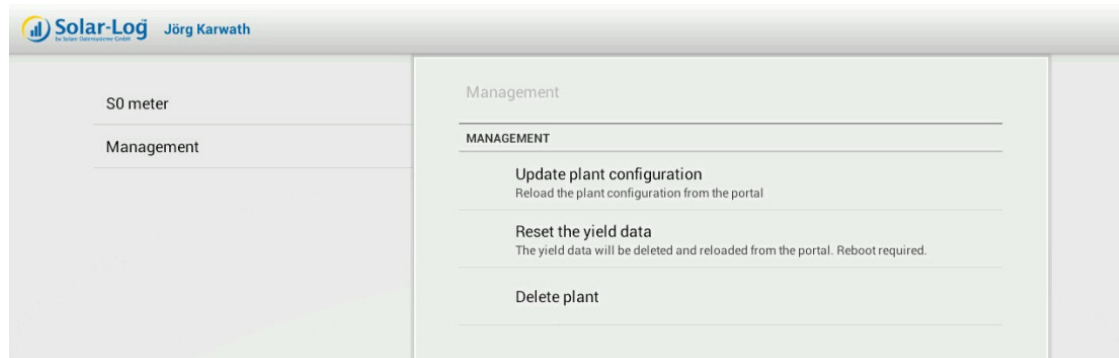


Fig.: Management settings

3. In the Management section, the following options are available:

- **Update plant configuration.** Reload the plant configuration from the portal.
- **Reset the yield data.** The yield data will be deleted and reloaded from the portal. It is necessary to restart the App.
- **Delete plant.** This plant can be completely deleted here.


8.4 The Toolbar

You can select the desired menu from the toolbar at the top right corner.





Fig.: Toolbar.

Use the  symbol to add a plant.

By selecting the  symbol, you can display various yield values.

- Day
- Month
- Year
- Total
- CO2

Tap on the  symbol to start the slide show.

By selecting the  symbol, you can perform various actions:

- Update
- Today
- Settings
- End

8.5 Accessing Yield values

After your plant has been correctly recognized, the yield values are displayed with the current daily values in the overview.

Note!



The data is only updated when your mobile device is connected to the Internet.

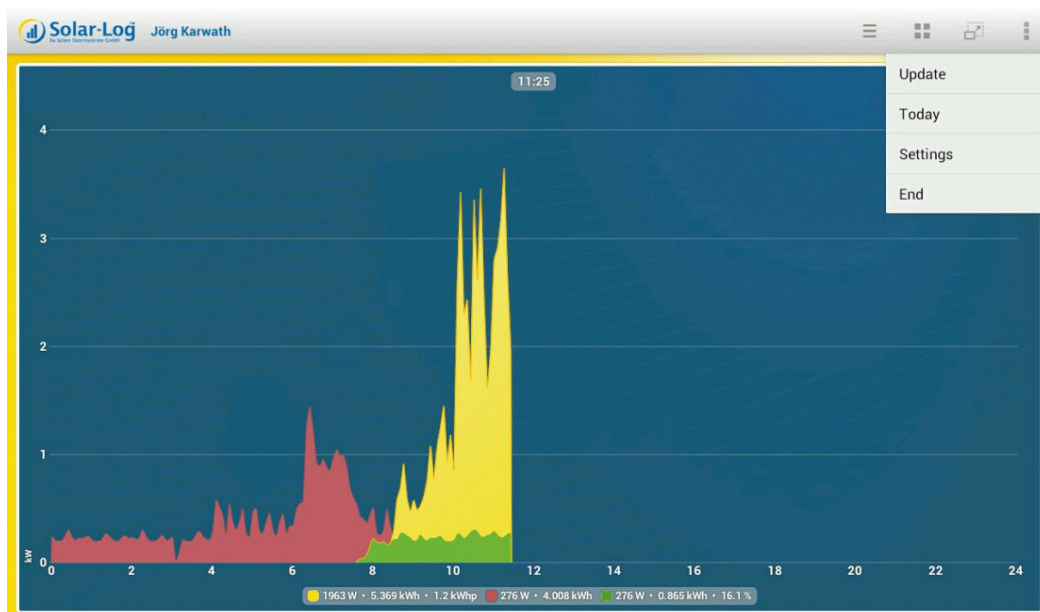




Fig.: Day curve with a menu selection

By selecting the  symbol, you can display various yield values.

- Day
- Month
- Year
- Total
- CO2

8.5.1 Daily Overview

1. Tap on the  symbol in the toolbar at the top right corner of the screen. The navigation screen then appears.
2. Select **Day** to go to the daily overview.

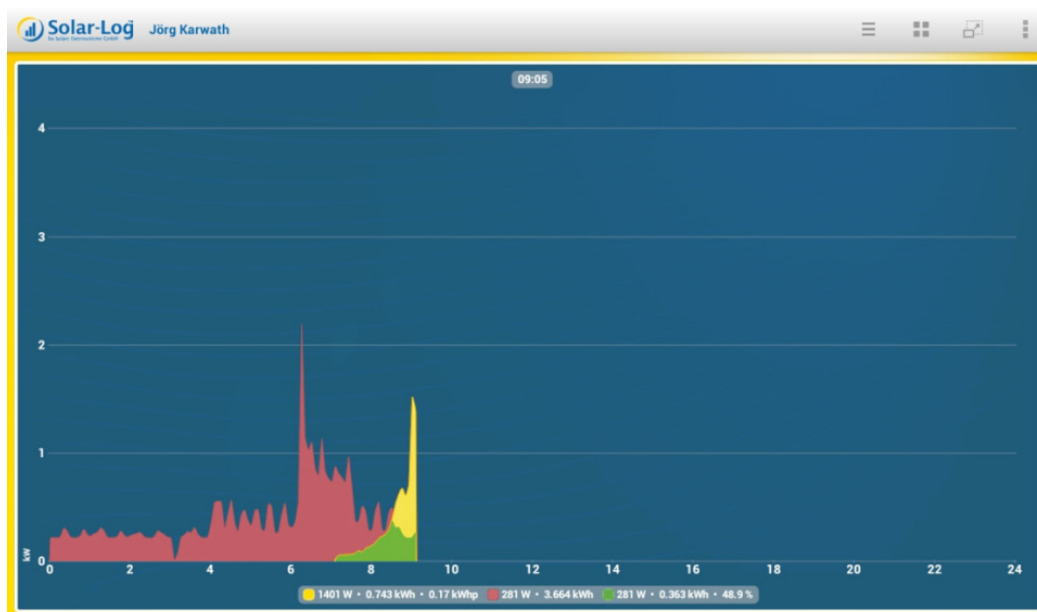



Fig.: Day curve.

3. Swipe to the left to go to the next view or to the right to go back to the previous view.
4. Swipe up or down to change the module views.

8.5.2 Monthly Overview

1. Tap on the  symbol in the toolbar at the top right corner of the screen. The navigation screen then appears.
2. Select **Month** to go the monthly overview.

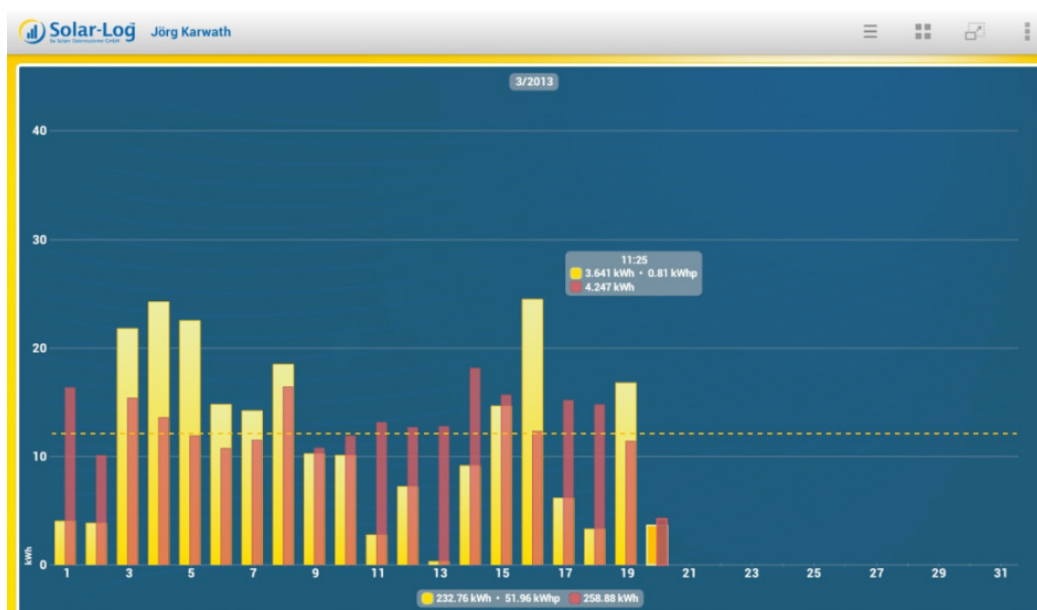



Fig.: Monthly Overview as a bar graph

The daily yields of the selected month are displayed as a bar graph.

3. Swipe to the left to go to the next view or to the right to go back to the previous view.
4. Swipe up or down to change the module views.

8.5.3 Annual Overview

1. Tap on the  symbol in the toolbar at the top right corner of the screen. The navigation screen then appears.
2. Select Year to go to the annual overview.

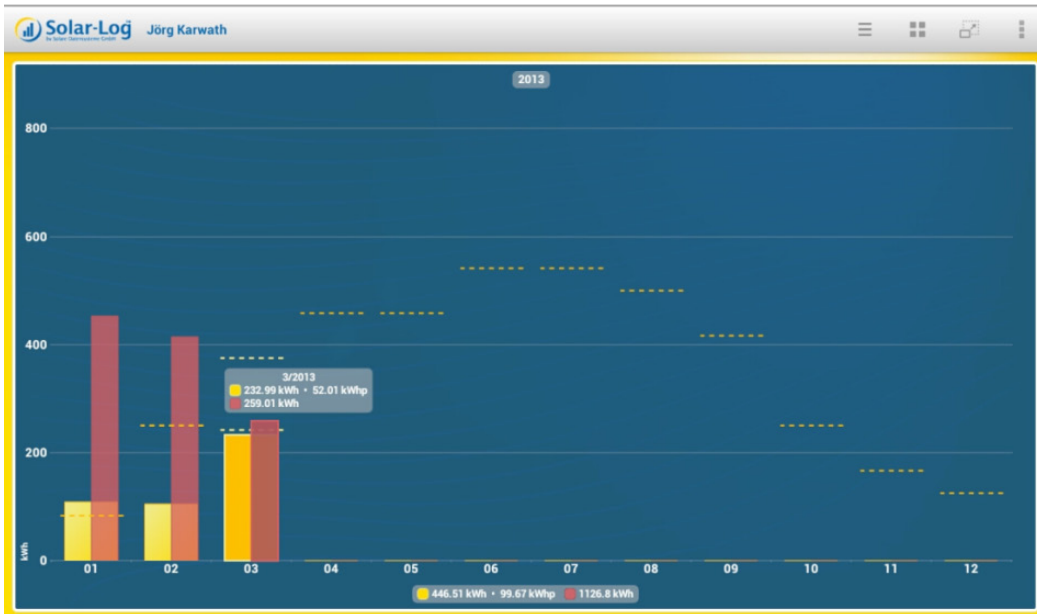


Fig.: Annual Overview as a bar graph

The monthly yields of the selected year are displayed as a bar graph.

3. Swipe to the left to go to the next view or to the right to go back to the previous view.
4. Swipe up or down to change the module views.

8.5.4 Total Overview


1. Tap on the  symbol in the toolbar at the top right corner of the screen. The navigation screen then appears.
2. Select Total to go to the Total Overview.



Fig.: Total Overview as a bar graph

Swipe up or down to change the module views.

8.6 Viewing CO₂ savings

1. Tap on the  symbol in the toolbar at the top right corner of the screen.

The navigation screen then appears.

2. Select **CO₂**.


The total accumulated amount of carbon dioxide emissions that have been prevented by your plant is displayed.



Fig.: Avoided CO₂ emissions

The savings shown is calculated using the quantity of carbon dioxide that would have been created in order to generate the same amount of energy using fossil fuels.

8.7 App settings

Tap on the  symbol in the toolbar at the top right corner of the screen.

The navigation screen then appears.

- Update
- Today
- Settings
- End

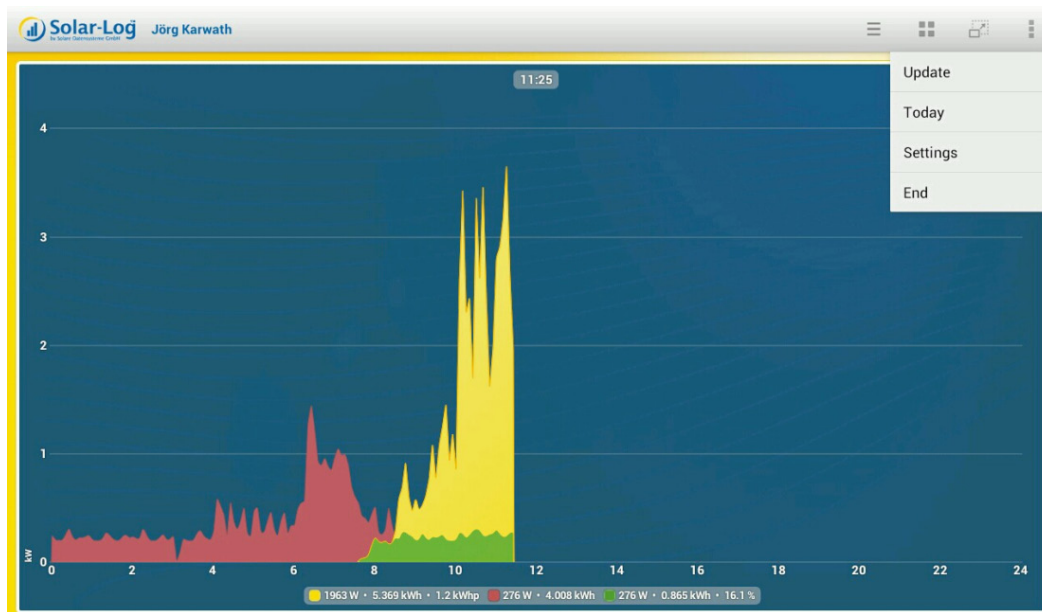


Fig.: Day curve and menu

- Select **Update** to update the plant's data.
- Select **Today** to leave the yield data and to switch to the current daily overview.
- Select **End** to quit the application.

By selecting **Settings** from the menu, the following categories are available:

- General
- Slide show
- Legal Disclaimer

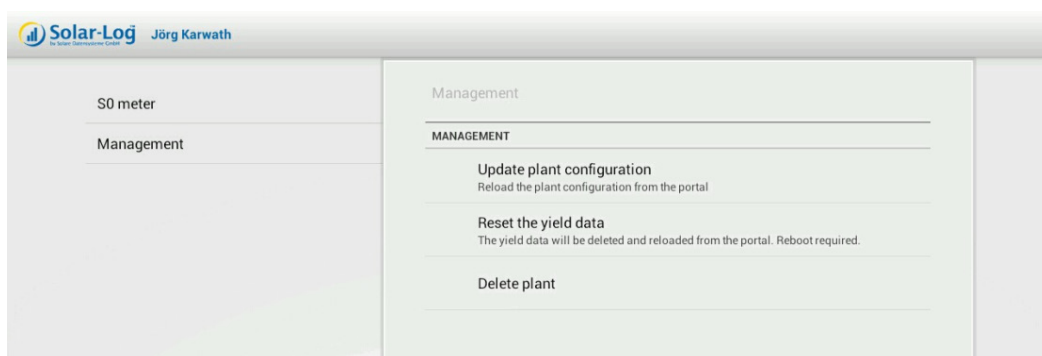


Fig.: General settings.

8.7.1 Periodical data update

1. Under **General**, tap on **Periodical data update**

The following setting options will become visible.

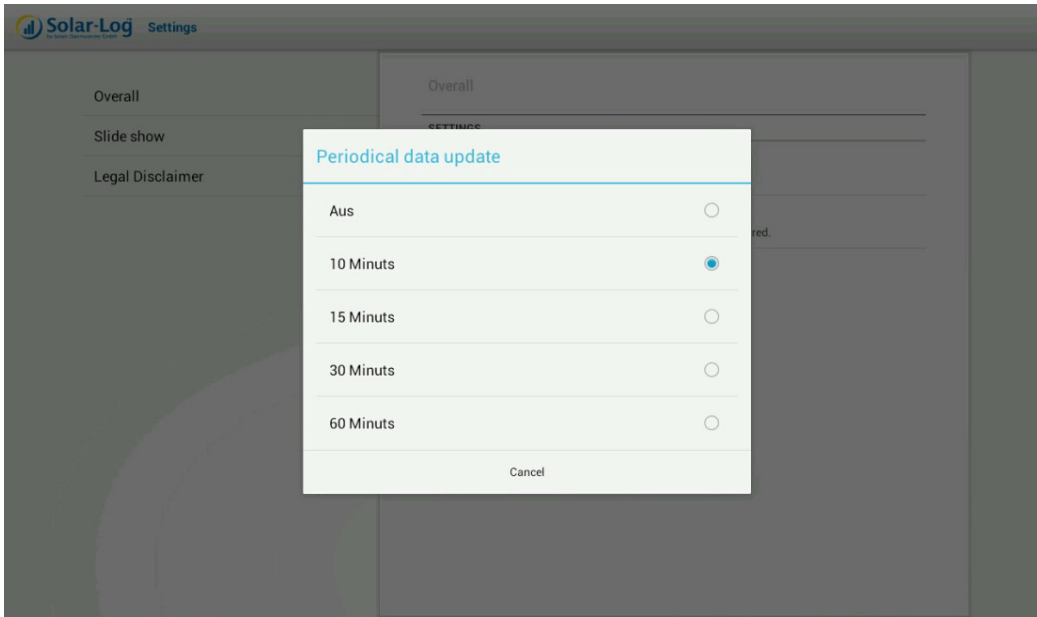


Fig.: Periodical data update settings

2. Tap on the update interval to automatically update the data. The window automatically closes after the selection.

8.7.2 Reset

With the **Reset** function, you can delete all of the plants and cached data.

After tapping on **Reset**, you will receive the following message:

- Click on **OK** to confirm the selection and to delete the plants and cached data. (The application automatically closes and has to be restarted.)
- By clicking on **Cancel**, you return to the main menu.

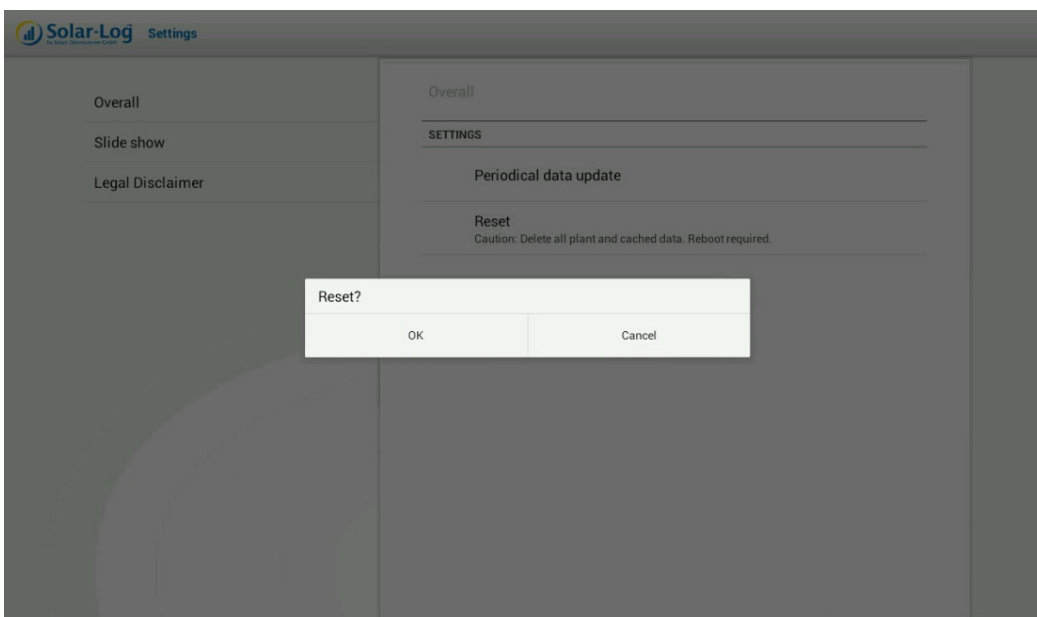


Fig.: Reset function

8.7.3 Slide show

In the **Slide Show** menu, you have the option to adjust the display duration settings and to select a background image.

By selecting **Slide Show**, the following settings are available:

- Display duration. You can determine after how many seconds the image should switch.
- Background image. You can select the background image that is to be displayed when the respective value is activated.

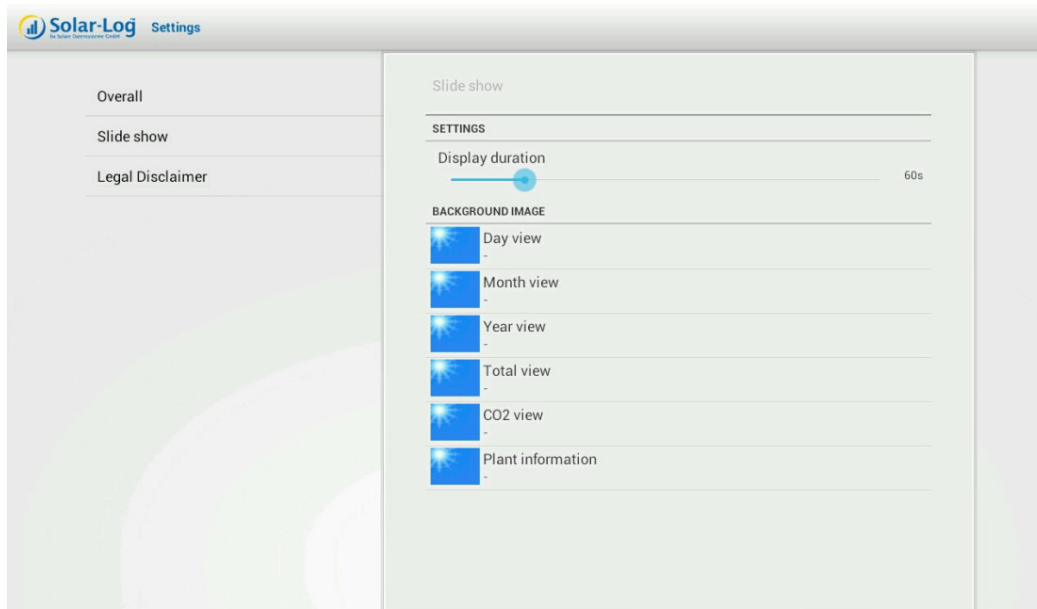


Fig.: Slide Show settings

8.7.4 Legal Disclaimer

By selecting [Legal Disclaimer](#), you can see the App's version and who is legally responsible.

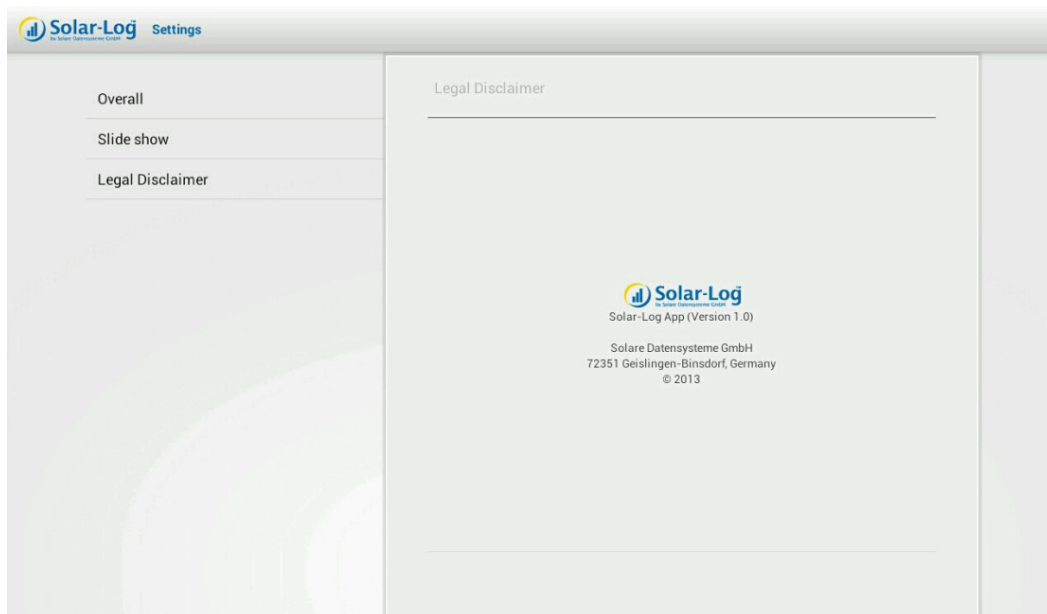


Fig.: Legal Disclaimer

8.8 The Yield Data as a Slide Show

With the slide show function, you can turn your tablet PC or smartphone into an "electronic picture frame." The "picture frame" alternates in displaying the various modules of the Solar-Log™ App.

1. Tap the screen.

- The slide show function appears in the top right edge of the screen by touching the  symbol.

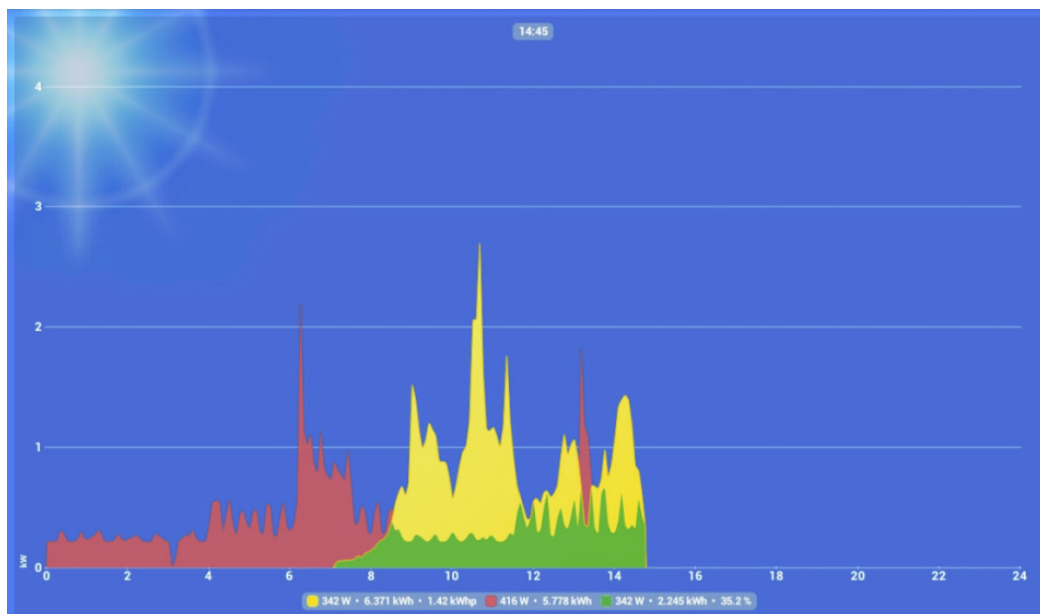


Fig.: Slide Show Format

2. Tap on the  symbol and place your tablet PC or smartphone into a cradle.

- Now you can always see the current values.


8.9 Using the Android App with a Smartphone

When using the Android App with a smartphone, some menus differ from those with a tablet PC. In contrast to the tablet PC, there are minor differences between the vertical and horizontal format. The configuration possibilities for tablet PCs and smartphones, however, are identical.

8.9.1 Smartphone vertical format

Use the



and  symbols from the toolbar in the top right corner of the screen to add plants and adjust settings.

Similarly, use the  symbol to select the yield data.

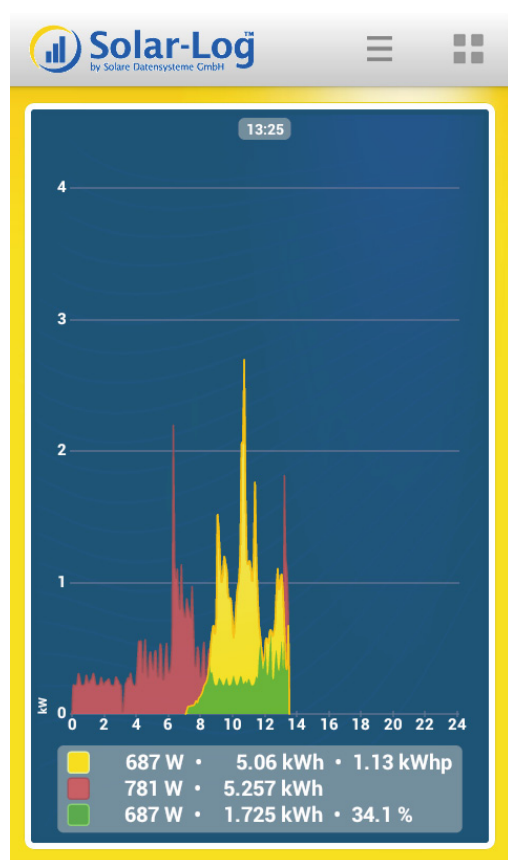


Fig.: View of the Smartphone in the vertical format

When in the vertical format, click on the smartphone's **Menu button** for the **App Settings** and **Slide show**. (See your smartphone's manual.)

After pressing the **Menu button**, the options that are accessible with the **App settings** symbol and **Slide show** symbol on the tablet PC appear.

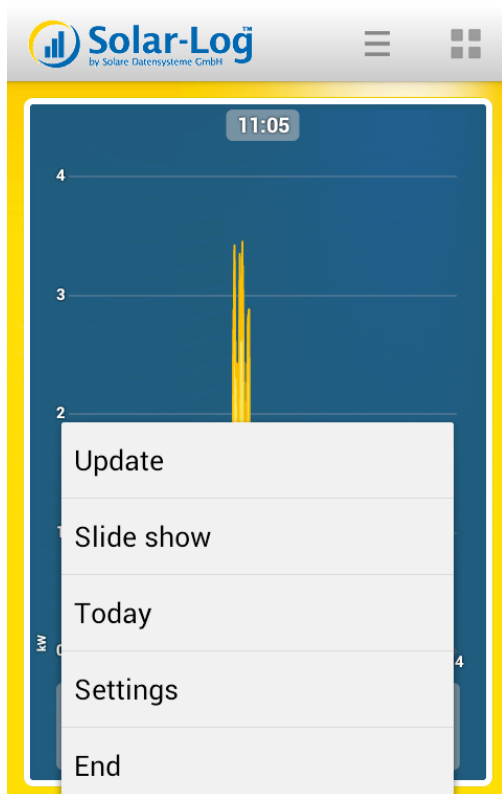


Fig.: Selection via the menu button

Use the [Back button](#) on the smartphone (see the phone's user manual) to return to the program.

8.9.2 Smartphone - horizontal format

The only difference between the horizontal and vertical format is that the Slide Show can also be selected from the toolbar.

The App settings have to be accessed with the smartphone's [Menu button](#).

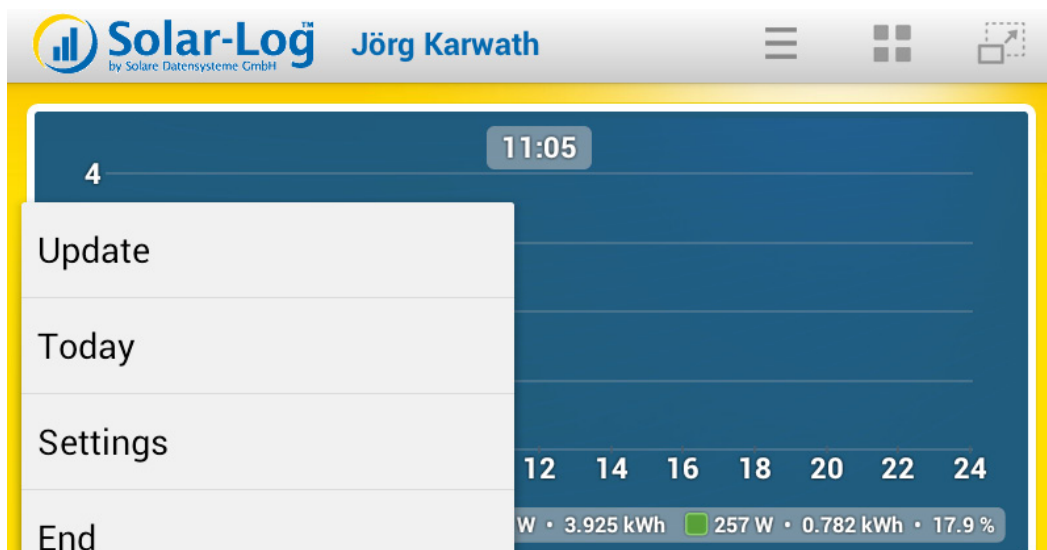


Fig.: Selection via the menu button - horizontal format

Use the [Back button](#) to return to the program.

8.9.3 Solar-Log™ Widget for Smartphones

With an Android smartphone, you can display yield reports from your plant with the Solar-Log™ Widget. (Activating Widgets: see the phone's user manual).

The Widget allows the plant's current daily yields to be displayed directly on your smartphone's home screen.

Changing the view:

The view can be directly changed in the App. All you have to do is tap on the Widget.

Adjusting the size and positioning the Widget:

Press on the Widget 1 to 2 seconds to change the size. A box with four points pops up. Move one of the four points to define the size.

To select the Widget's position, tap and hold the Widget and move it to the desired position.

Note!



For Android versions less than 4.0, 2x1, 2x2 and HD can be selected for the Widget.

Only HD is available for Android versions greater than 4.0.

The HD format for the newer Android versions, however, can be displayed in variable sizes.

9 Using the Solar-Log™ App iPhone V3 for iPhones

We offer a Solar-Log™ App iPhone V3 for iPhones, iPads and iPod Touches to allow you to access your plant data at any time and from any location. The Solar-Log™ App is available for free from the Apple App Store.

The App displays current and past yield data in a graphical form. In addition, there is the possibility to display power consumption. Intuitive finger gestures (swipes) enable you to quickly navigate between different time period views (daily, monthly, yearly and total).

Note!



When starting the App for the first time, there is a brief introduction on how to operate the App.

Requirements

Our Solar-Log™ App is compatible with every iPhone, iPod Touch and iPad starting from iOS version 3.0.

Note!



The Solar-Log™ App only runs with the server solution Solar-Log™ Web Classic 2 and the WEB Commercial Edition from Solare Datensysteme GmbH.

The Solar-Log™ Web Classic 1* and Self-made* editions are not supported.

*It only pertains to new plants; existing plants will continue to be displayed.

9.1 Installing the App

The App is available for free from the Apple App Store.

Loading the App

1. Search for "Solar-Log" in Apple App Store
2. Follow the directions to download and install the App on your mobile iOS device.

Start the App

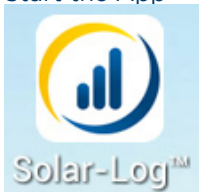


Fig.: The App icon

3. Start the App on your iOS device by tapping on the icon.
 - The start screen is displayed with the saved plant.

9.2 Add plants

You can monitor as many plants with the App as are connected with a Solar-Log™.

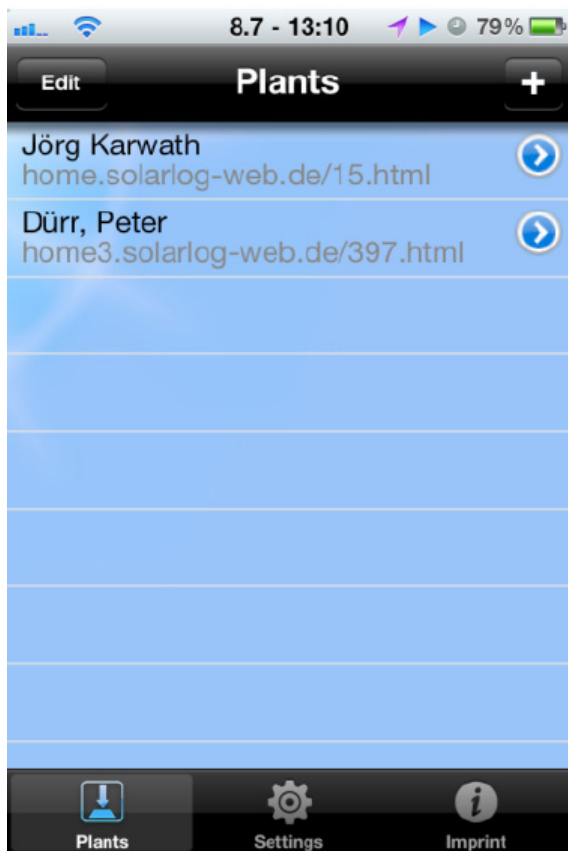


Fig.: Saved plants

1. Touch the + symbol.
 - The screen New Plant is then displayed.

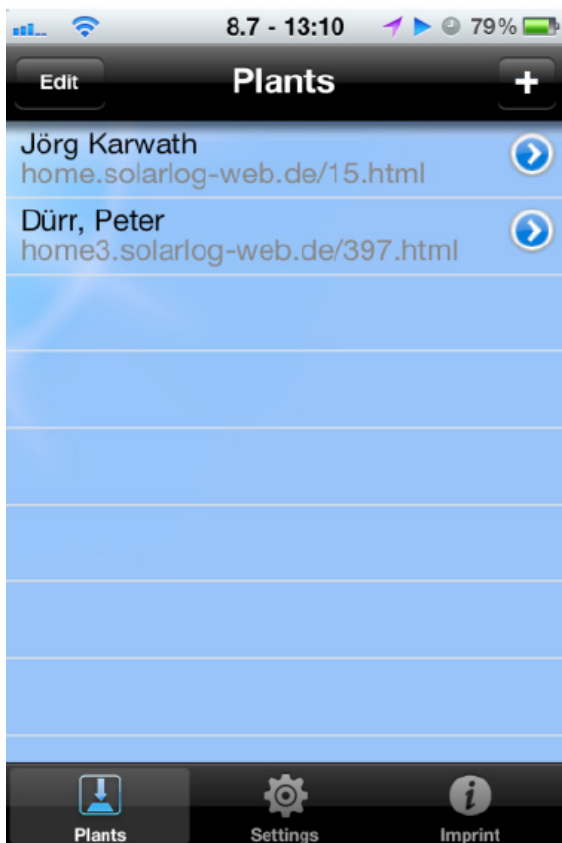


Fig.: Add plants

2. Enter the URL, [Serial Number](#) and [Password](#) from the registration email that you received from Solare Datensysteme GmbH.
3. Save [the added plant](#).
4. The plant now appears with a name and URL in the plant menu.

9.3 Accessing Yield data

After your plant has been correctly recognized, the yield data is displayed in the plant overview.

Note!



The data is only updated when your iOS device is connected to the Internet.

9.3.1 How to navigate between different overviews

1. Start the App

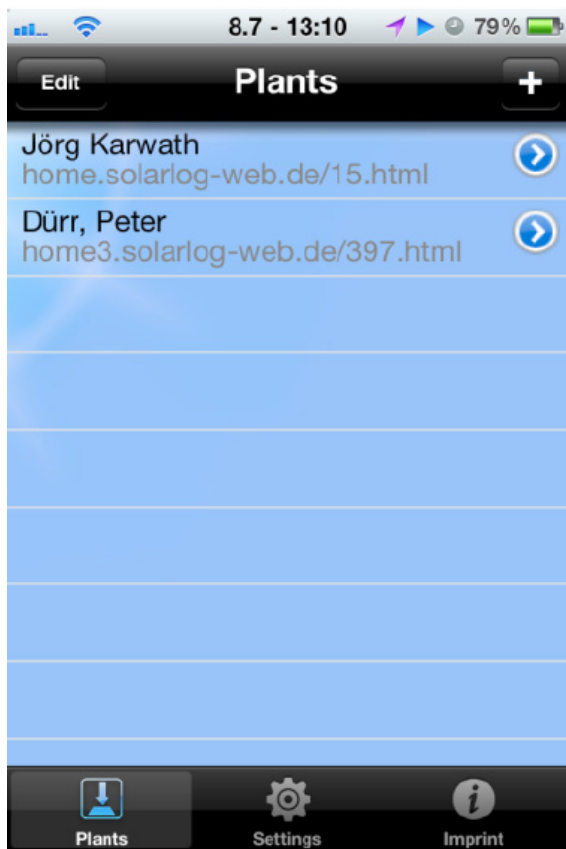


Fig.: Saved plants

2. Touch the blue arrow next to the name of your plant. The current Daily Overview is displayed with the yield values, percentage (based on the forecast) and consumption (only if a meter is connected and activated, see the chapter "Accessing Plant Data").
3. By touching the screen, a menu appears on the top and bottom of the screen from which you can select the desired view.

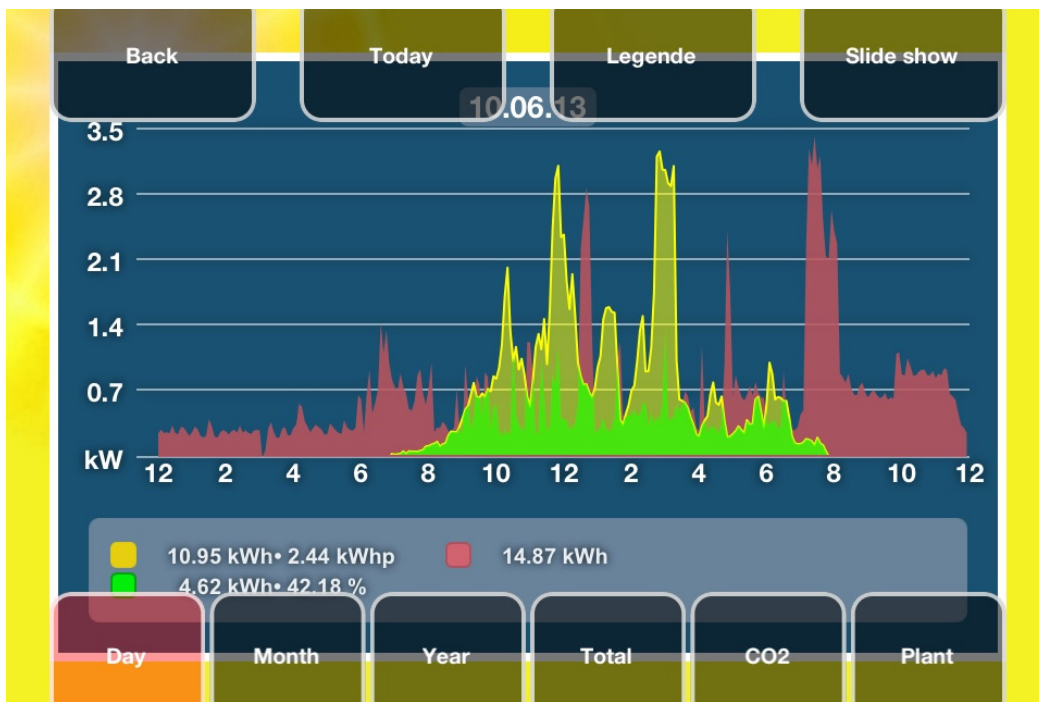


Fig.: Day curve with the top and bottom menu selection

9.4 The top menu bar

The following items can be selected from the top menu bar:

- Back
- Today
- Legend
- Slide show

Touch Back to go back to the plant settings page.

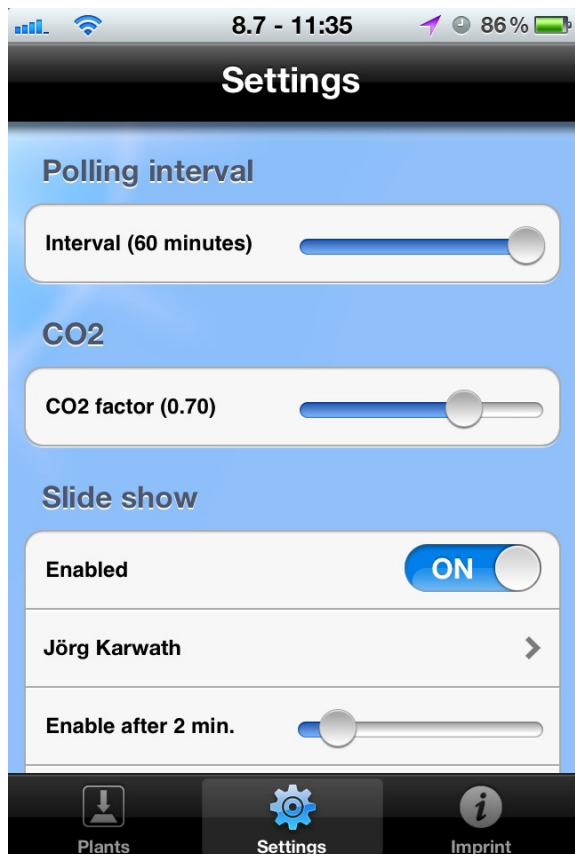


Fig.: Plant settings.

The following settings can be configured:

- Update intervals
 - Plant update intervals are from 5 to 60 minutes.
- CO2
 - The CO2 factor can be adjusted from 0.0 to 1.0 (see the chapter "Viewing CO2 Savings").
- Slide Show (see the chapter "The Yield Data as a Slide Show").
- Sound (see the chapter "The Yield Data as a Slide Show").
- Clear cache.
 - Delete all of the App's cached data. It is necessary to restart the App.

Touch **Today** from any view to go to the current Daily values.

Touch **Legend** to hide and unhide these values.

Touch **Slide Show** to start this with the previously adjusted settings (see the chapter "The Yield Data as a Slide Show")

9.5 The bottom menu bar

The following items can be selected from the bottom menu bar:

- Day
- Month
- Year
- Total
- CO2
- Plant

9.5.1 Daily Overview

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select Day to go to the Daily Values.

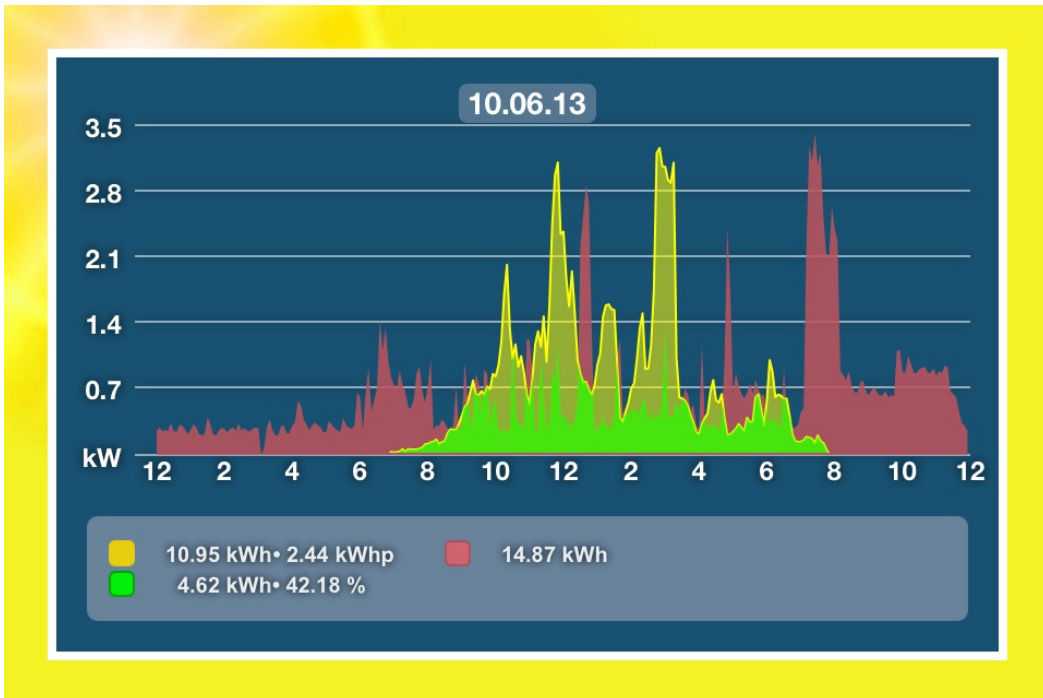


Fig.: Day curve - horizontal format

The daily yields are displayed as a graphical curve.

1. Rotate the iOS device horizontally for a better view.
2. Swipe to the left to go to the next view or to the right to go back to the previous view.
3. Swipe up or down to change the module views.

9.5.2 Monthly Overview

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select Month to go to the monthly values.

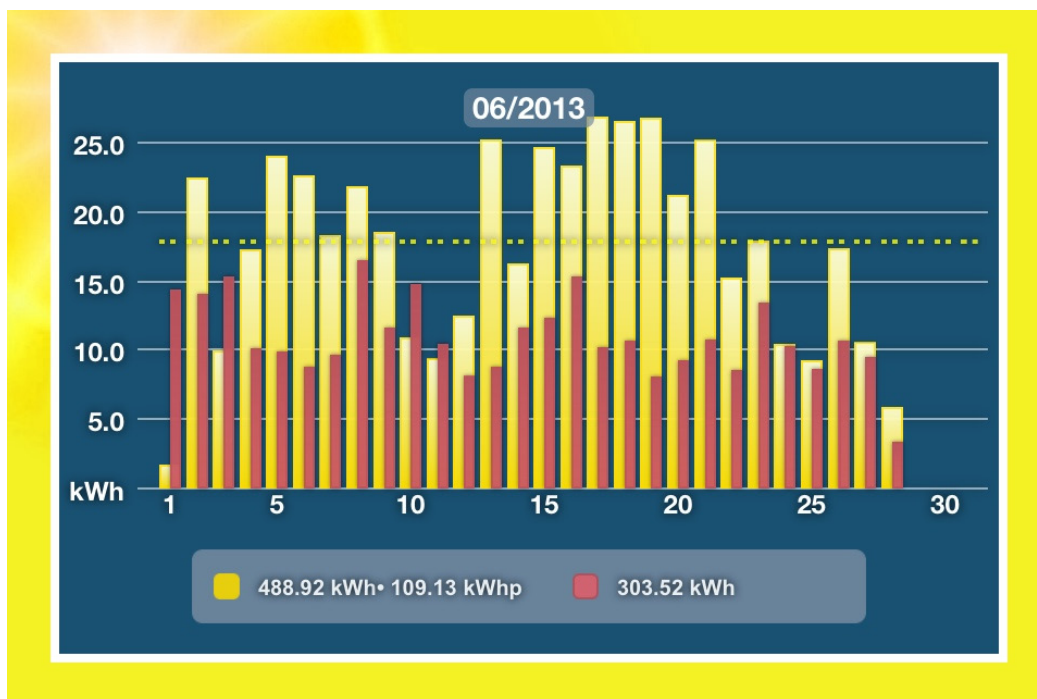


Fig.: Monthly Overview in horizontal format

The daily yields of the selected month are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

3. Swipe to the left to go to the next view or to the right to go back to the previous view.
4. Swipe up or down to change the module views.

9.5.3 Annual Overview

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select Year to go to the yearly values.

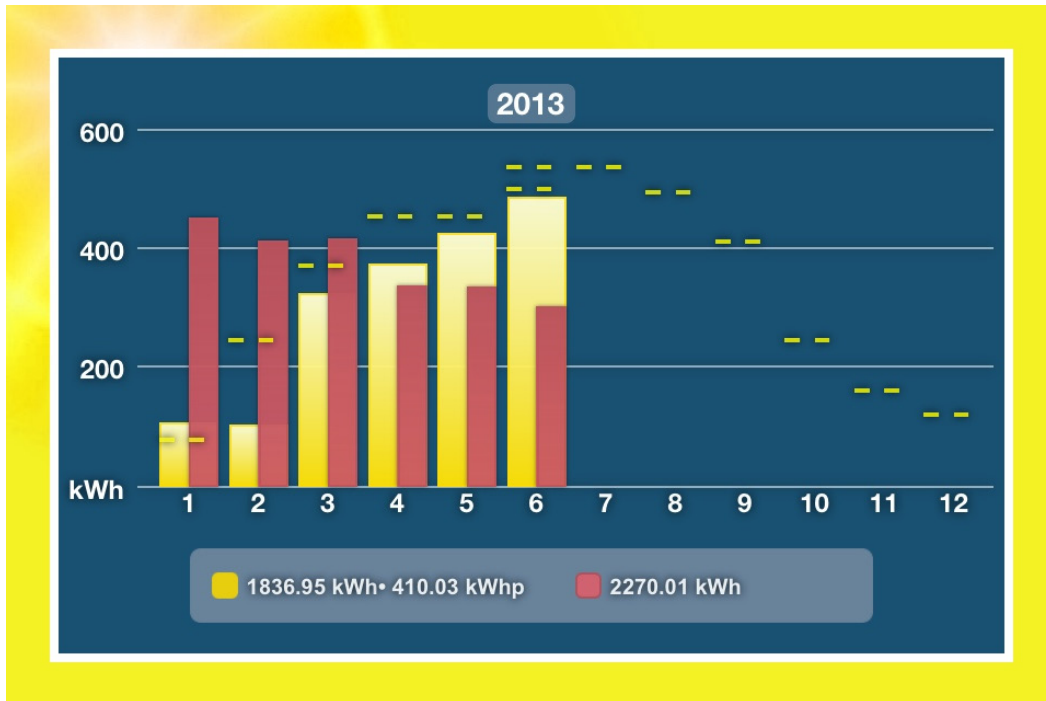


Fig.: Annual Overview in horizontal format

The monthly yields of the selected year are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

3. Swipe to the left to go to the next view or to the right to go back to the previous view.
4. Swipe up or down to change the module views.

9.5.4 Total Overview

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select Total to go to the Total View.

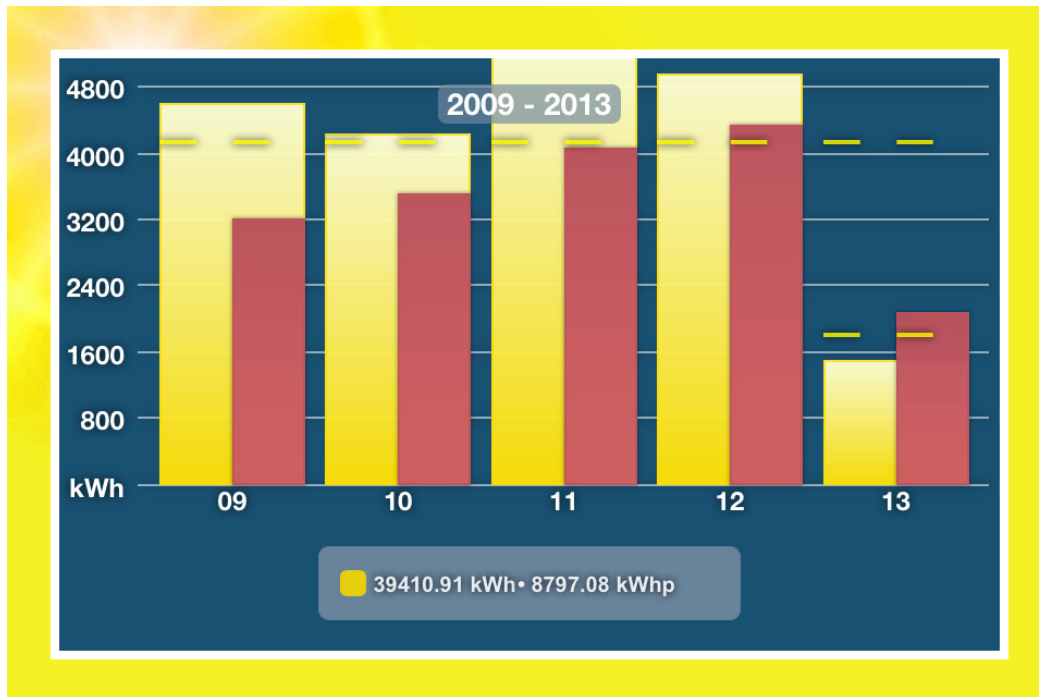


Fig.: Total Overview in horizontal format

The annual yields of the total view are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

3. Swipe up or down to change the module views.

9.6 Viewing CO₂ savings

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select CO₂.
 - The total accumulated amount of carbon dioxide emissions that have been prevented by your plant is displayed.

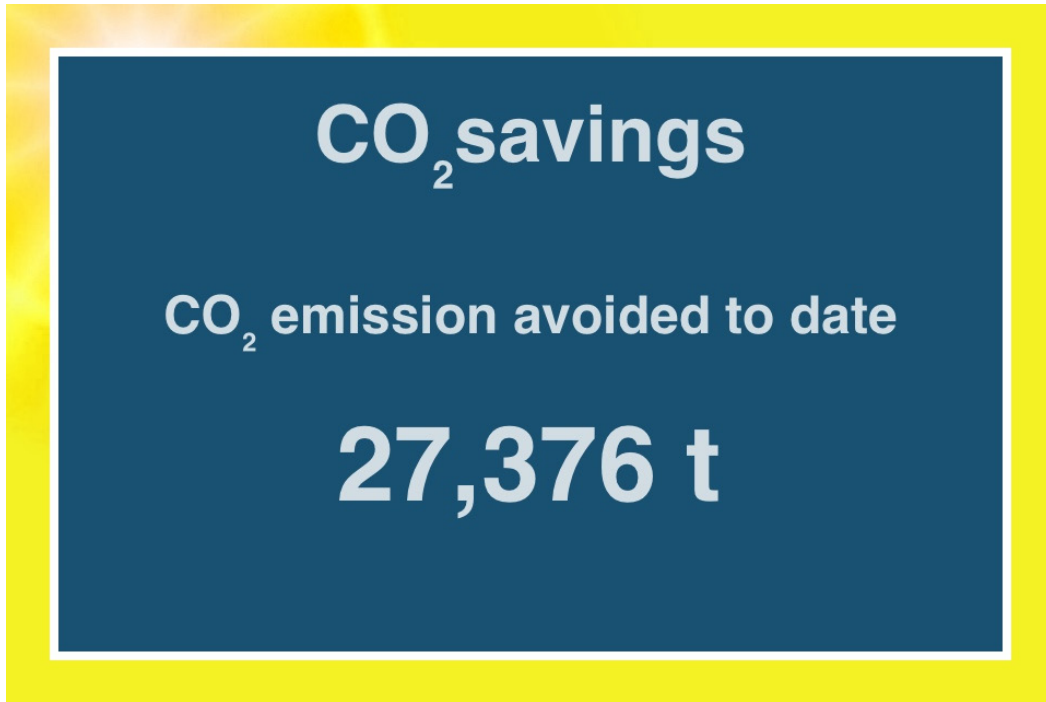


Fig.: CO₂ savings


- The CO₂ savings depends on how much CO₂ emissions are produced to generate 1 kWh of power (g/kWh).

9.7 Viewing Plant data

1. Tap the screen.
 - The bottom menu bar is displayed.
2. Select Plant to go to the page with the plant details.

The page displays the following plant data:

- Plant Name
- Plant Location
- Module
- Inverter Type
- Plant Power Output
- Installation Date
- Orientation of the plant and pitch of the modules
- Number of Inverters
- Consumption
- Inverter Label
- Connected Sensors

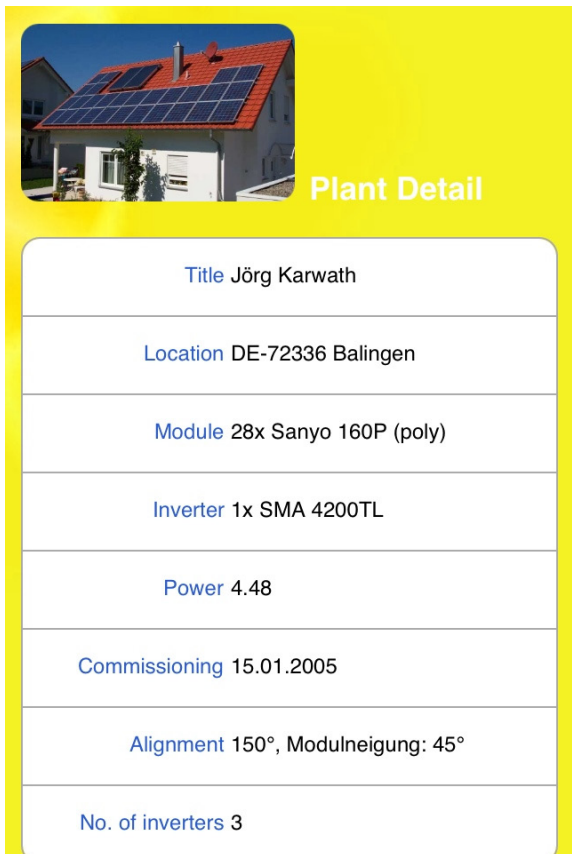

Title	Jörg Karwath
Location	DE-72336 Balingen
Module	28x Sanyo 160P (poly)
Inverter	1x SMA 4200TL
Power	4.48
Commissioning	15.01.2005
Alignment	150°, Modulneigung: 45°
No. of inverters	3

Fig.: Plant data

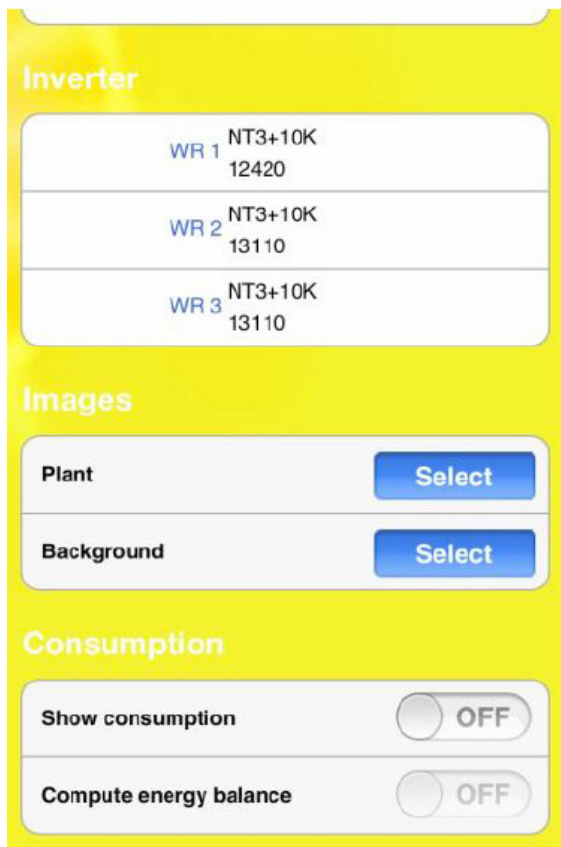


Fig.: Display settings

In addition, you can also adjust the following settings from these menu items:

- Images.
 - Select plant image.
 - Select background image.
- Consumption (can only be activated if a meter is connected).
 - Activate display power consumption (has to be manually activated)
 - Activate calculate energy balance (has to be manually activated)

9.8 The Yield Data as a Slide Show

With the slide show function, you can turn your iOS device into an "electronic picture frame." The "picture frame" alternates in displaying the various modules of the Solar-Log™ App.

The Slide Show function can be configured in the settings menu.

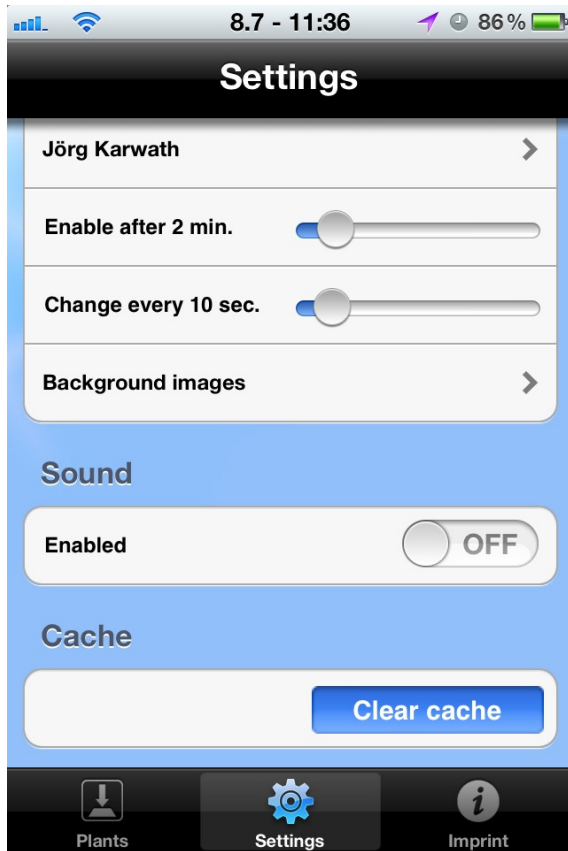


Fig.: Slide Show settings.

In addition to activating the Slide Show function, the following options can be configured:

- Enable after - adjustable from 1 to 10 minutes
 - Time settings for when the Slide Show starts
- Change every - adjustable from 5 to 60 seconds.
 - Interval in which the images switch.
- Background image.
 - Adjust which background image is set for the Slide Show.
- Sound.
 - Here the standard sound can be enabled. By default, this function is deactivated.
- Cache
 - Delete all of the App's cached data. It is then necessary to restart the App.

9.8.1 Start the Slide Show

1. Tap the screen. The menu bar is displayed.

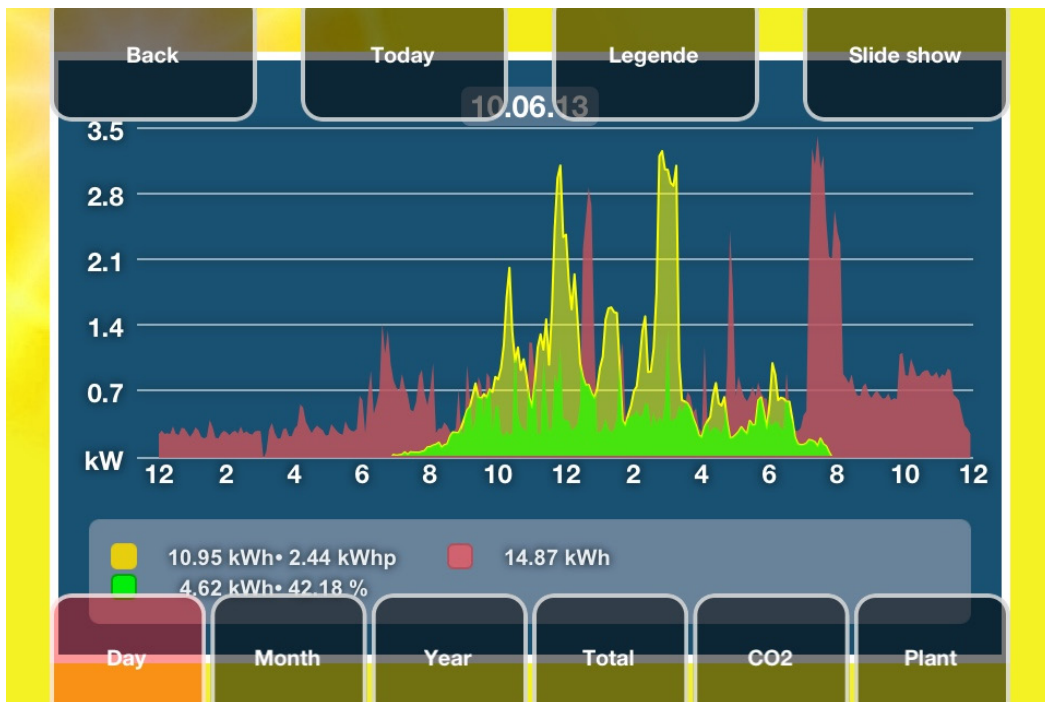


Fig.: Screen with the top and bottom menu selection

2. Select Slide Show from the top menu bar.
 - Now you can always see the current values.

10 Cleaning and care

10.1 Cleaning tips

Important:



Be sure to unplug the device prior to cleaning it!

- Clean the device on the outside only with a dry, lint-free cloth.
- If the device is very dirty, it can be cleaned with a slightly damp cloth and a commercially available household cleaner.

Important:



When cleaning, make sure that no moisture gets into the device!

10.2 Care tips

- Make sure that the device is not exposed to any moisture at the location where it is kept.
- Make sure that the device is not exposed to any heat or strong sunlight at the location where it is stored.
- Please take note of the Technical Data.

11 Notifications on the LCD Status Display (Solar-Log 300, 1200 and 2000)

The Solar-Log 300, 1200 and 2000 have an LCD status display for notifications during installation and operation.

11.1 Meaning of the symbols on the LCD display

The following symbols are shown on the Solar-Log™ LCD display:

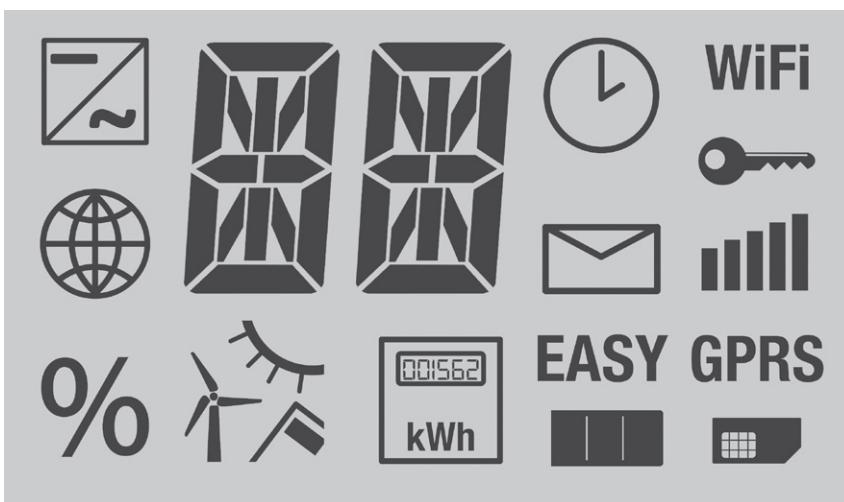

















Fig.: LCD Status Display with all of the symbols

Meaning of the symbols on the LCD display

Symbol	Meaning
	Inverters
	Internet or Network
	Firmware update progress

	Sensors for - Irradiation - Wind - Temperature
	Meter
	Booting progress
	SIM card
	Easy Installation active
	GPRS available
	Notifications from the Solar-Log™
	Signal strength in combination with GPRS, WiFi or Bluetooth
	Encrypted WiFi connection
	Wireless Internet
	Time
	Input box for fault codes

Note!



Please refer to the chapters "Notifications on the LCD display," "Fault messages" and "Faults" in the Installation Manual for further explanation on the LCD Status Code.

12 Faults (Solar-Log 200, 500 and 1000)

12.1 LED status display (Solar-Log 200, 500 and 1000)

On the front of the unit at the bottom left are four LEDs that show the operating status of the unit.

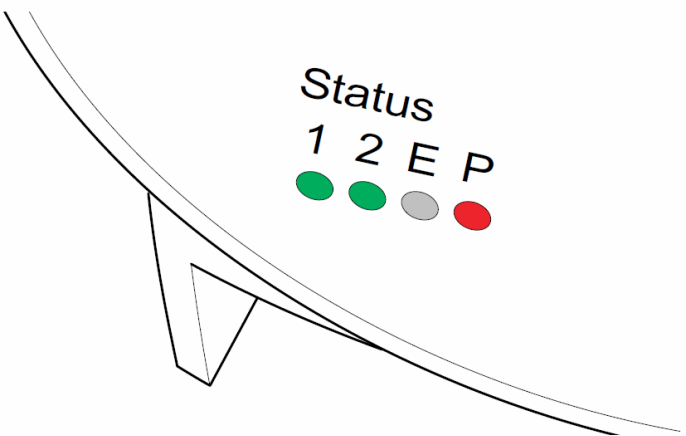


Fig.: Status LEDs

Depending on the operating status, LED 1, LED 2 and LED E may flash quickly or slowly, and may be lit steadily or switched off.

The red LED P indicates the presence of the power supply.

LED E is not lit during normal fault-free operation. If lit or flashing, it indicates that a malfunction has occurred.

Normal operation

LED 1	LED 2	LED E	LED P	Meaning
quickly	quickly	off		Max. 5 min.: Device starts
lit	slow	off		The time is synchronized via the Internet.
off	quickly	off		The configuration is being imported from the inverters.
lit	lit	off		Normal operation, inverter online
lit	off	off		Normal operation, inverter offline

Faults

LED 1	LED 2	LED E	LED P	Meaning and possible remedy
quickly	quickly	off		For 5 min. during initialization: Error! » Pull out power plug and plug in again.
lit	slow	slow		Failed to synchronize the time via the Internet. » Set the time manually. » Check Internet connection.
off	slow	slow		Configuration invalid or not readable: » Check interface. » Check cable. » Restarting.
		lit		Only with Fronius inverters: No data communication! » Wait for inverter feed-in » Check the wiring.
		quickly		Plant has reported a fault.
			slow	If the P LED is blinking, this indicates that the inverter is being controlled (power reduction) by the feed-in power management.

12.2 Troubleshooting faults oneself

You can remedy faults yourself by restarting the device. A restart is necessary if the device no longer reacts to entries in the web browser.

All settings made on the device remain in place, as well as all data collected during run-time.

To restart the device, use the reset button at the top of the device.

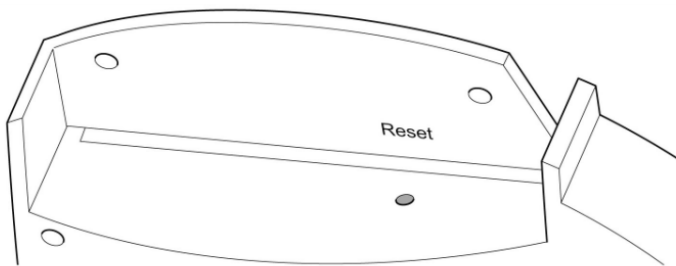


Fig.: Reset button on the top of the device

Opening the cover

If the cover is on, you must first remove the cover from the device. If needed, you can also find the Solar-Log™'s serial number here.

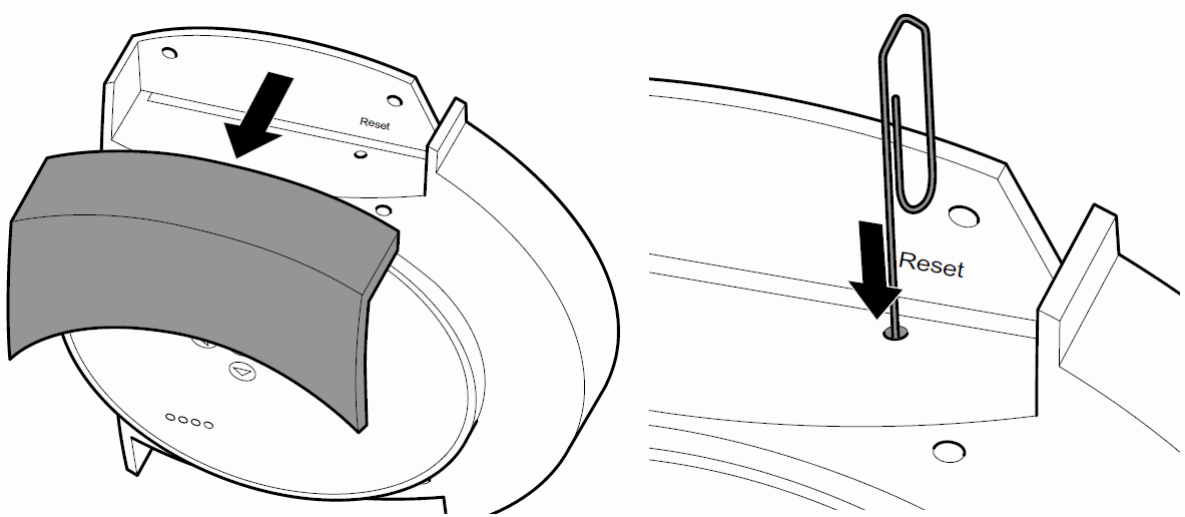


Fig.: Removing the cover from the Solar-Log™

Pull the cover forward to remove.

Restarting

1. Press the reset button for a long period, e.g. with a straightened paper clip
 - LED:1, 2
2. Release the reset button.
 - After about 5 seconds, LED 1 is lit again.
3. Release the reset button.
 - Wait until normal operation has recommenced and then close the cover.

Important:



Do not restart by pulling out the power plug!

12.3 Obtaining information from the Internet

You can also obtain support for operating the device or the settings on our Internet site under the following URL:

<http://www.solar-log.com/en/service-support/technical-support.html>

Here you will also find additional product information and manuals available for download.

12.4 Informing a specialist technician

If problems occur with the Solar-Log™ that are not able to be remedied using the measures described, we recommend that you contact your installer or our customer service.

13 Disposal

Important:



Solar-Log™ contains electronic components that can release highly toxic substances if burned or disposed of along with domestic waste.

Note!



Make sure you dispose of the Solar-Log™ as electronic scrap in the recycling center.

14 Technical Data (Solar-Log 300, 1200 and 2000)

Product comparison		Solar-Log 300	Solar-Log 1200	Solar-Log 2000
Basic functions	PM+ ⁽²⁾	●	●	●
	PM+ / WiFi ⁽²⁾	●	●	-
	PM+ / GPRS ⁽²⁾	●	●	● ⁽⁴⁾
	Bluetooth (BT) ⁽²⁾	●	●	-
	WiFi (Wireless LAN) ⁽²⁾	●	●	-
	Bluetooth (BT) / WiFi ⁽²⁾	●	●	-
	GPRS ⁽²⁾	●	●	●
	Solar-Log™ Meter (CT)	●	●	-
	Central inverter SCB and SMB	-	-	●
	Communication interface	1 x RS485 / RS422 (one INV manufacturer per bus)	1 x RS485 1 x RS485 / RS422 (one INV manufacturer per bus)	1 x RS485, 2x RS485 / RS422, 1 x CAN (one INV manufacturer per bus)
Plant monitoring	Max. plant size	15 kWp / 1 INV. manufacturer	100 kWp / 2 INV. manufacturer	2000 kWp / 3 INV. manufacturer
	Max. cable length	max. 1000 m ¹⁾	max. 1000 m ¹⁾	max. 1000 m ¹⁾
	String monitoring (depending on inverter type)	●	●	●
	Inverter failure, status of fault and power monitoring	●	●	●
	Sensor system connection (irradiation/ temp./ wind)	● ³⁾	● ³⁾	● ³⁾
	E-mail and text message (SMS) Alarm	●	●	●
	Alarm (local)	-	-	●
	Yield forecast and degradation calculation	●	●	●
	Self-produced energy consumption: Digital electricity meter	●	●	●
	Self-produced energy consumption: Managing external appliances	●	●	●

Product comparison		Solar-Log 300	Solar-Log 1200	Solar-Log 2000
Visualization	Integrated web servers	●	●	●
	Graphic visualization – local PC and Internet	●	●	●
	LCD Status Display	●	●	●
	Display on the unit	-	4.3" TFT color display	4.3" TFT color display
	Controls on the unit	-	via touch screen	via touch screen
	Large external display RS485 / S ₀ pulse	●	●	●
Interfaces	Ethernet network	●	●	●
	USB flash drive	●	●	●
	Potential-free contact (relay)	-	●	●
	Alarm contact (anti-theft)	-	-	●
General Data	Power supply voltage / device voltage / current consumption	115 V – 230 V / 12 V / 3 W		
	Ambient temperature	-10 °C to +50 °C		
	Housing / dimensions (W x D x H) in cm	Plastic / 22.5 x 4 x 28.5 / Wall-mounted /		
	Mounting / protection level	IP 20 (indoor use only)		
	Connection to Solar-Log™ WEB "Commercial Edition"	●	●	●
	Multi-lingual (DE, EN, ES, FR, IT, NL, DK)	●	●	●
	Memory, Micro SD card, 2 GB, endless data logging	●	●	●
	Warranty	5 years		

1) Depending on the inverter used and the cable length (details can also vary from one type of device to another).

2) Other important information about Bluetooth and compatibility, Power Management, self-consumption and SCB and SMB inverters can be found on our website www.solar-log.com.

3) Using every inverter on the same bus is not always possible; see the inverter database www.solar-log.com.

4) Solar-Log 2000 PM+ / GPRS interfaces: 1 x RS485, 1 x RS485 / RS422, 1 x CAN (1 INV manufacturer per bus).

Accessories

Solar-Log 300

Solar-Log 1200

Solar-Log
2000

Accessories	Ready-to-install cable kits for most supported inverters		
	Digital electricity meter		
	PowerLine Package		
	RS485 Wireless Package		
	Sensors		
	Surge protection		
Accessories for SMA inverters	Special PiggyBack RS485 (except TL-20 series)		
	Data Module SMA RS485		

Top Features

Solar-Log 300

Solar-Log 1200

Solar-Log
2000

LCD Status Display	Status display for installation and operations		
Easy Installation	Installation is possible without PC and installation expertise.		
	The inverter detection and Internet registration is enabled by default and is started automatically.	Query for additional information, then automatic inverter detection and Internet registration.	-
Network recognition	Automatic search for the DHCP server and assignment of a valid IP address in the local network.		
Local network accessibility	Registration is done with its name. The IP address of the Solar-Log™ no longer needs to be known, unless there are several Solar-Logs on the network. The Solar-Log™ can be accessed directly from a web browser with this address: http://solar-log .		
Additional function	Monitoring, optimization and managing of self-consumption with a fixed regulation of active power including the calculation of self-consumption.		
	Evaluation of Sensor Box Commercial data		
Solar-Log™ Meter	-	-	Monitoring of central inverters
	Monitoring, feed-in management and power meter.		
Support for the Solar-Log™ SCB/SMB	-	-	Individual string monitoring
Solar-Log™ PM+ functionality	Remote controlled active power reduction and reactive power adjustments		Monitoring large plants with the support of the Solar-Log 2000 or Solar-Log 2000 PM+ with active power reduction and reactive power control along with response signals.

Article Number	Solar-Log 300	Solar-Log 1200	Solar-Log 2000
Standard	255574	255591	255592
BT	255577	255585	-
WiFi	255576	255584	-
BT / WiFi	255578	255586	-
PM+	255579	255587	255594
PM+ / WiFi	255580	255588	-
GPRS	255575	255583	255593
PM+ / GPRS	255581	255589	255595
Solar-Log™ Meter (CT)	255582	255590	-

Interfaces		Solar-Log 300	Solar-Log 1200	Solar-Log 2000	
Inverter interface	RS485/RS422 – interface usage	RS485 / RS422 – combined interface usage	RS485 – interface, RS485 / RS422 – combined interface usage	RS485 A – interface, RS485 / RS422 B – / RS485 / RS422 C* - combined interface usage	
		Inverter connection			
		Connection of a Sensor Basic to record environmental data (irradiance and module sensor)	Connection of a Sensor Box Commercial to record environmental data (irradiance, module and ambient temperature, wind sensor)		
	RS485 – interface usage	Connection of meter for self-consumption according to IEC 60870			
		Connection of the display panels produced by Schneider Displaytechnik, Rico or HvG			
		-	-	Connecting the Utility Meter and I/O Box for PM remote control technology	
	RS422 – interface usage	RS 422 Fronius / Sunville connectible without additional interface converters			
	CAN bus	-	-	For the connection of Voltwerk inverters	
	Additional function interfaces	2x S ₀ In / 1x S ₀ out	S ₀ pulse input – for optional recording and calculation of self-produced power consumption.		
			2. input to connect an additional power meter		
		S ₀ pulse output to connect large external displays, impulse factor can be set to any value			
Relay		-	Relay for external switch control, e.g. heat pumps		
Alarm		-	-	Connection for anti-theft protection via contact loop for external alarms via potential-free contact	
USB connection		To access data			
		Import firmware updates at plants			
		PM+ (Power Management)			
PM+ interface (optional)		For connection of a ripple-control receiver to regulate the plant			
		Fulfills the EEG 2012 requirements			
Solar-Log™ Meter (optional)	Current measurements via transformers (extra accessory) up to 2 x 3 phases or 6 single phases				

Interfaces		Solar-Log 300	Solar-Log 1200	Solar-Log 2000
Net-Work	Network	Connection to the Internet (Ethernet, fixed IP address or DHCP)		
	GPRS (optional)	Antenna connection and SIM card slot for Solar-Log™ with integrated GPRS		
		* not with GPRS models		

15 Technical Data (Solar-Log 200, 500 and 1000)

Product comparison	Solar-Log ²⁰⁰	Solar-Log ⁵⁰⁰	Solar-Log ¹⁰⁰⁰
PM+ ⁽²⁾	●	●	●
PM+ / WiFi ⁽²⁾	●	●	●
PM+ / GPRS ⁽²⁾	●	-	●
Bluetooth (BT) ⁽²⁾	●	●	●
WiFi (Wireless Lan) ⁽²⁾	●	●	●
Bluetooth (BT) / WiFi ⁽²⁾	●	●	●
GPRS ⁽²⁾	●	-	●
Central inverter SCB and SMB (2)	●	-	●
Max. number of inverters (depends on the INV manufacturer)	1/1 manufacturer	up to 10/1 manufacturer	up to 10/1 manufacturer
Communication interface	1 x RS485/RS422	1 x RS485 / RS422 (one INV manufacturer per bus)	1 x RS485, 2x RS485 / RS422, 1 x CAN (one INV manufacturer per bus)
recommended max. plant size	15 kWp	50 kWp	1 MWp
max. cable length	max. 1000 m ¹⁾	max. 1000 m ¹⁾	max. 1000 m ¹⁾
String monitoring (depending on type of inverter / tracker level)	●	●	●
Inverter failure, status of fault and power monitoring	●	●	●
Sensor system connection (irradiation/ temp./ wind)	● ³⁾	● ³⁾	●
E-mail and text message (SMS) Alarm	●	●	●
Local alarm (potential-free contact)	-	-	●
Yield forecast and degradation calculation	●	●	●
Self-produced energy consumption: Digital electricity meter	●	●	●
Self-produced energy consumption: Control of ext. consumer Appliance	-	-	●
Integrated web servers	●	●	●

Graphic visualization – local PC and Internet	●	●	●
Graphic visualization – USB flash drive	-	-	●
LED – status display	●	●	●
Display on the unit	-	2-line text display	full-graphic display
Controls on the unit	-	Keypad	via touch screen
Large external display RS485 / S ₀ pulse	-	●	●

Product comparison

Solar-Log²⁰⁰

Solar-Log⁵⁰⁰

Solar-Log¹⁰⁰⁰

Ethernet network	●	●	●
USB flash drive	-	-	●
External Analog / GPRS (GSM) modem (RS232)	-	-	●
Potential-free contact (relay)	-	-	●
Alarm contact (anti-theft)	-	-	●

Interfaces

Power supply voltage/device voltage/current consumption	115 V – 230 V / 12 V / 3 W		
Ambient temperature	-10 °C to +50 °C		
Housing / dimensions (W x D x H) in cm	Plastic / 22.5 x 4 x 28.5 / Wall-mounted /		
Mounting / protection level	IP 20 (indoor use only)		
Connection to Solar-Log™ WEB	●	●	●
Multi-lingual (DE, EN, ES, FR, IT, NL, DK)	●	●	●
Memory, Micro SD card, 2 GB, endless data logging	●	●	●
Warranty	5 years		

General Data

1) Depending on the inverter used and the cable length (details can also vary from one type of device to another).

2) Other important information about Bluetooth and compatibility, Power Management, self-consumption and SCB and SMB inverters can be found on our website www.solar-log.com.

3) Operation with RS422 inverter is not possible on the same bus.

Details	Solar-Log ²⁰⁰	Solar-Log ⁵⁰⁰	Solar-Log ¹⁰⁰⁰
Accessories	Ready-to-install cable kits for most supported inverters		
	Digital electricity meter		
	PowerLine Package		
	RS485 Wireless Package		
	Sensors		
	-	-	Mobile Service Package
	-	-	Modem Package
	Surge protection		
	Special PiggyBack RS485 (except TL-20 series)		
	Data Module SMA RS485		
Accessories for SMA inverters			

Top Features	Solar-Log ²⁰⁰	Solar-Log ⁵⁰⁰	Solar-Log ¹⁰⁰⁰
Compatibility	Compatible with all major inverters on the market; see www.solar-log.com for more details.		
Software	Web interface, no software installation required.		
Easy Installation	Installation is possible without PC and installation expertise.		
	The inverter detection and Internet registration is enabled by default and is started automatically.	Query for additional information, then automatic inverter detection and Internet registration.	
Network recognition	Automatic search for the DHCP server and assignment of a valid IP address on the local network.		
Local network accessibility	Registration is done with its name and the Solar-Log™ can be accessed directly from a web browser by entering http://solar-log in the address bar.		
	The IP address of the Solar-Log™ no longer needs to be known, unless there are several Solar-Logs in the network.		
Additional function	Monitor and optimize the consumption of self-produced power		
	Evaluation of Sensor Box Commercial data		
	-	-	Monitoring of central inverters
	Evaluation of Sensor Box data		
Support for the Solar-Log™ SCB and Solar-Log™ SMB	-	-	Monitoring large plants with the support of the Solar-Log ¹⁰⁰⁰ or Solar-Log ¹⁰⁰⁰ PM+ with active power reduction.
	-	-	Solar-Log ¹⁰⁰⁰ PM+ reactive power control.

16 List of figures

Fig.: Navigation designations.....	9
Fig.: Log in button with selection box.....	10
Fig.: Header bar with the "Hide Arrow"	10
Fig.: Welcome screen.....	12
Fig.: The plant's current values	13
Fig.: Graphic display of the plant's total production.....	14
Fig.: Daily View of the Production Graph with the Auto Scaling activated.....	15
Fig.: Day view of the production table.....	16
Fig.: Month view production graph.....	17
Fig.: Month view of the production table.....	18
Fig.: Year view graph	19
Fig.: Total view graph	20
Fig.: Graph of daily consumption with connected appliances in the sub-consumer view	23
Fig.: Daily Balance Graph with the Auto Scaling activated	25
Fig.: Daily Balance Graph with the Auto Scaling deactivated.....	26
Fig.: Month view balance graph.....	27
Fig.: Year view balance graph	28
Fig.: Total balance graph.....	29
Fig.: Finances overview.....	30
Fig.: Graph of Sensor Box values.....	31
Fig.: System Information.....	32
Fig.: Inverter details graph.....	34
Fig.: Tracker comparison graph.....	35
Fig.: Module field comparison graph.....	36
Fig.: The event log is being loaded.....	37
Fig.: Event log.....	37
Fig.: Notification overview.....	38
Fig.: Message with text field.....	39
Fig.: Feed-In Management - Control State.....	40
Fig.: Feed-In Management - Feed-balance.....	43
Fig.: Components - S0 meter on interface A and B	45
Fig.: Alarm contact.....	46
Fig.: Connection test - Wireless Package	46
Fig.: CSV Export	48
Fig.: Support - General.....	49
Fig.: Entering the recipient's e-mail address.....	50
Fig.: Defining Notification times and setting types.....	51
Fig.: Example of a yield message.....	52
Fig.: Yield overview (all INV) in HTML format	53
Fig.: Yield overview (all INV & groups) in HTML format.....	53
Fig.: Performance Monitoring: Example plant with two inverters	56
Fig.: Configuring module fields.....	57
Fig.: Configuring performance monitoring	57
Fig.: Performance Monitoring with notification and inverter	59
Fig.: Start page of the display	61
Fig.: Dashboard view.....	63
Fig.: Energy Balance view.....	64
Fig.: Forecast view	65
Fig.: Yield history - Day.....	66
Fig.: Environmental performance - Day view	66
Fig.: Menu Settings.....	68
Fig.: USB menu.....	68
Fig.: Inverter Event Log	81
Fig.: Inverter Event Log	81
Fig.: Alarm contact.....	82
Fig.: USB Backup Selection Menu.....	84
Fig.: Starting USB Backup	85
Fig.: Importing USB Configuration.....	85
Fig.: Importing USB Yield Data	86
Fig.: USB Firmware Update	87
Fig.: C2 registration.....	91
Fig.: C2 registration site.....	93
Fig.: C2 Plant search screen.....	94
Fig.: C2 Plant search with a filter.....	94

Fig.: C2 Plant search with results	95
Fig.: C2 plant with a day curve.....	96
Fig.: C2 Navigating in the view.....	97
Fig.: Day curve with additional values	98
Fig.: Plant C2 - Monthly Overview	99
Fig.: Plant C2 - Annual Overview	100
Fig.: Plant C2 - Total Overview	101
Fig.: Plant C2 - Notifications.....	102
Fig.: Plant C2 - Filtered notifications.....	103
Fig.: The App icon.....	104
Fig.: The App's toolbar.....	105
Fig.: Adding a plant to the App.....	105
Fig.: Entering the plant's access data.....	105
Fig.: Entering the plant name in the App.....	106
Fig.: SO meter settings	106
Fig.: Management settings	107
Fig.: Toolbar.....	108
Fig.: Day curve with a menu selection.....	109
Fig.: Day curve.....	110
Fig.: Monthly Overview as a bar graph	110
Fig.: Annual Overview as a bar graph.....	111
Fig.: Total Overview as a bar graph.....	112
Fig.: Avoided CO2 emissions.....	112
Fig.: Day curve and menu.....	113
Fig.: General settings.....	113
Fig.: Periodical data update settings.....	114
Fig.: Reset function	114
Fig.: Slide Show settings.....	115
Fig.: Legal Disclaimer.....	115
Fig.: Slide Show Format.....	116
Fig.: View of the Smartphone in the vertical format	117
Fig.: Selection via the menu button.....	118
Fig.: Selection via the menu button - horizontal format	118
Fig.: The App icon.....	120
Fig.: Saved plants.....	121
Fig.: Add plants.....	122
Fig.: Saved plants.....	123
Fig.: Day curve with the top and bottom menu selection.....	124
Fig.: Plant settings.....	125
Fig.: Day curve - horizontal format.....	126
Fig.: Monthly Overview in horizontal format.....	127
Fig.: Annual Overview in horizontal format.....	128
Fig.: Total Overview in horizontal format	129
Fig.: CO2 savings.....	130
Fig.: Plant data.....	131
Fig.: Display settings	132
Fig.: Slide Show settings.....	133
Fig.: Screen with the top and bottom menu selection.....	134
Fig.: LCD Status Display with all of the symbols.....	136

Solare Datensysteme GmbH
Fuhrmannstraße 9
72351 Geislingen-Binsdorf
Germany
Tel: +49 7428 9418 200
Fax: +49 7428 9418 280
info@solar-log.com
www.solar-log.com
www.solarlog-WEB.com

The copyright of these instructions remains with the manufacturer. No part of these instructions may be reproduced in any form or processed, duplicated or distributed using electronic systems without the written consent of Solare Datensysteme GmbH. Subject to change without notice!

Non-compliance resulting in contradiction of the above-mentioned specifications shall result in obligation to provide compensation for damages. All brands and trademarks contained in this manual are the sole property of the respective manufacturer, which we respect and recognize herewith.